



HP Elitebook 820 G2 Battery Replacement

This guide will show you how to replace the battery of the HP Elitebook 820 G2.

Written By: Wade



INTRODUCTION

Battery life of electronic devices deteriorate over time. This guide will show you how to replace the battery of the HP Elitebook 820 G2 Battery

Step 1 — Back Panel



- Slide the lever firmly to the left on the back panel.
- Once the back panel is unlocked, there should be red showing to the right of the lever.

Step 2



- Slide the back panel towards you.
- Lift the back panel to remove it.

Step 3 — Battery



- Unlock tabs on battery.

Step 4



- Lift tab and remove battery.

To reassemble your device, follow these instructions in reverse order.