




HP Elitebook 8570w Optical Drive Replacement

A guide to removing and replacing the optical drive in an HP Elitebook 8570w.

Written By: MJ Routh

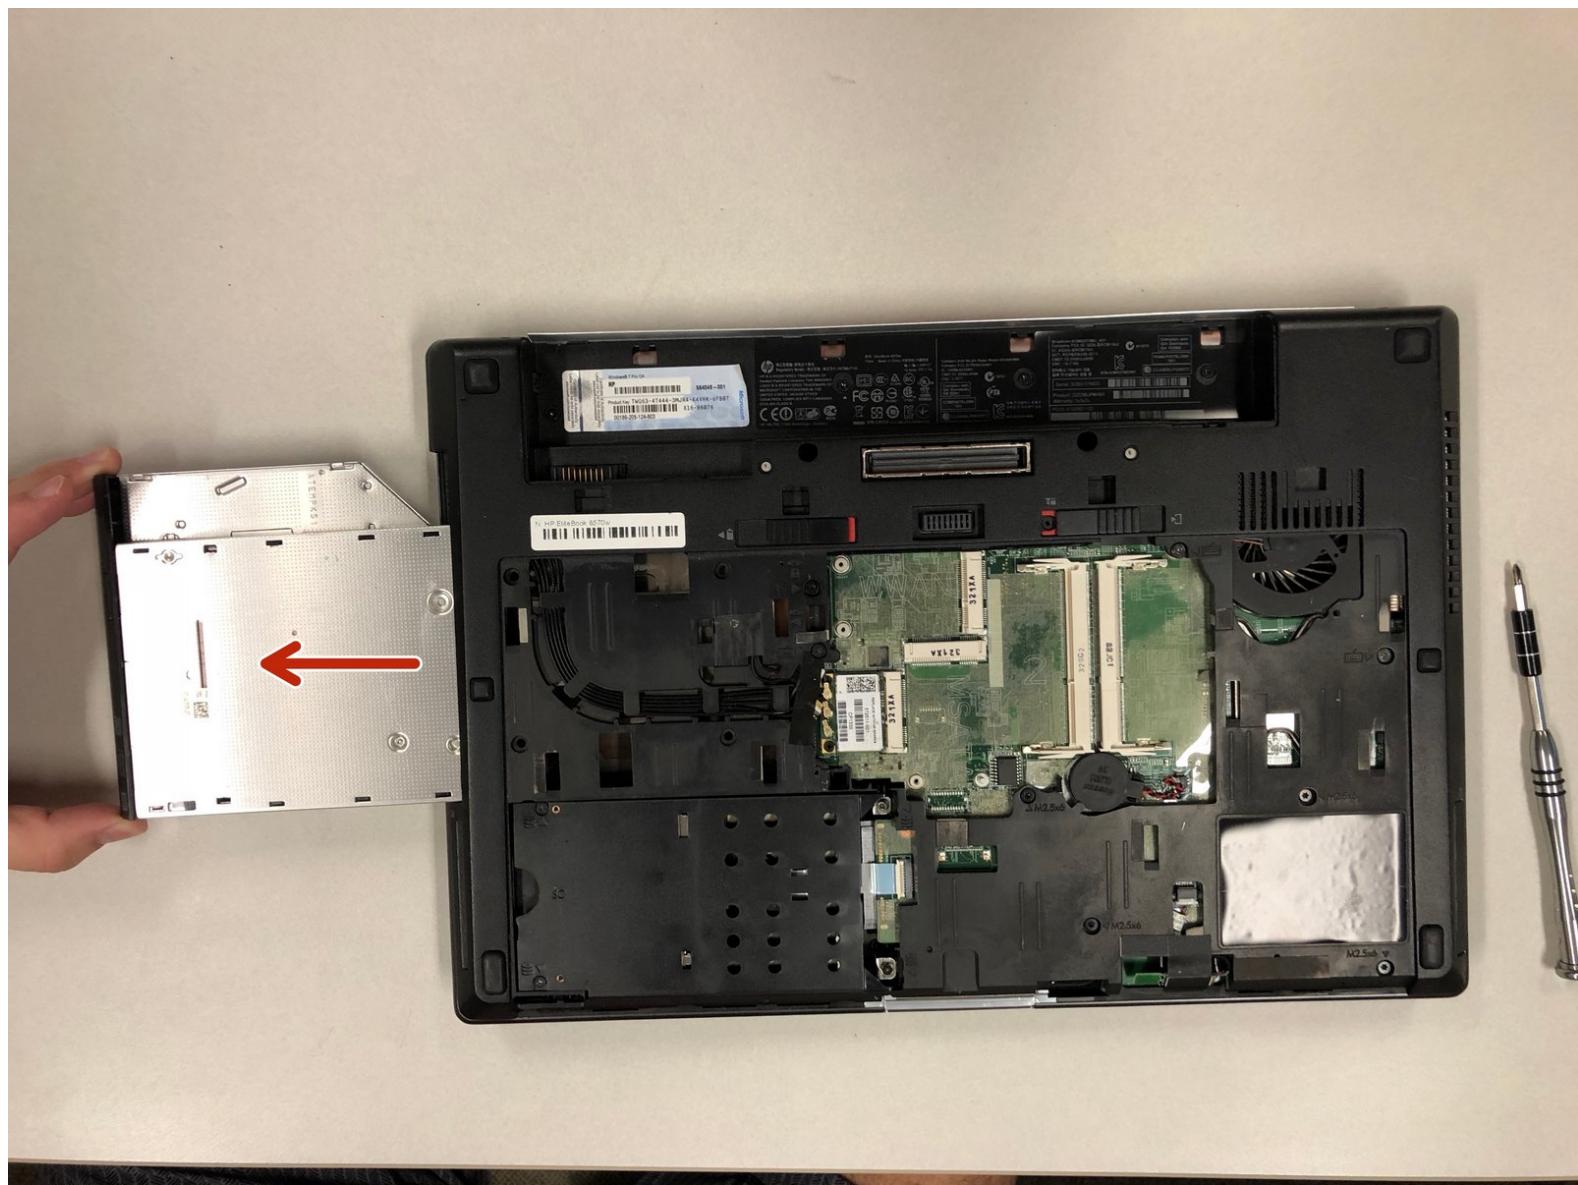


INTRODUCTION

This replacement guide will show you how to disconnect the optical drive from your HP EliteBook 8570w. It consists of 4 relatively easy steps that should guide you successfully.

TOOLS:


- Phillips #0 Screwdriver (1)

Step 1 — Optical Drive

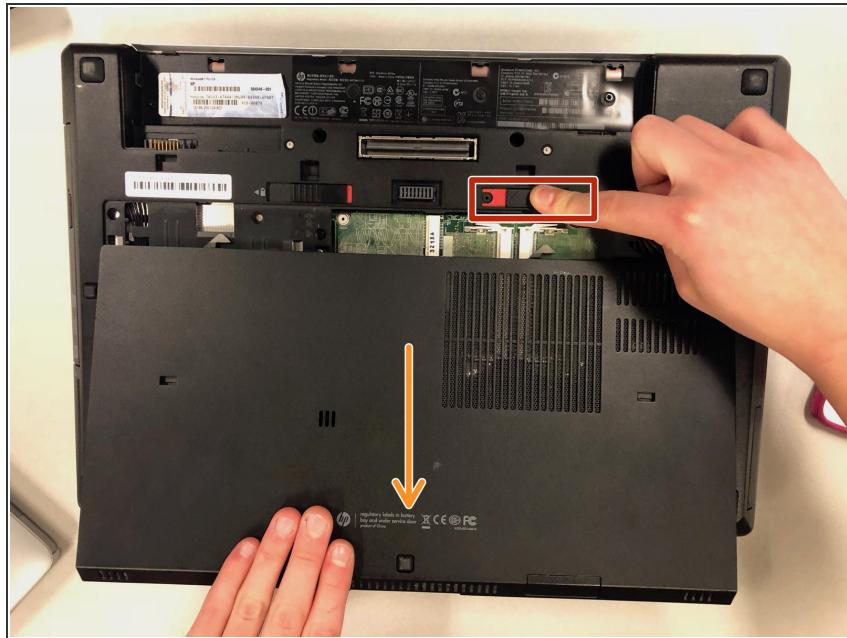


- Begin by removing the computers back covering.
 - Use the right slider to unlock the backing.
 - Slide the backing towards you while holding the slider to remove it.

Step 2

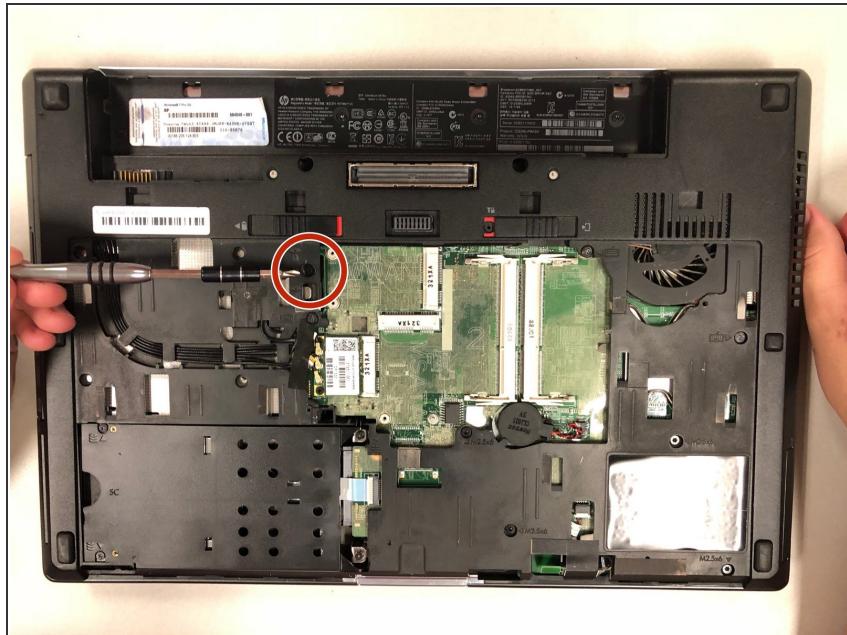



- Once the backing is removed, locate the panel to the left where the optical drive is stored.
 - Locate the single screw in the photo.
 - Unscrew the 0.8mm Phillips screw and place to the side.

Step 3

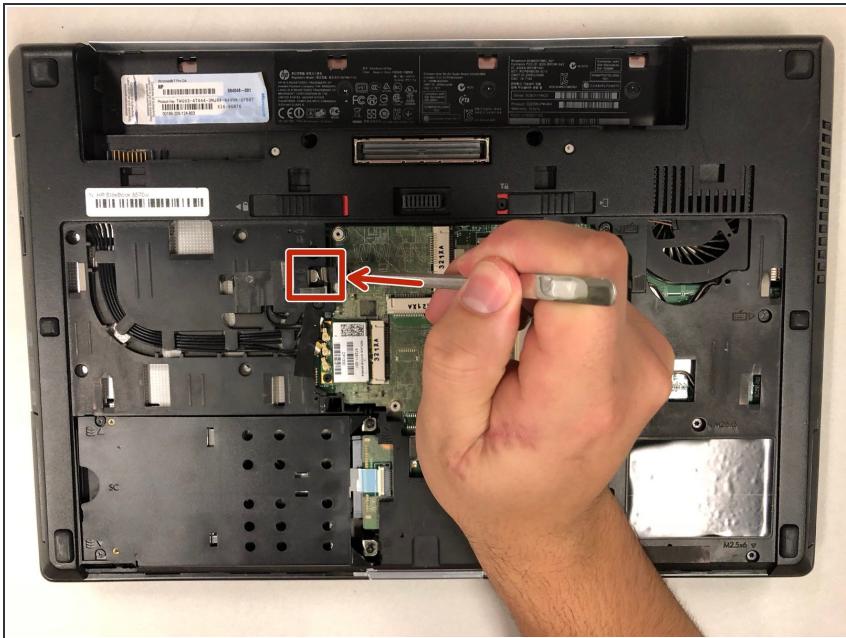

- Locate the small metal piece in the photo.
- Using a tool, push the piece in the given direction.

Step 4

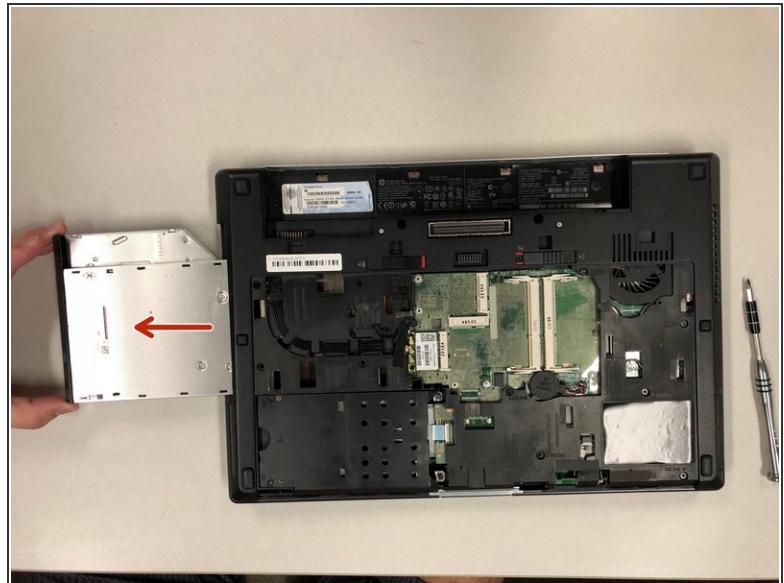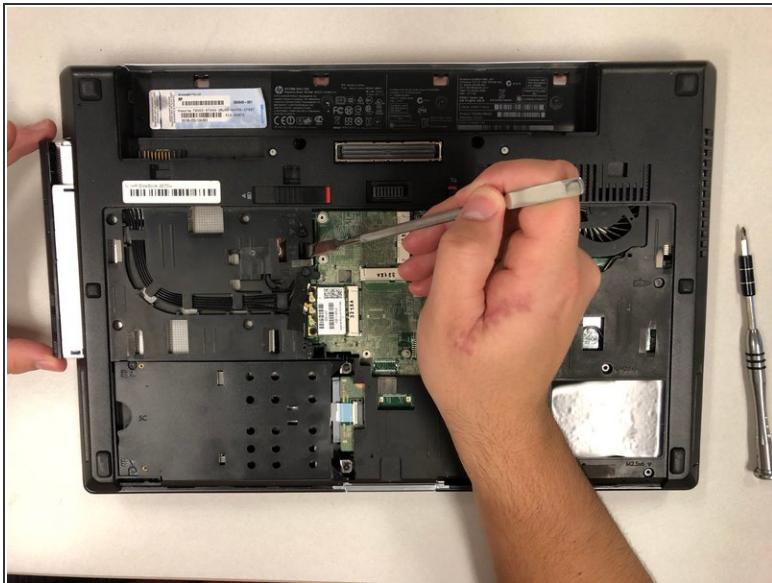

- Once pushing the piece outwards, the optical drive will pop out of the side of the computer.
- Grab the optical drive and carefully remove it from the back of the computer.

To reassemble your device, follow these instructions in reverse order.