



HP Elitebook Folio 9470m RAM Replacement

Replacing the Ram in an HP Elitebook Folio 9470m.

Written By: Kenneth Bowers



 **TOOLS:**

- Phillips #0 Screwdriver (1)

Step 1 — RAM



- Remove battery using this guide [here](#).

Step 2




- Unscrew 2 Phillips head screws, lift slightly up and out to remove hard drive cover.

Step 3



- Remove the three Phillips screws from the back plate. Pull slightly up and out to remove the plate.
- *(i)* These screws are also marked with a small RAM icon.

Step 4

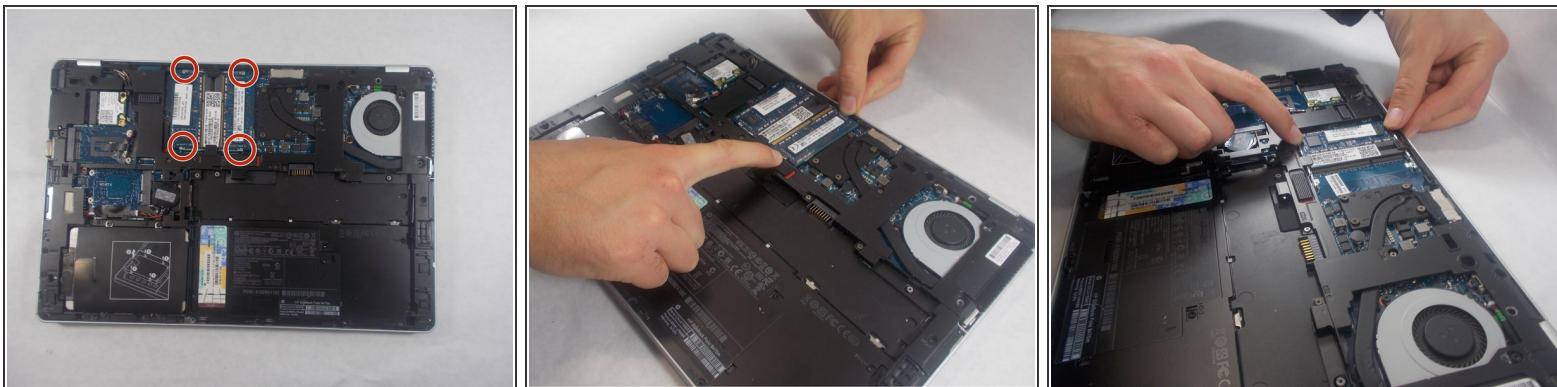

- Gently push out the small tabs on either side.
- The RAM should pop up and easily be taken out from there.

To reassemble your device, follow these instructions in reverse order.