



HP Elitebook Folio 9470m WiFi Card Replacement

Replacing the Wifi card in an HP Elitebook Folio 9470m.

Written By: Kenneth Bowers



INTRODUCTION

A Wifi card allows you to connect to the Internet without a cable . If your HP Elitebook Folio 9470m Wifi card needs to be replaced, follow the instructions below.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — WiFi Card



- Flip laptop over.

Step 2



- Remove battery using [This](#) guide.

Step 3




- Unscrew the 2 Phillips screws to remove the hard drive plate.

Step 4



- Unscrew the 3 Phillips screws to remove the back plate by slightly lifting up and pulling out.

Step 5

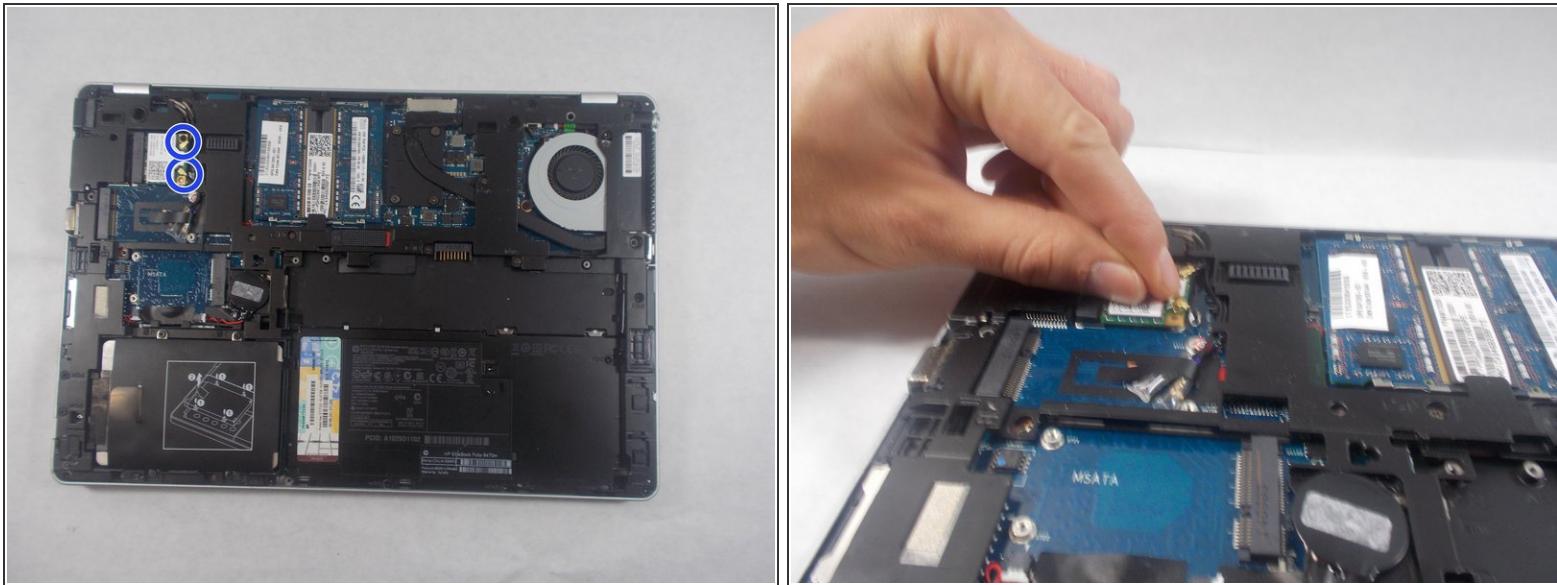

- Slowly but firmly pull off the small connector on the right side.

Step 6



- Unscrew the top Phillips screw and gently lift up and out to remove it.

To reassemble your device, follow these instructions in reverse order.