




HP Elitebook x360 1040 G5 Speakers Replacement

If your issues cannot be fixed with other troubleshooting methods, this guide will help you replace the speaker for the HP Elitebook x360 1040 G5.

Written By: Corey Agena

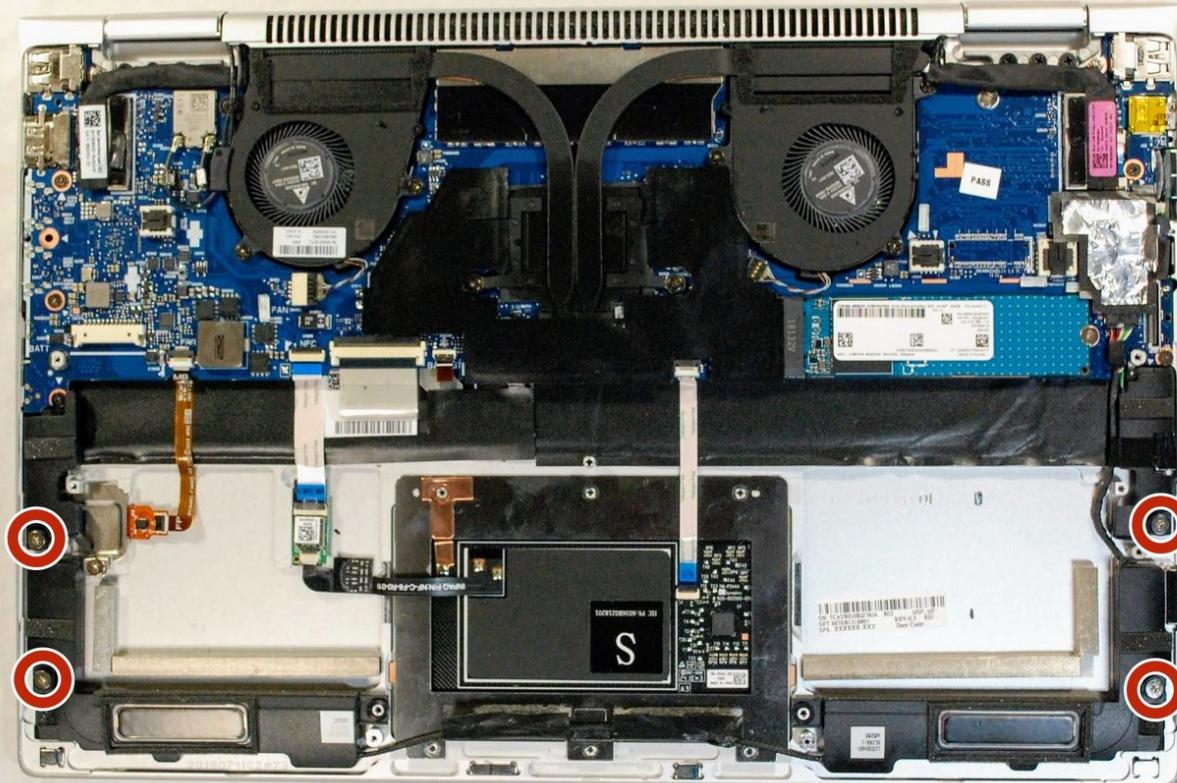


INTRODUCTION

This guide provides detailed instructions to replace your laptop's speakers or check its connection to the motherboard. Before you open your laptop try to troubleshoot other problems first, our [troubleshooting page](#) may help. If you determine that the speakers themselves are the issue follow this guide to replace them.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Precision Bit Driver](#) (1)
- [Magnetic Project Mat](#) (1)
- [Metal Spudger](#) (1)
- [T3 Torx Screwdriver](#) (1)


Step 1 — Lower Case

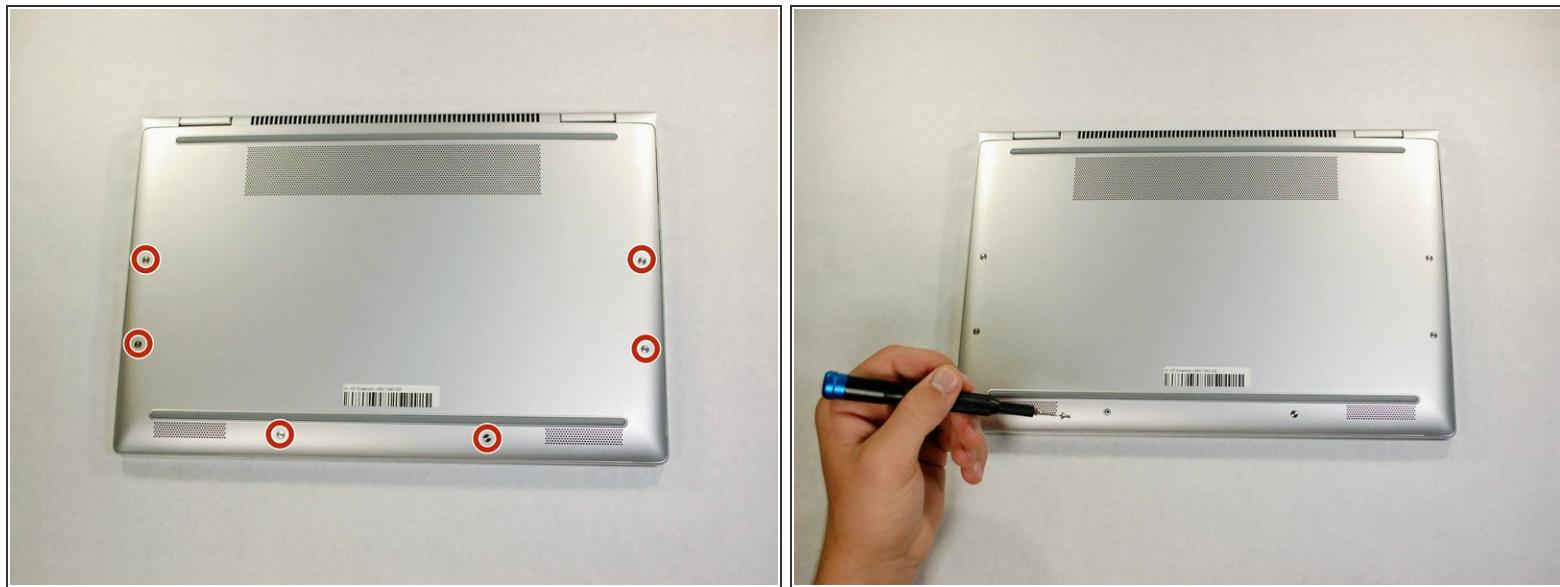

(i) Power off device before disassembly.



- Use the T5 Torx screwdriver to remove the six 4 mm screws from the underside of the laptop using iFixit's 64 Bit Driver Handle and a T5 Torx screwdriver head.

Step 2

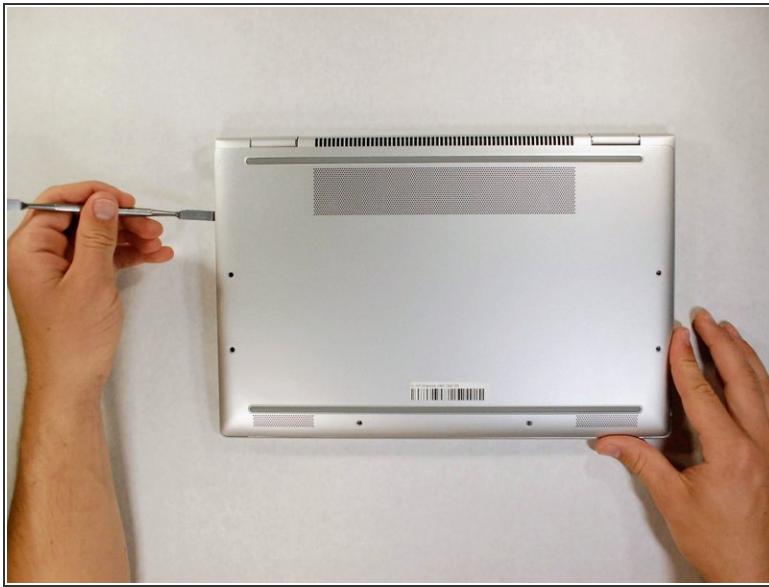


- Pry open the lower case from where it meets the laptop base using iFixit's Metal Spudger.
- Remove the lower case from the work area.

Step 3 — Battery

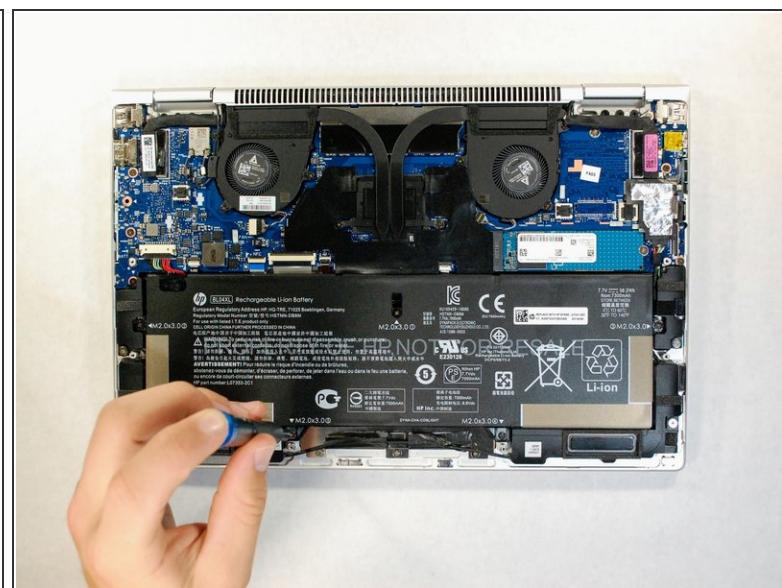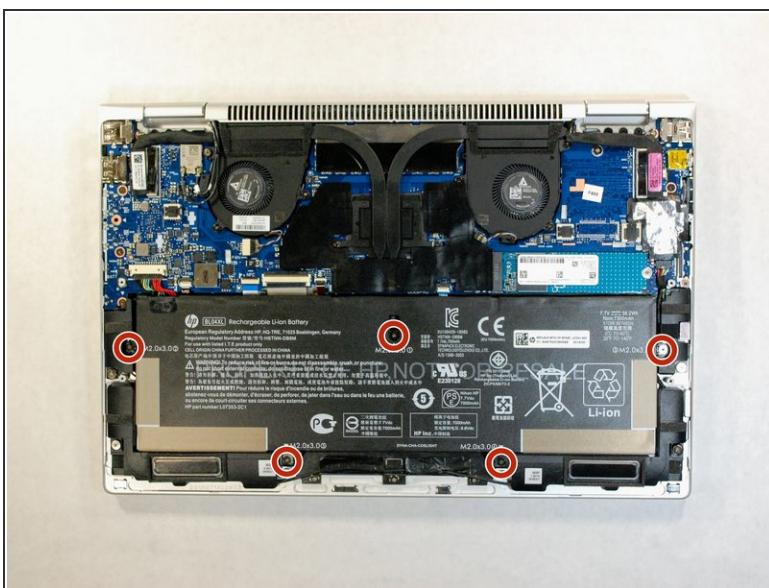



- Use the Phillips 1 screwdriver to remove the five 3mm Phillips screws from the battery assembly.

Step 4

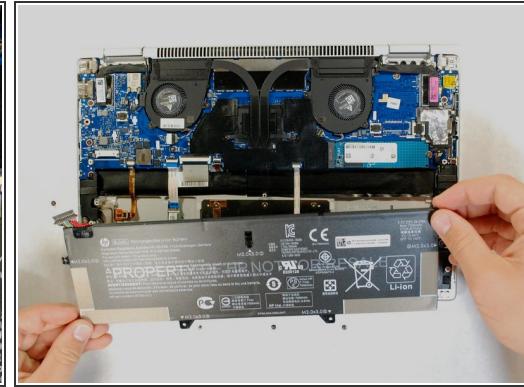


- Carefully remove the power supply connector by pulling on both sides of its head.
- ⚠ Do not tug on the wires as they may become damaged.
- Lift the battery from its position, removing it from the device.

Step 5 — Speakers

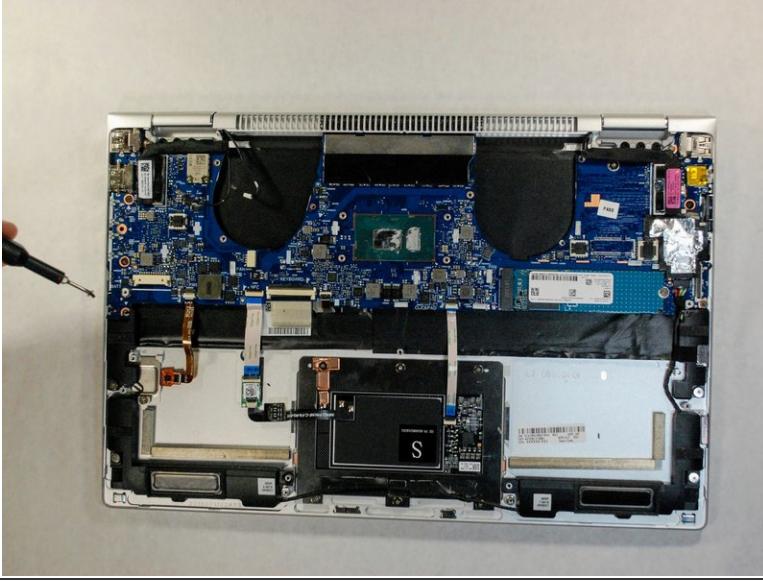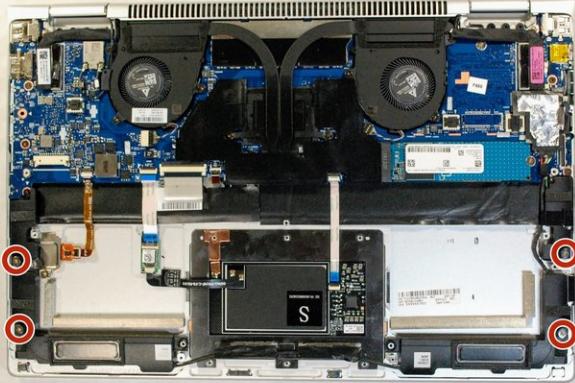

- Use the Phillips 0 screwdriver to remove the four 3mm Phillips screws from the speaker assembly.

Step 6

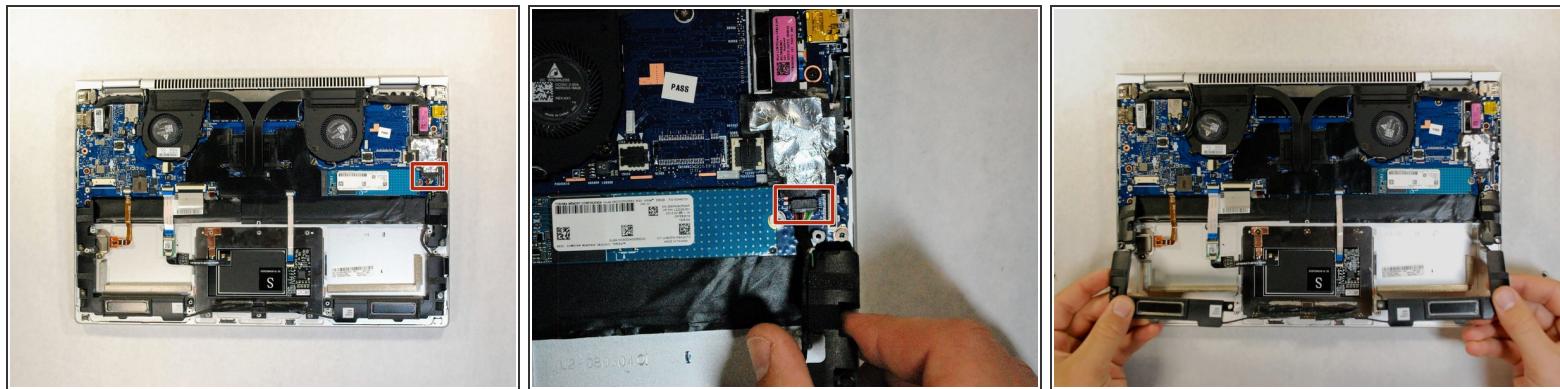

- Carefully remove the plug, connecting the speaker assembly to the motherboard on the right hand side, by pulling on either side of its head.

To reassemble your device, follow these instructions in reverse order.