




HP Envy 17-3070NR Optical Drive Replacement

In this guide, we will show you how to replace the optical drive of your HP Envy 17-3070NR.

Written By: Jon Fuson

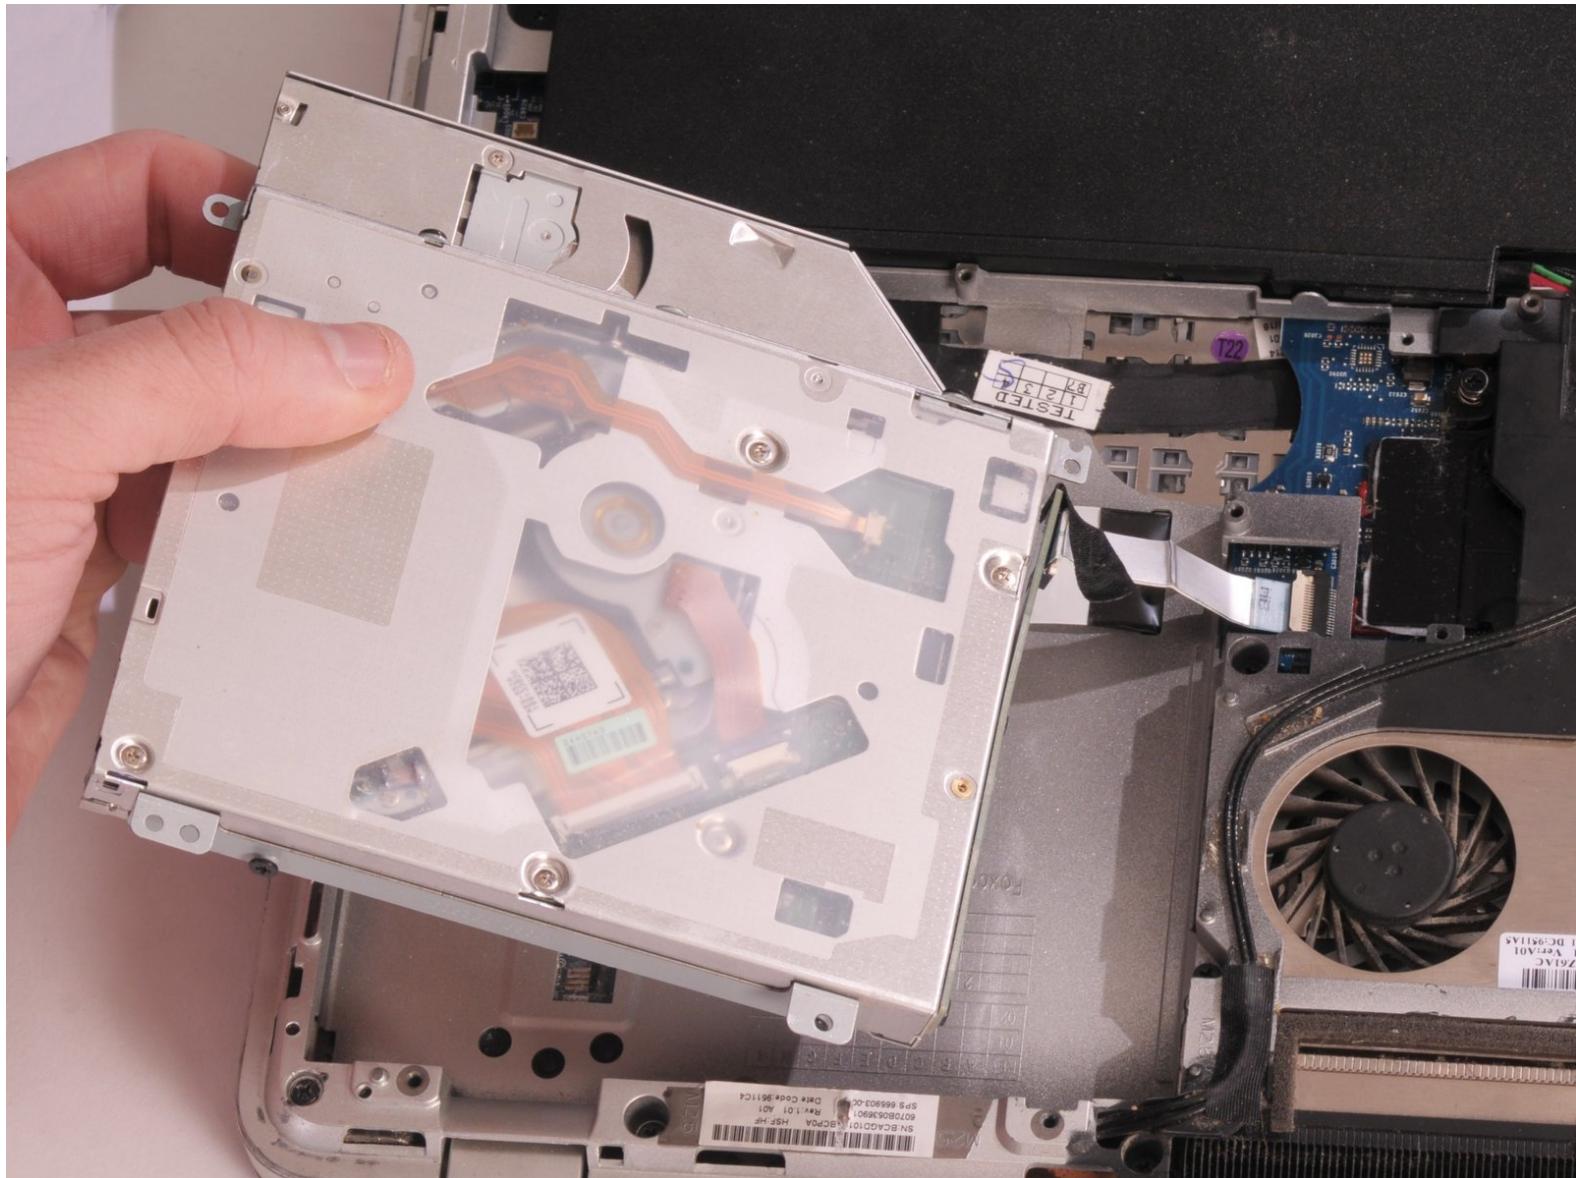

INTRODUCTION

Whether you want to replace your faulty DVD drive or upgrade to a Blue-Ray one, this guide is for you.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)


Step 1 — Back Cover



⚠ Before you begin taking apart the computer, make sure that it is completely powered off.


- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

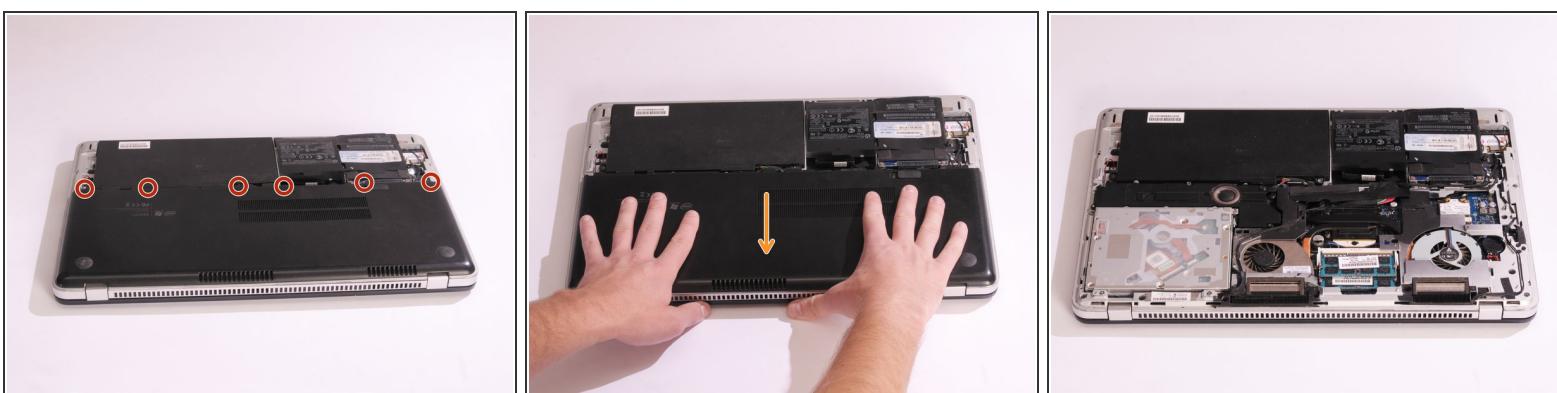

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

Step 3 — Optical Drive

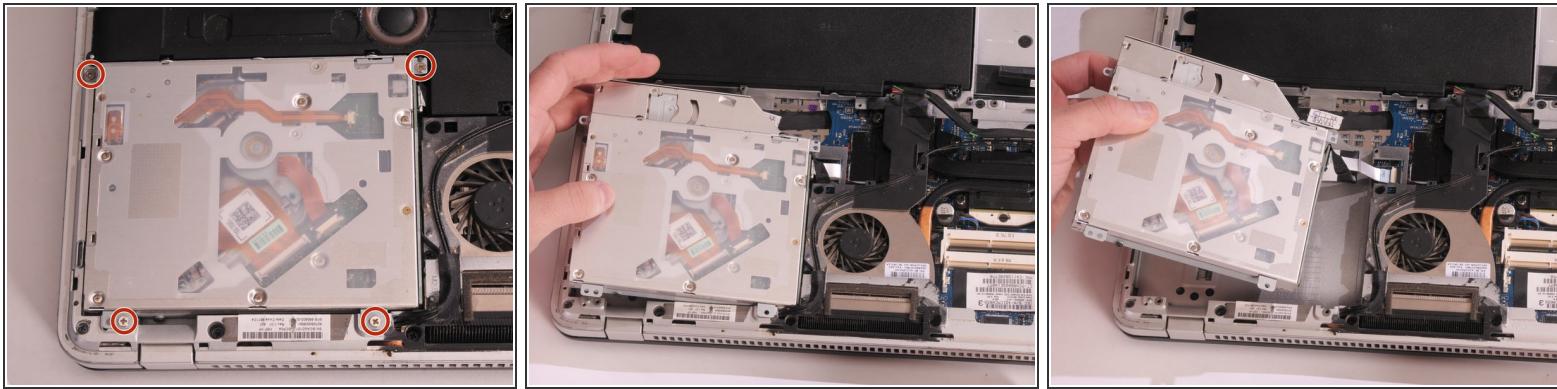

- Remove the four 3.7mm Phillips screws that secure the optical drive to the computer.
- Slowly lift the optical drive away from the computer ensuring that you don't put stress on the connecting cable.


 Do not fully lift off the optical drive as there is still a cable that connects it to the motherboard.

Step 4



- Remove Sub Speaker assembly first in order to remove Optical drive. Carefully disconnect speaker connector.

Step 5

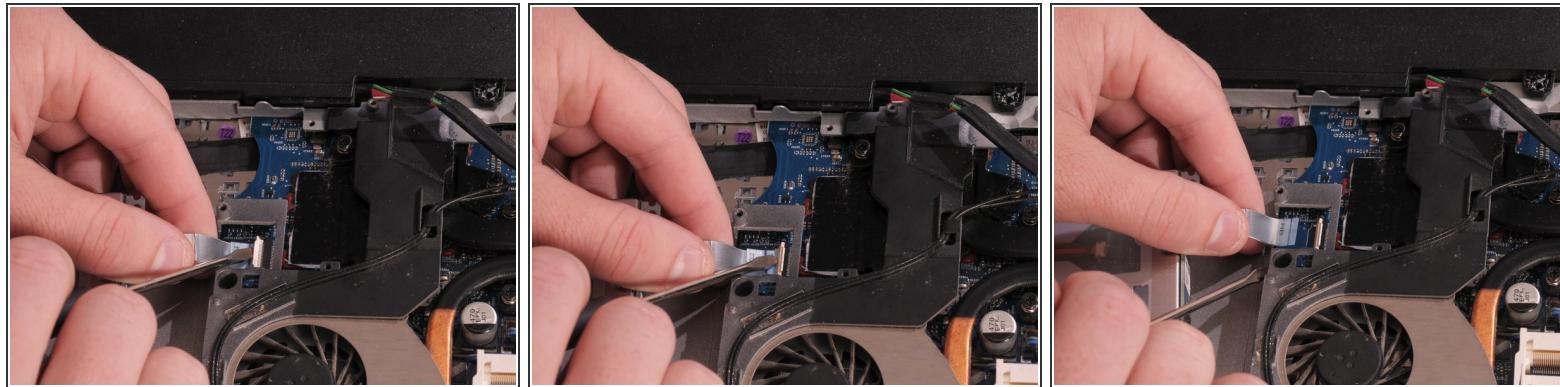

- Carefully disconnect the connecting cable by lifting the white clamp with a Flathead screwdriver and pulling on the blue tab away from connector.

To reassemble your device, follow these instructions in reverse order.