



# HP Envy 17-3070NR RAM Replacement

In this guide, we will show you how to replace RAM on your HP Envy 17-3070NR.

Written By: Abby Lentz




## INTRODUCTION

Use this guide to upgrade the RAM of your HP Envy 17-3070NR to boost performance or to replace faulty one if you start getting RAM related blink codes, which are explained in the troubleshooting section.

### TOOLS:

- Phillips #2 Screwdriver (1)


## Step 1 — Back Cover

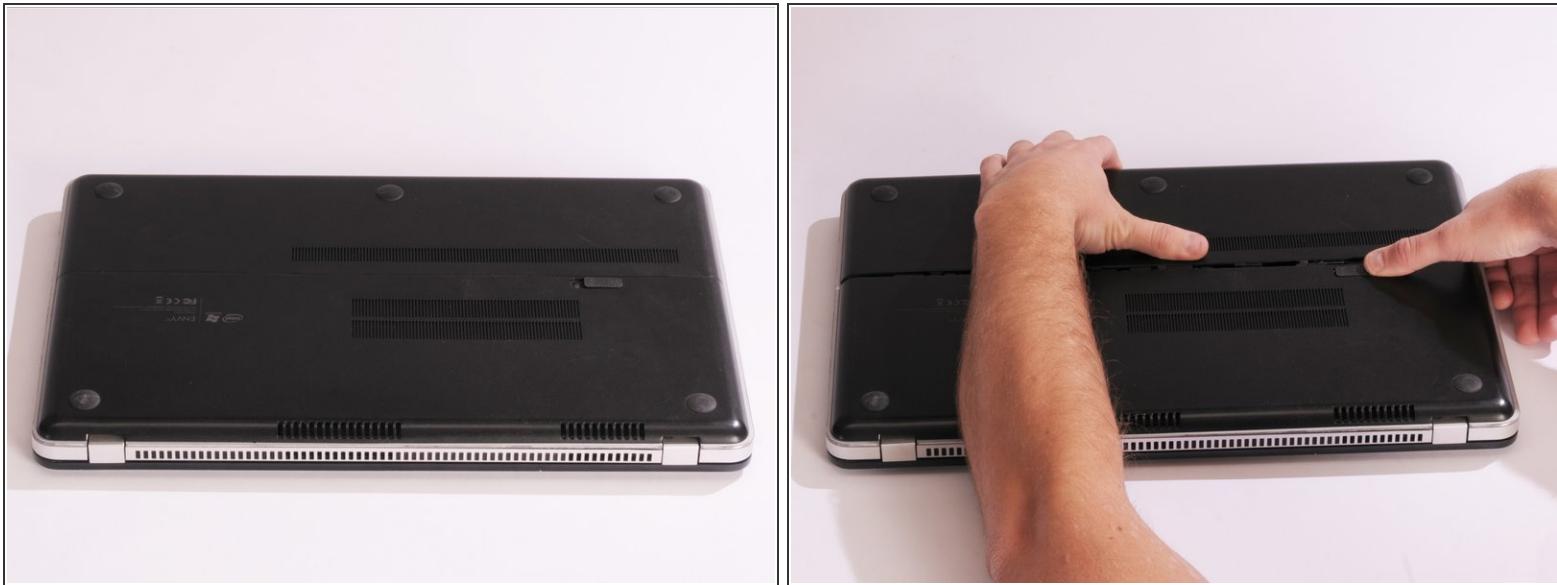

⚠ Before you begin taking apart the computer, make sure that it is completely powered off.


- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

## Step 2

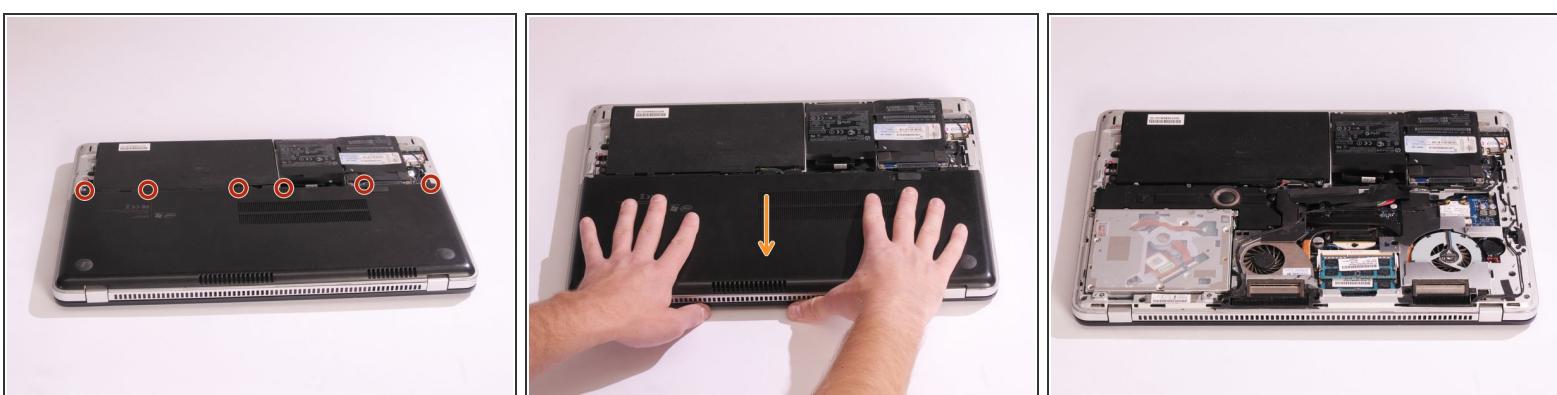

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

## Step 3 — RAM

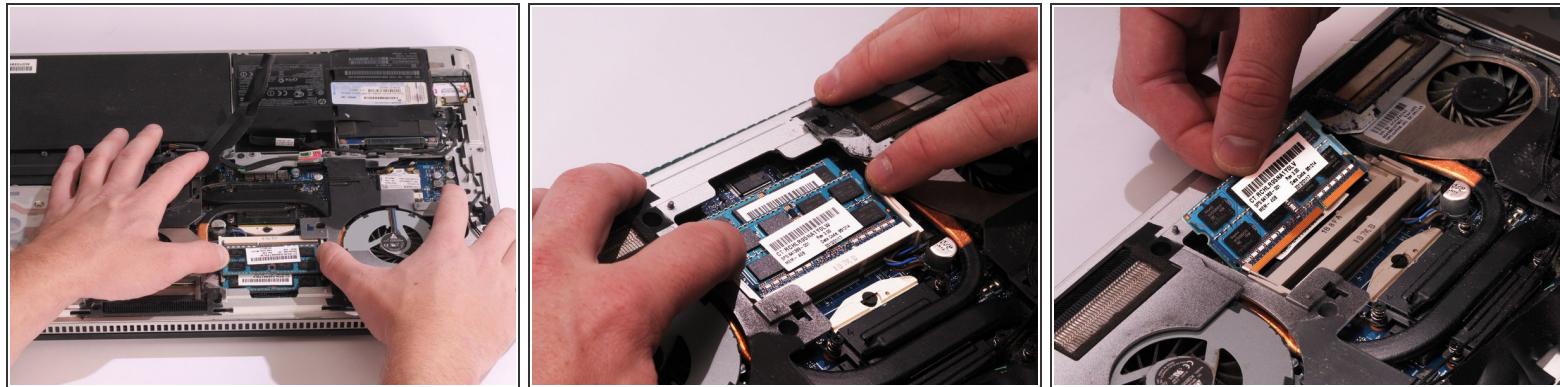

- Press down on both tabs on either side of the top RAM stick.
- The RAM will slightly pop out and you will be able to slide it out of its cavity.
- Repeat the same process for the second stick of RAM if needed.

To reassemble your device, follow these instructions in reverse order.