


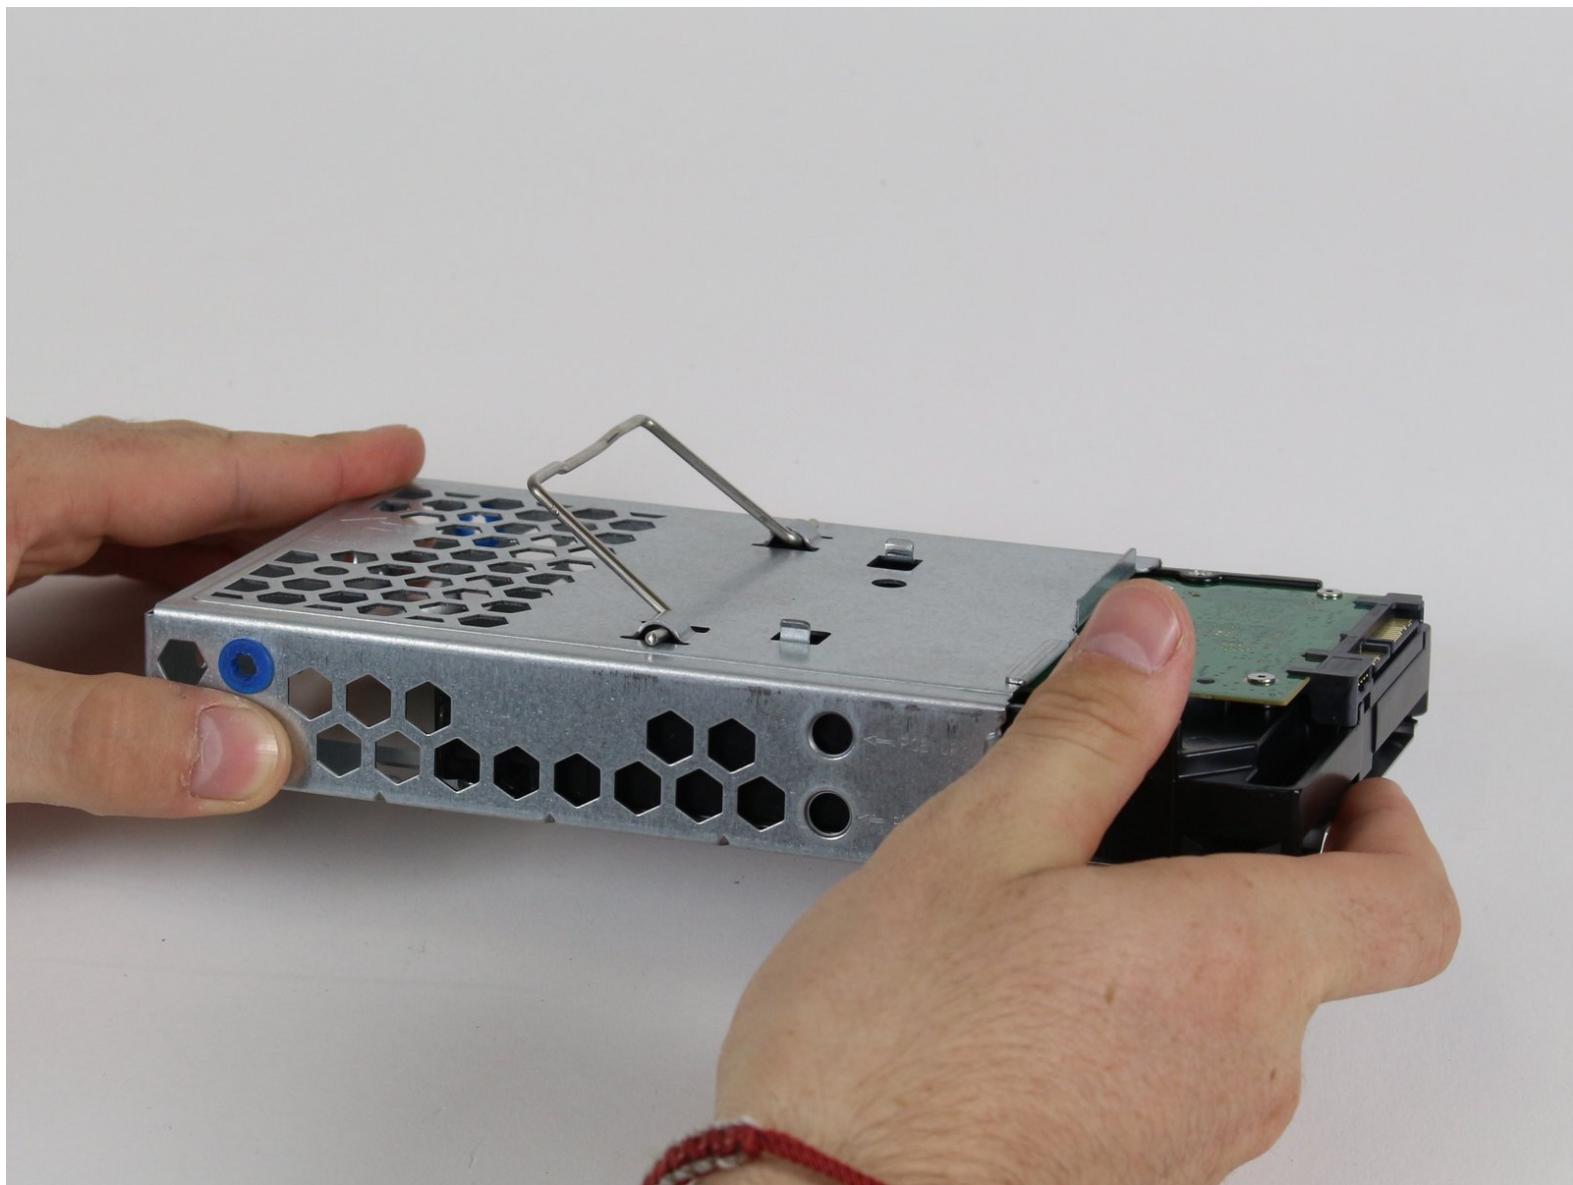

# HP Envy 23-d060qd TouchSmart Hard Drive Replacement

This guide will demonstrate how to properly replace the hard drive on the HP Envy 23-d060qd TouchSmart.

Written By: Zachary Dicks



This document was generated on 2019-10-01 03:14:00 PM (MST).

## INTRODUCTION

My computer doesn't have enough room anymore for the music and photos that I want to store! I don't want to say good-bye to any files. What can I do so that I am able to store more files on my computer? Replacing the hard drive won't be too hard!

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Back Panel



- Use your hands to unclip the plastic snaps on the back panel of the device.

## Step 2



- Remove the three 11.5mm PH2 screws from the back panel.
- *i* The screws will not fall out of the back panel, but they will unscrew to release the back panel.

## Step 3




- Now, take the back panel off by pulling at it gently with your hands.

## Step 4 — Hard Drive





- Remove the one 13.5mm PH2 screw.

## Step 5

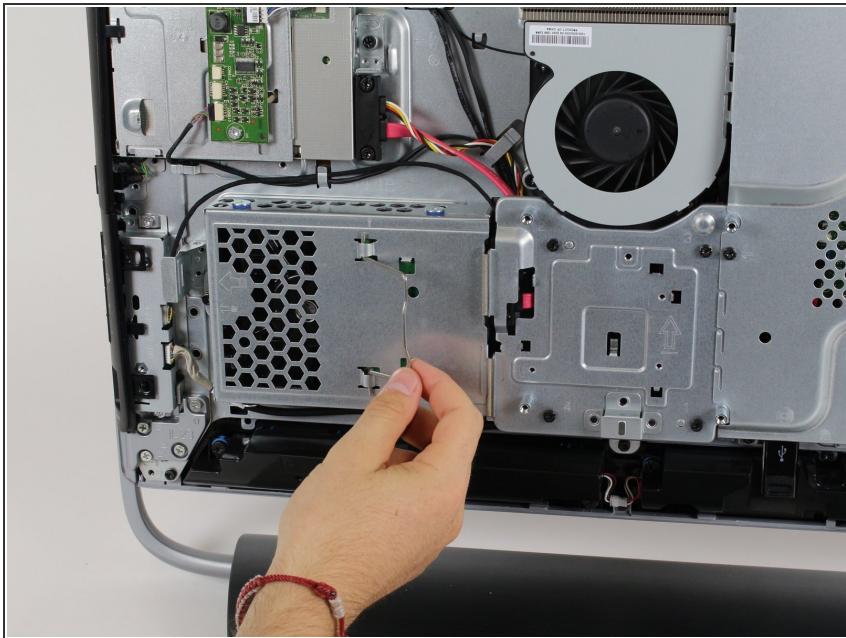


- Unsnap the wire mechanism to release the hard drive.

## Step 6

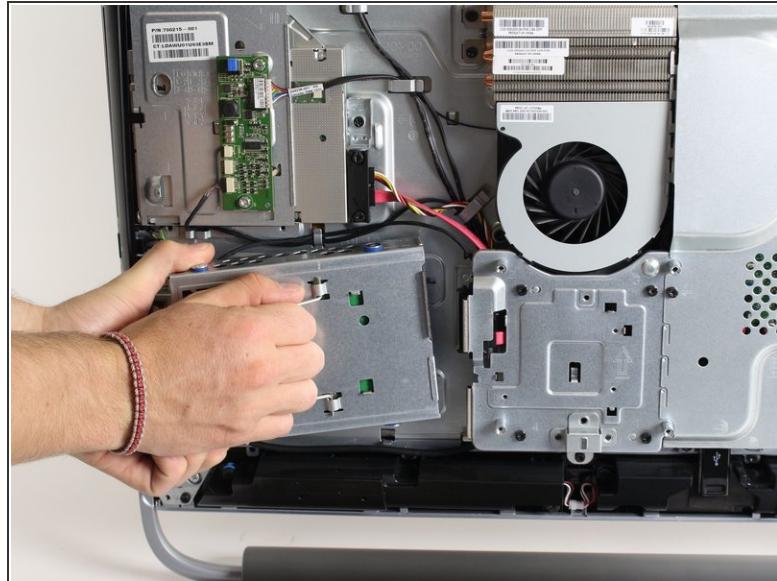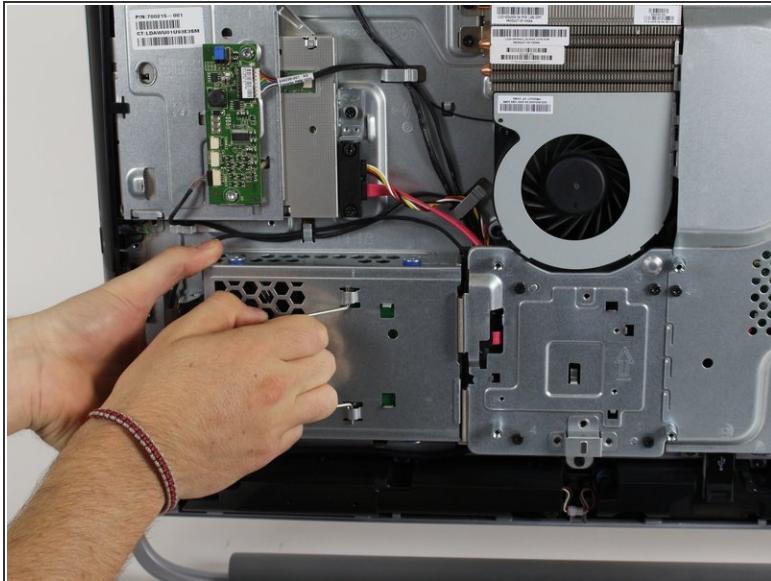


- Detach the hard drive assembly by pulling it out of the socket.

## Step 7

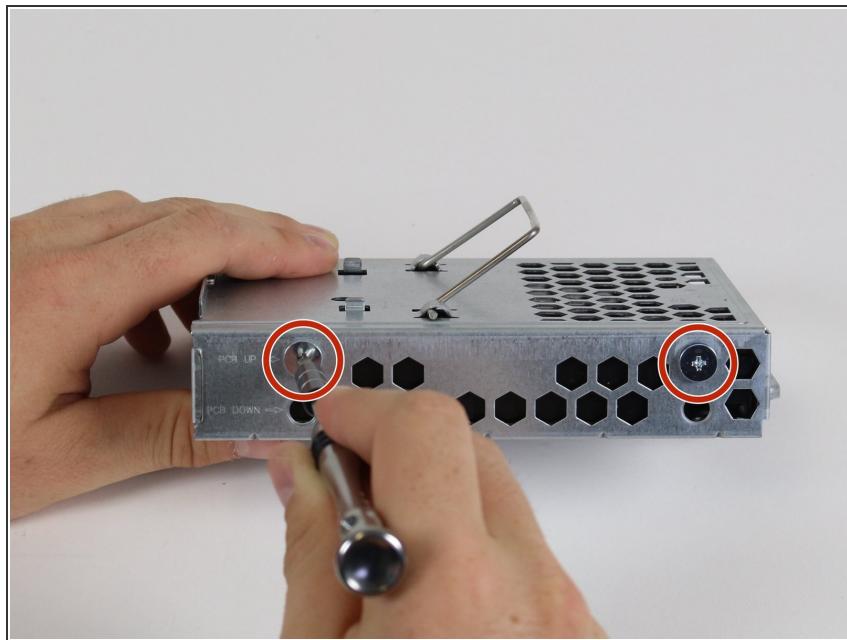

- Remove the two 8.5mm PH2 screws on each side of the hard drive cover.

## Step 8

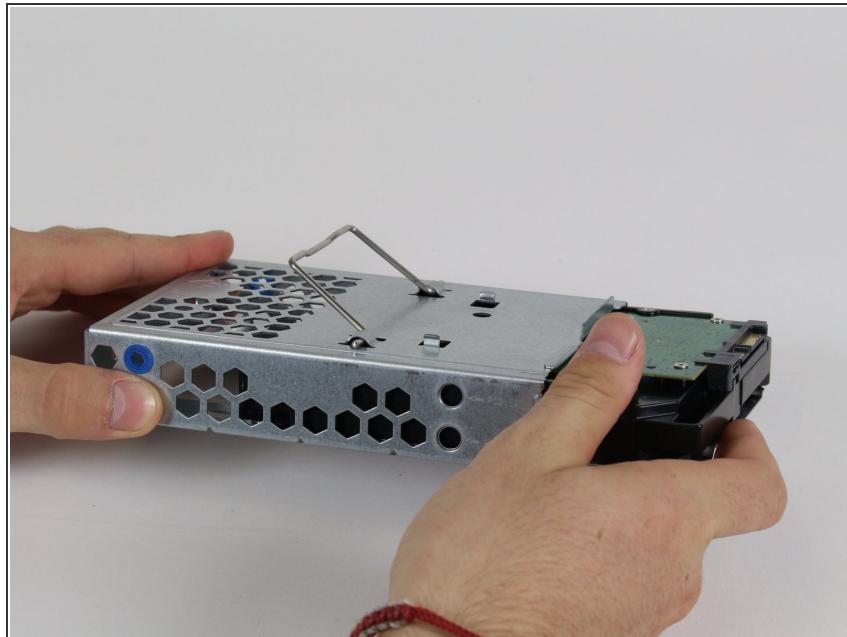

- Detach the hard drive cover by sliding it off from the rest of the hard drive
- Replace the old hard drive with your new hard drive.

To reassemble your device, follow these instructions in reverse order.