



HP Envy 23-d060qd TouchSmart Speaker Replacement

This guide will demonstrate how to properly replace the speakers on the HP Envy 23-d060qd TouchSmart.

Written By: Zachary Dicks



This document was generated on 2019-09-17 07:53:13 PM (MST).

INTRODUCTION

My computer won't play audio even though I've checked all of the connections. How can I have a dance party without any audio? Luckily the party starts in 15 minutes so I have time to replace the speakers.

TOOLS:

- **Phillips #2 Screwdriver** (1)
- **T15 Torx Screwdriver** (1)

Step 1 — Back Panel



- Use your hands to unclip the plastic snaps on the back panel of the device.

Step 2




- Remove the three 11.5mm PH2 screws from the back panel.
- The screws will not fall out of the back panel, but they will unscrew to release the back panel.

Step 3



- Now, take the back panel off by pulling at it gently with your hands.

Step 4 — Speakers

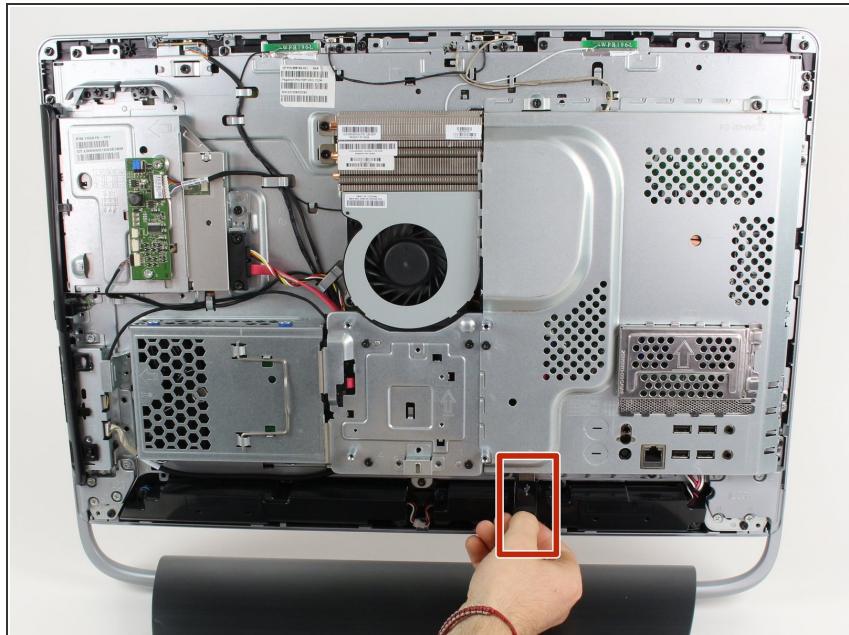



- Remove the receiver for the keyboard and mouse with your hands.

Step 5




- Remove the four 17.5mm T15 screws from the speakers.
- Remove the five 7.5mm T15 screws from the cover plate.
- Remove the cover plate with your hands.

Step 6

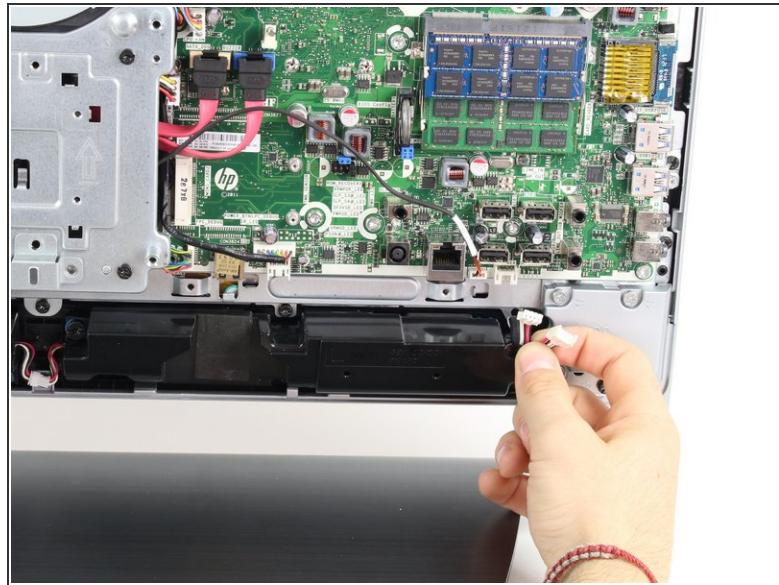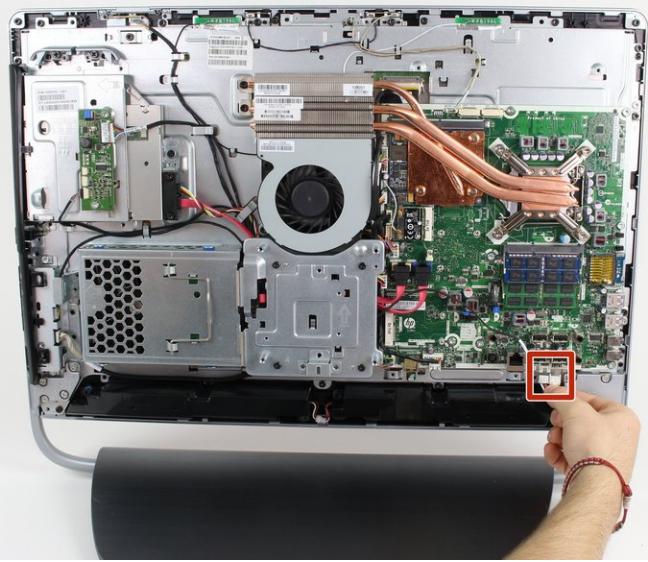

- Disconnect the two speaker connections from the motherboard with your hands. Use your hands to gently pull the plastic piece at the ends of the wires.
- ⓘ Be gentle when disconnecting any wired connections. Pulling on the wires can damage them.

Step 7

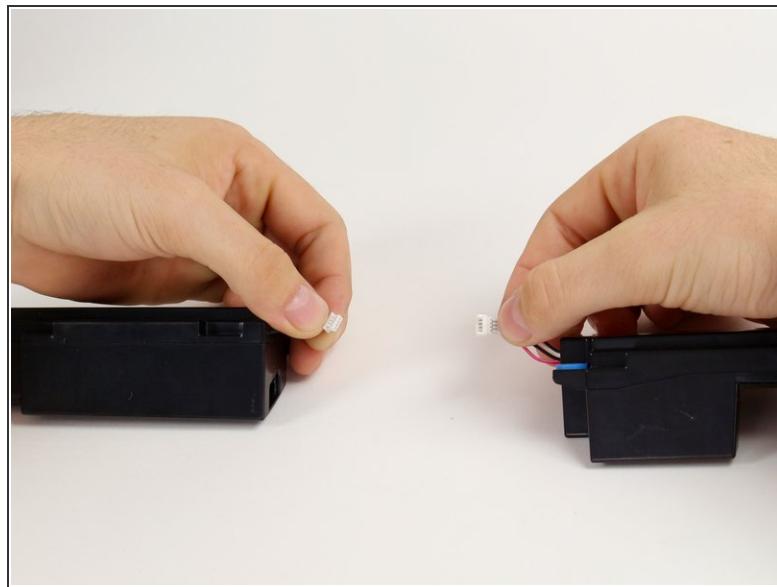

- Remove the speakers from the computer, and if needed, separate by disconnecting the wires between them.
- *(i)* Be gentle when separating wired connections. Pulling on the wires can damage them.

To reassemble your device, follow these instructions in reverse order.