


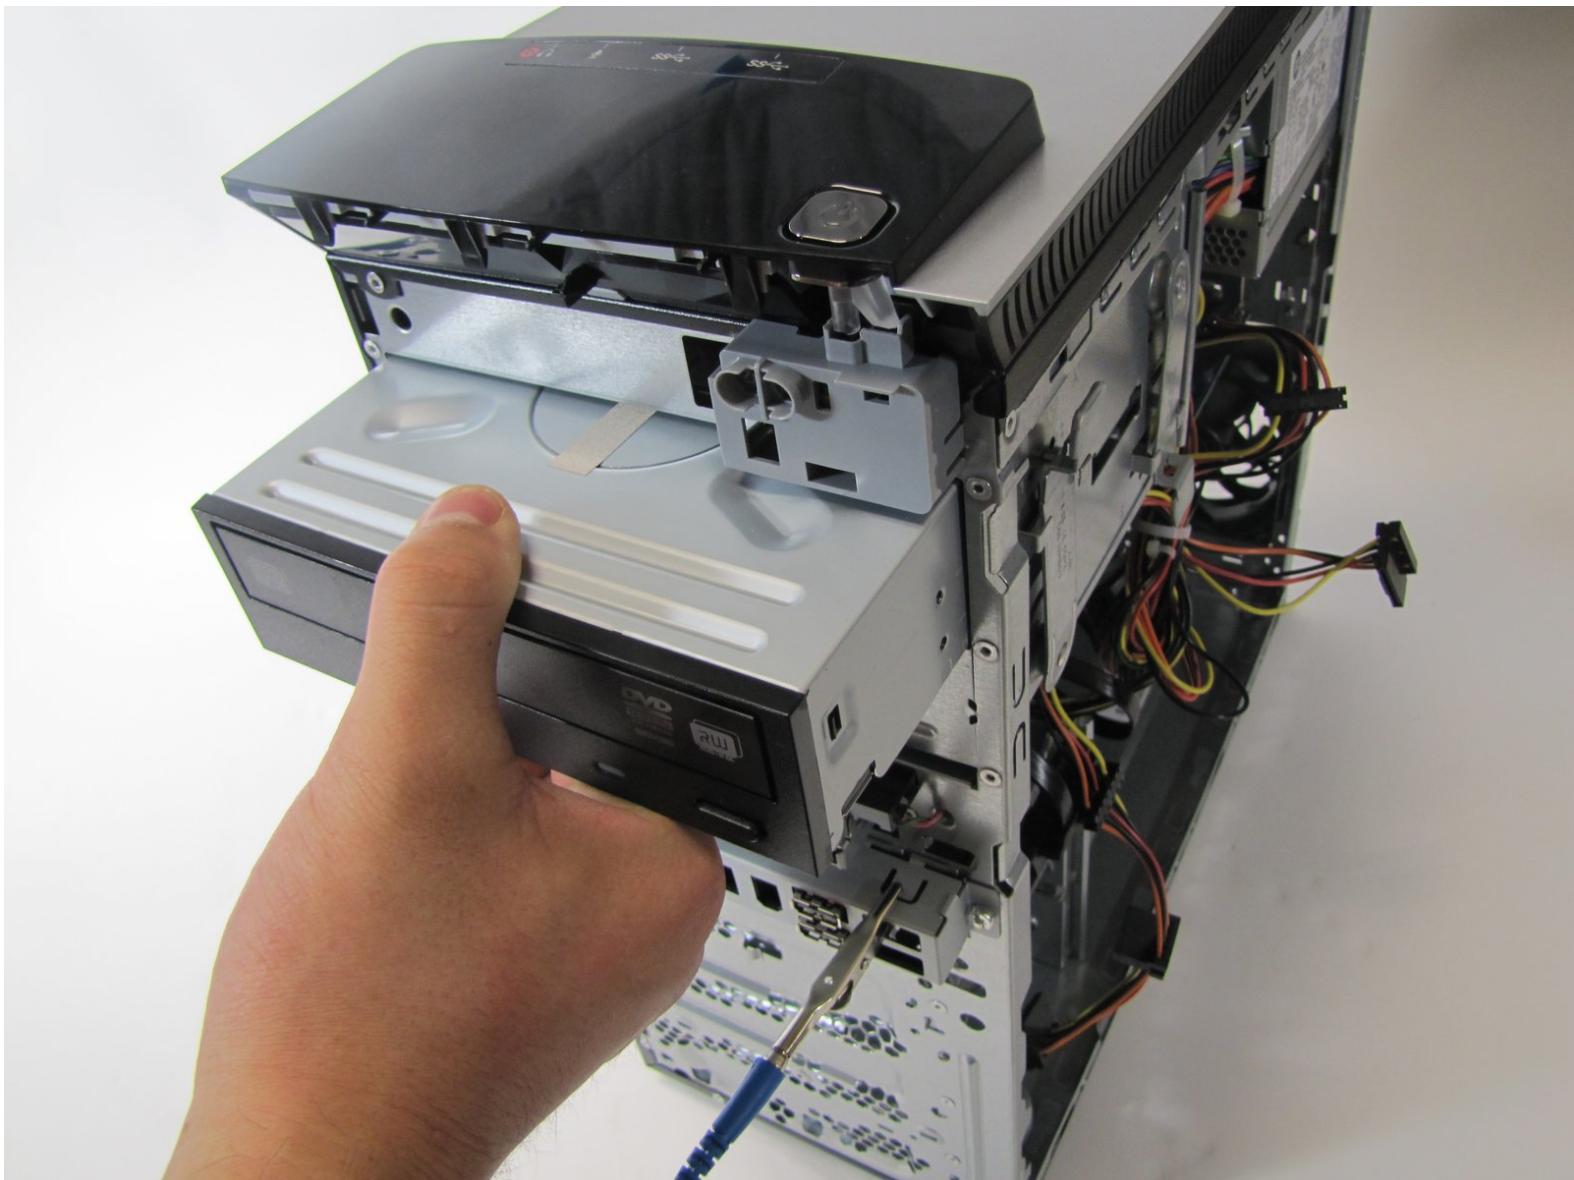

# HP Envy 700-030qe CD Drive Replacement

This guide will take you through a step-by-step process to help you replace your faulty CD Drive.

Written By: Yoav Rosenberg




## INTRODUCTION

In order to replace a broken CD Drive, this guide will show you how to do just that!

### TOOLS:

- [Anti-Static Wrist Strap \(1\)](#)
- [T15 Torx Screwdriver \(1\)](#)


## Step 1 — CD Drive

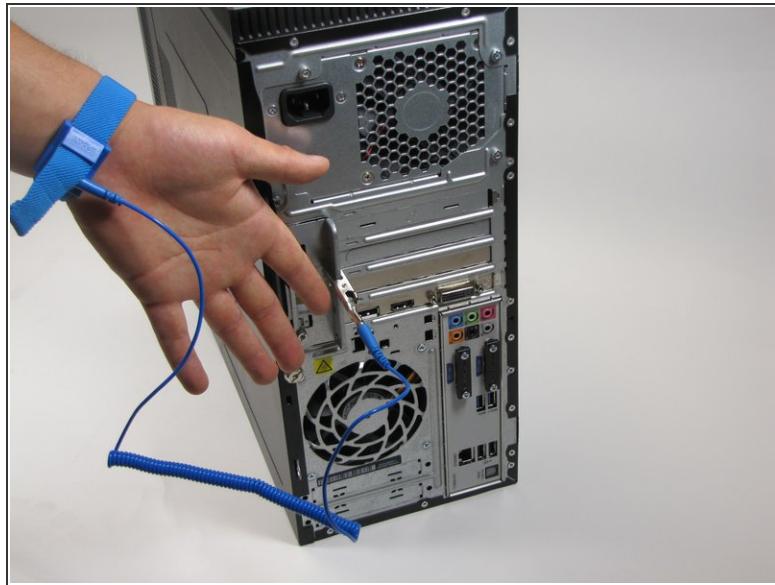

- Make sure that you are wearing your anti-static wristband. This will prevent damaging any internal parts with any built up static electricity.
- Unscrew the 10.5mm screw on the left of the desktop using your hand.


**i** If it is too tight you may use a torx-head screwdriver or a flat-head screwdriver.

## Step 2

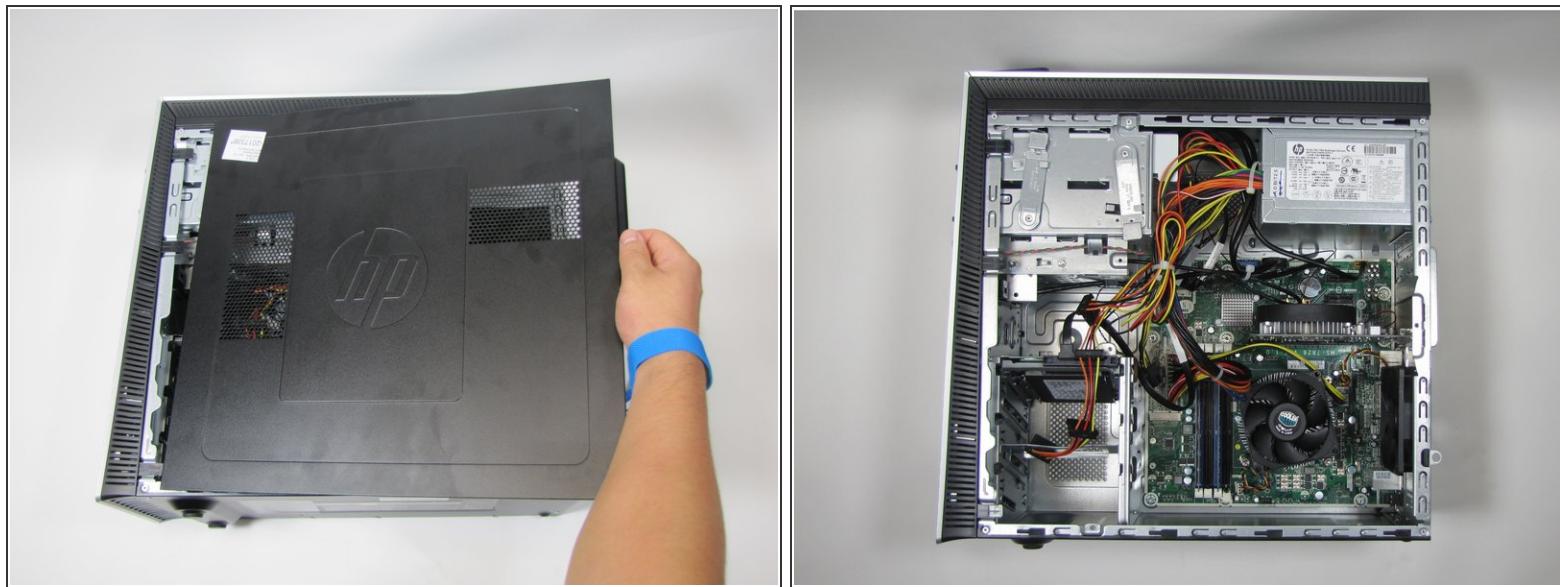


- Remove the side panel by sliding it towards the back of the desktop and pulling up on it as shown.

## Step 3

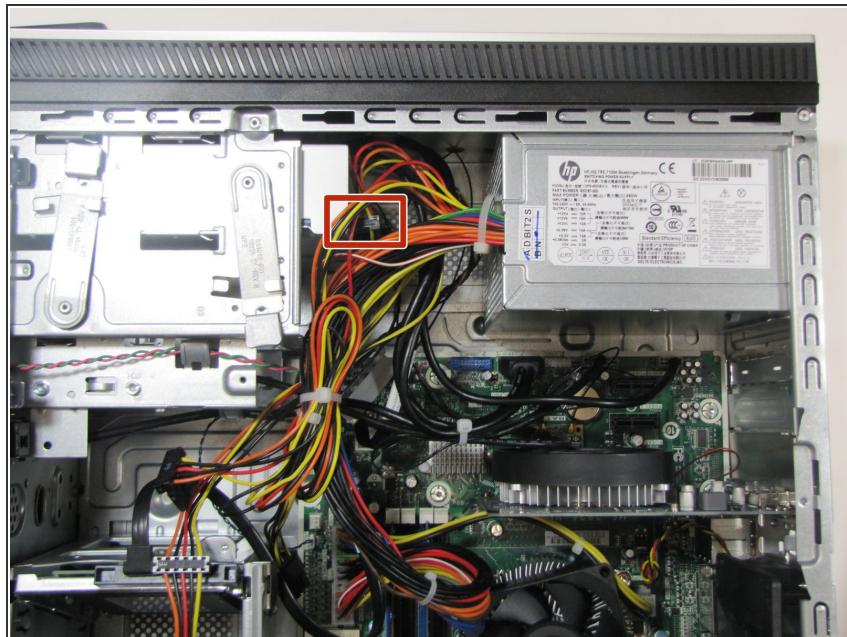


- For the next step, remove the CD drive power cable.

## Step 4

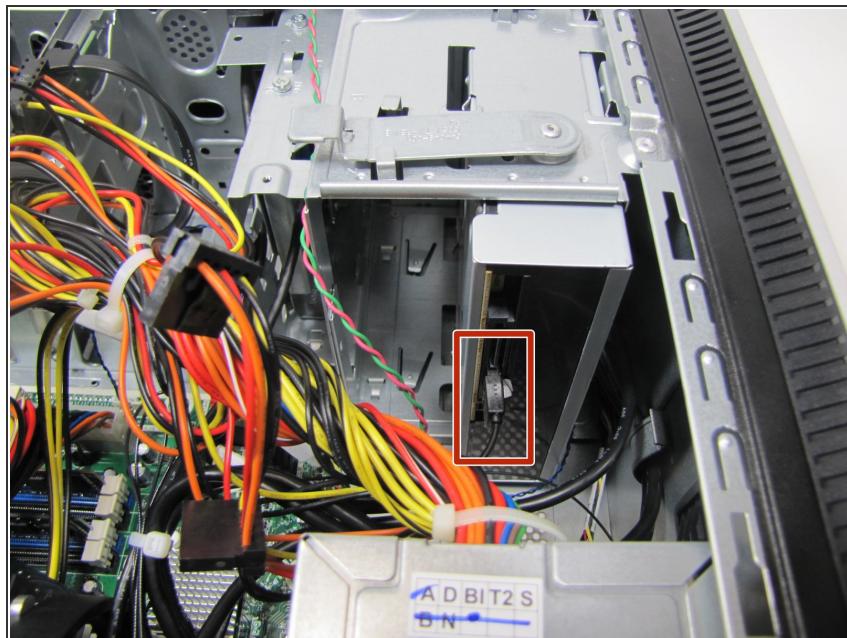


- Reorient the device with the front pointing away from you.
- Next, remove the SATA interface cable. It is directly next to the power cable on the CD drive.

## Step 5

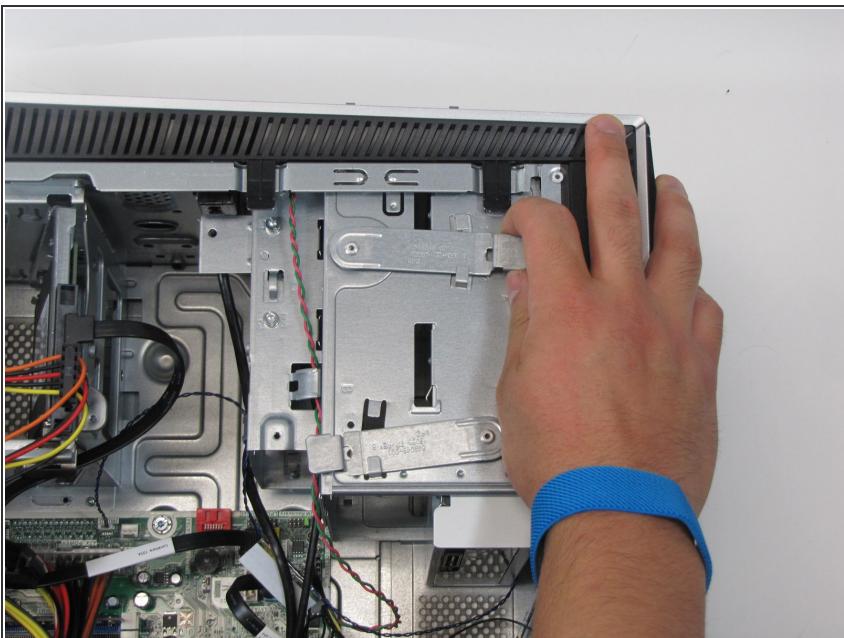

- Now pull up and swing the mounting lever in. The lever closest to the front mounts the top drive slot, and the lever farther away mounts the bottom one.

## Step 6

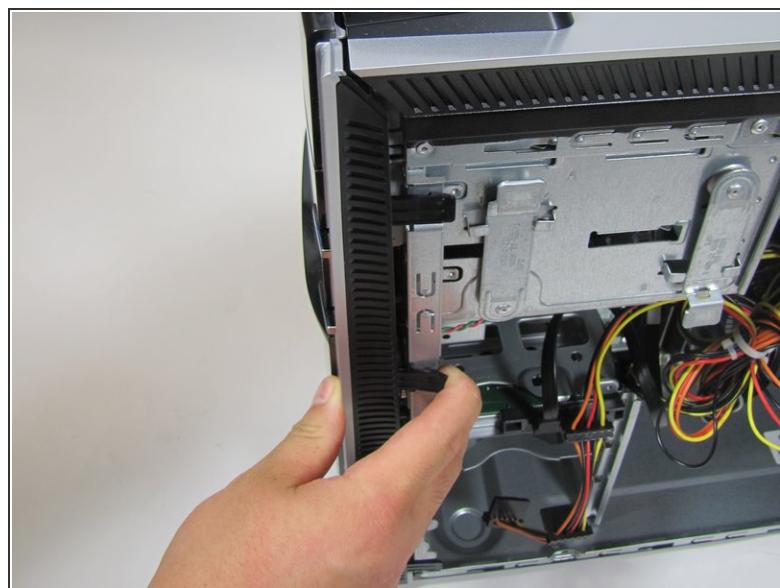

- Now stand your desktop up and remove the 3 clips on the right side of the front panel.
- Then pull the front panel off, pulling from the side that the clips are on.

## Step 7



- Now you can pull the CD drive straight out of the casing!

To reassemble your device, follow these instructions in reverse order.