



HP Envy M6-1205DX RAM Replacement

This guide will explain how to replace the RAM in the HP Envy M6-1205DX laptop.

Written By: Ryan Hatton



INTRODUCTION

Sometimes RAM may become corrupt. This guide will show you how to replace the RAM in your HP Envy M6-1205DX laptop.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Battery



- Lay the device face down to begin.

Step 2




- Slide the release mechanism to the left to release the battery.

Step 3




- Remove the battery.

Step 4 — Back Panel

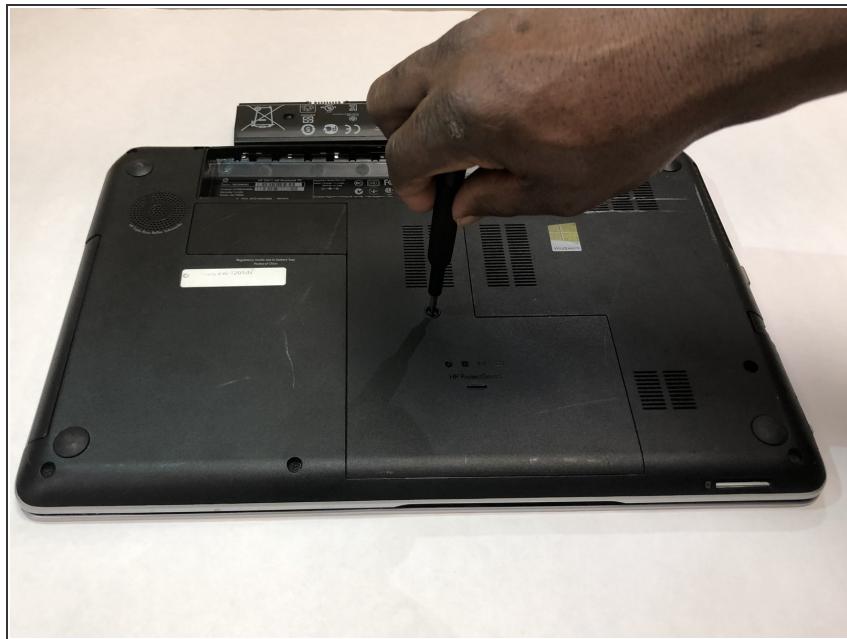

- Using a Phillips #1 screwdriver, remove the 8.6 mm screw.

Step 5

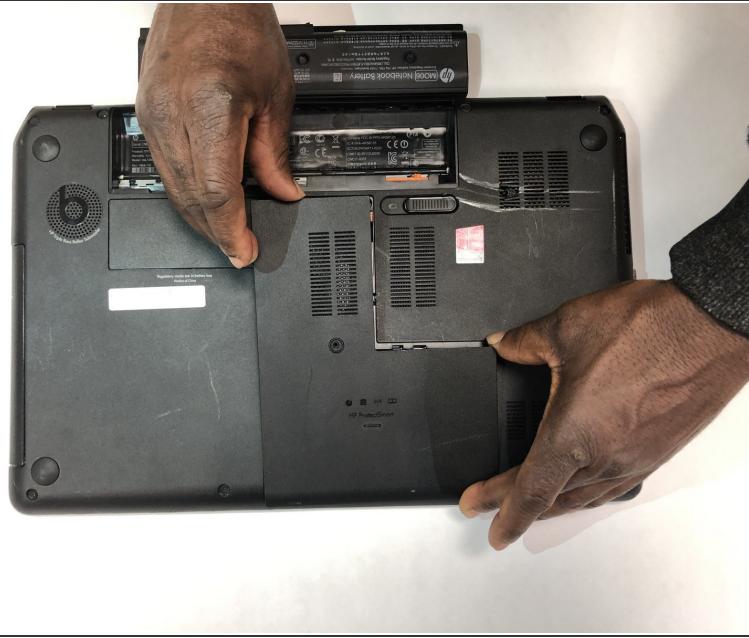


- Slide the center panel down to remove it.

Step 6 — RAM



- To release the RAM push out on the two release mechanisms holding it down.

Step 7

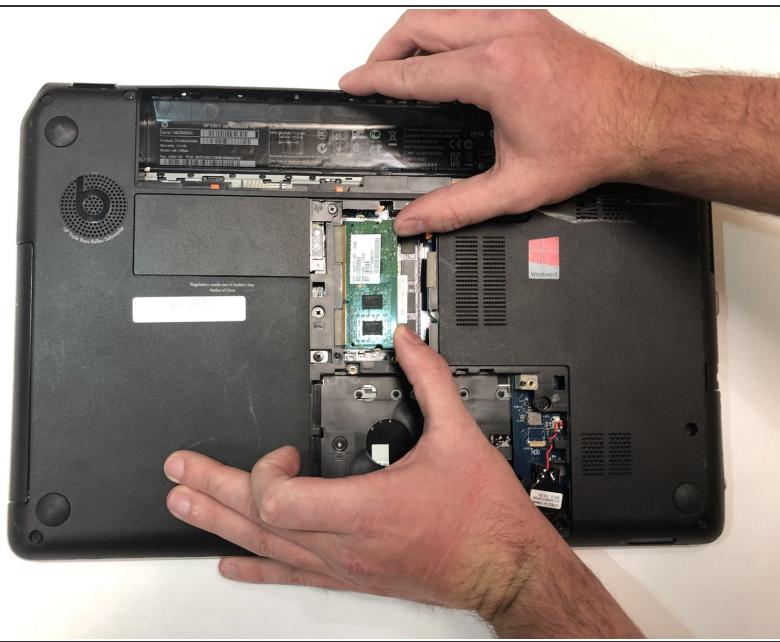


- Lift gently up on the RAM to position it for removal.

Step 8



- Gently pull the RAM out of its slot.

Step 9

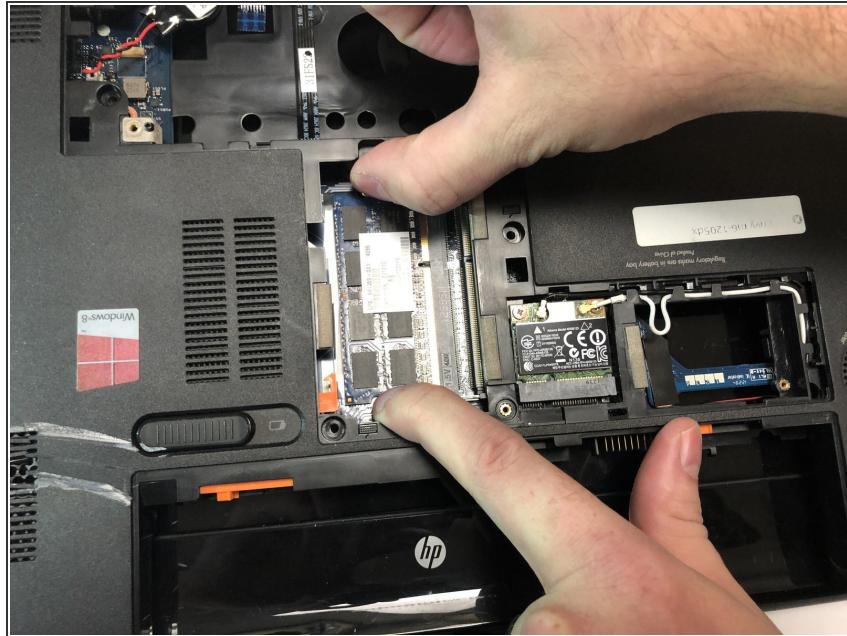

- Upon removing the first stick of RAM you will find a second RAM stick located beneath it.
- Release the second RAM stick by pushing the two release mechanisms outward.
- Pull the RAM stick out.

To reassemble your device, follow these instructions in reverse order.