


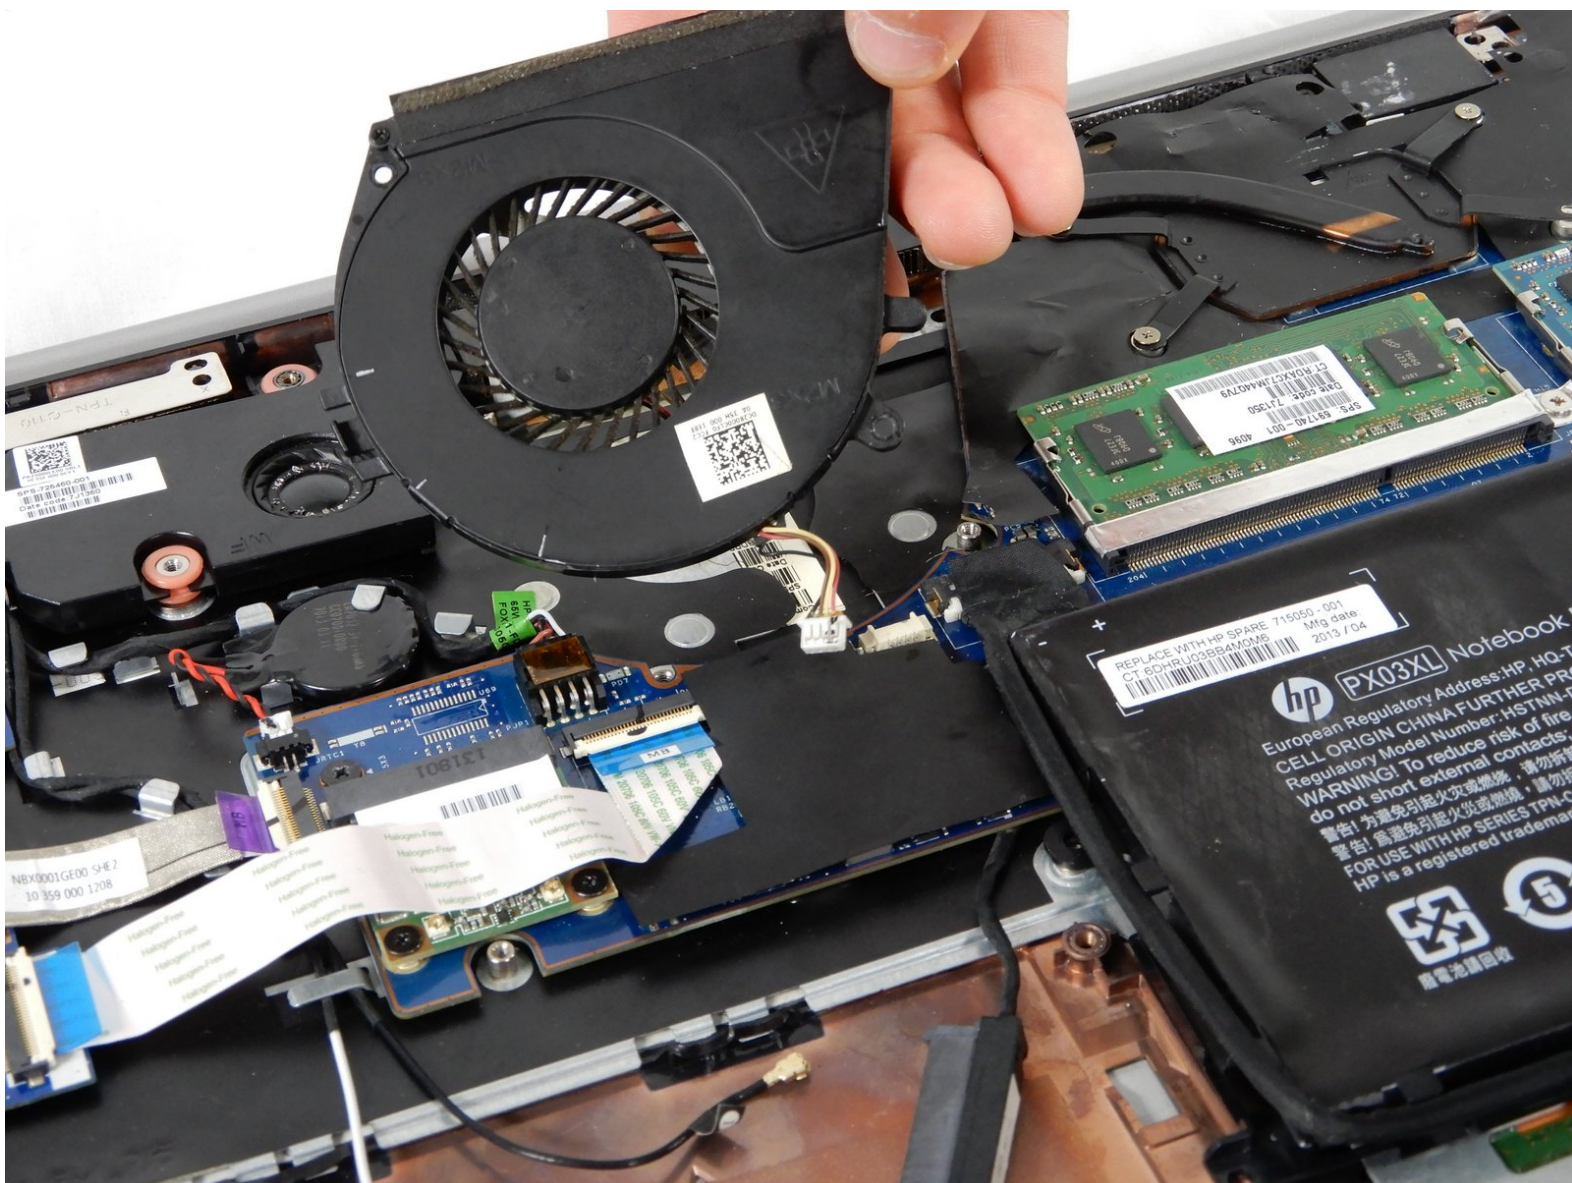

# HP Envy Sleekbook m6-k010dx Fan Replacement

This guide is to help you replace your fan on the HP Envy Sleekbook m6-k010dx.

Written By: Ana Novo



---

## INTRODUCTION

This guide is to help you replace your fan on the HP Envy Sleekbook m6-k010dx.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Remove the twelve 9 mm Phillips #00 screws.


## Step 2

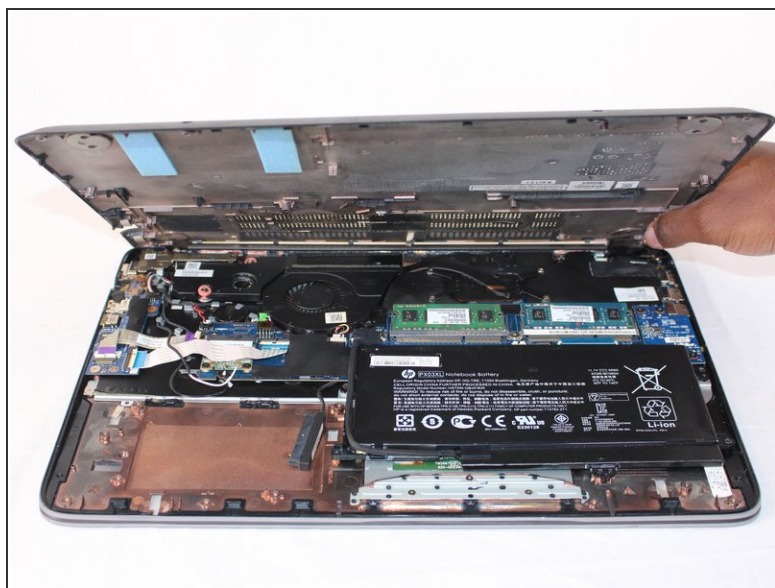

- Use the plastic opening tool and your hands to remove the bottom cover.




## Step 3

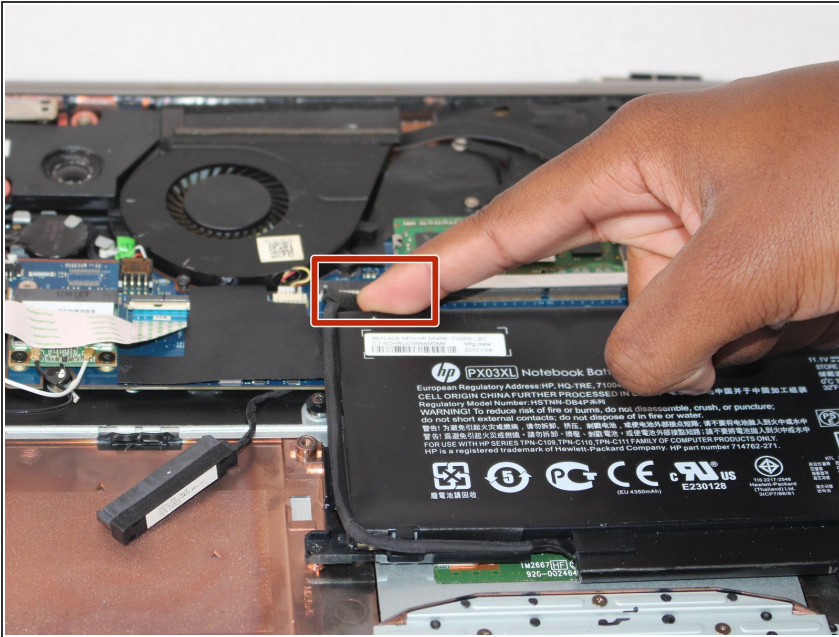


- Disconnect the battery power cable from the motherboard.

## Step 4

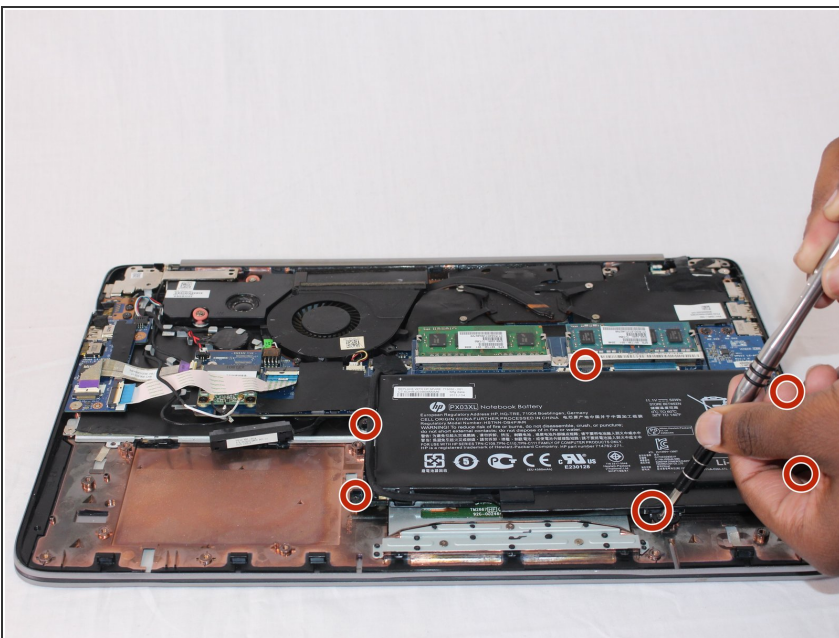


- Remove the six 6 mm Phillips #00 screws from the battery.

## Step 5

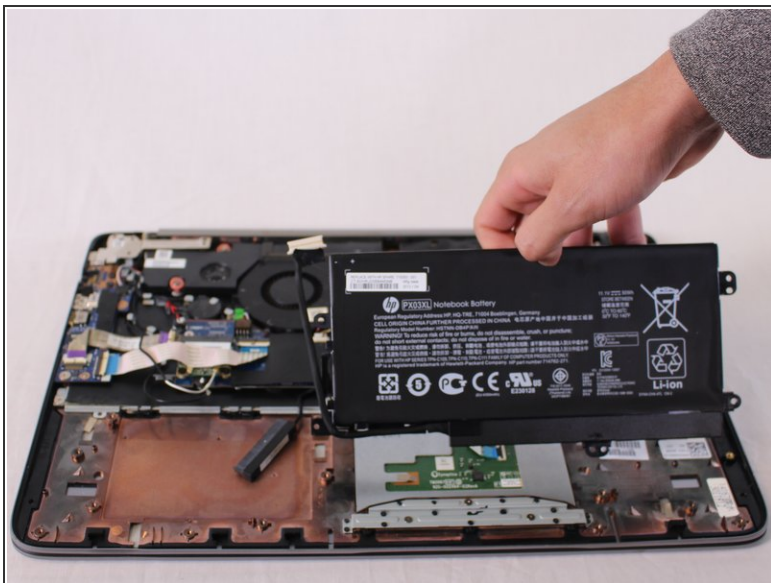

- Lift the battery out of the laptop.

## Step 6 — Fan

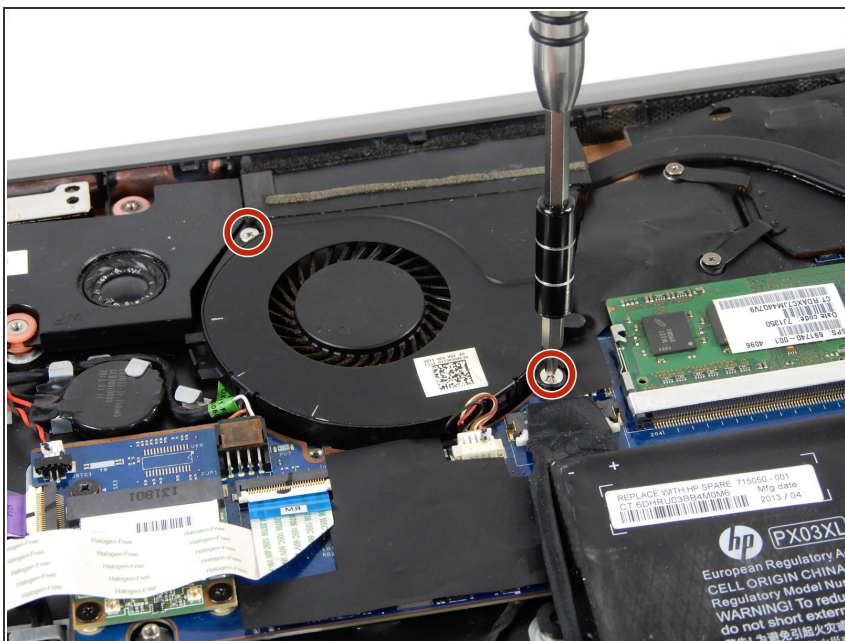

- Remove two 3mm Phillips #00 screws from the fan.




## Step 7



- Disconnect the fan cable by pulling it out of the motherboard socket.

## Step 8

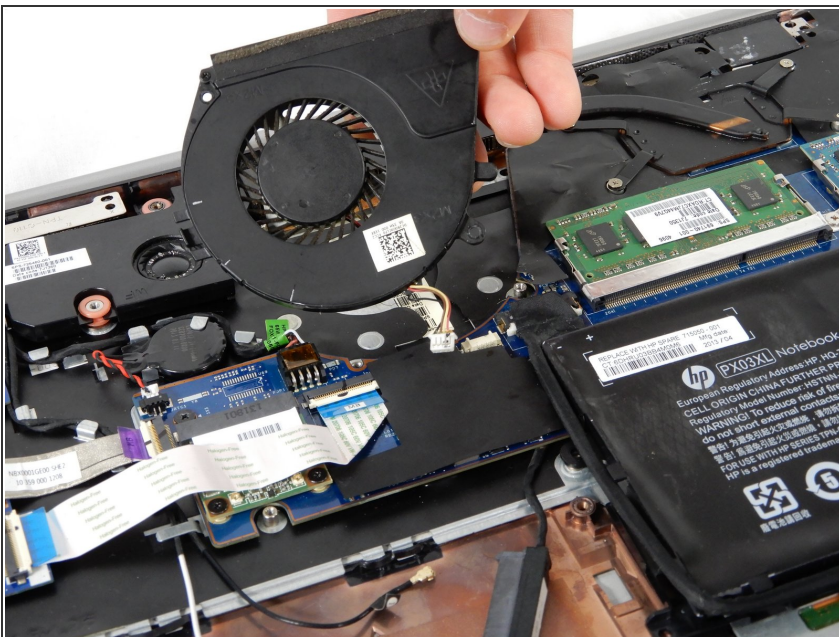

- Lift the fan upwards to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.