


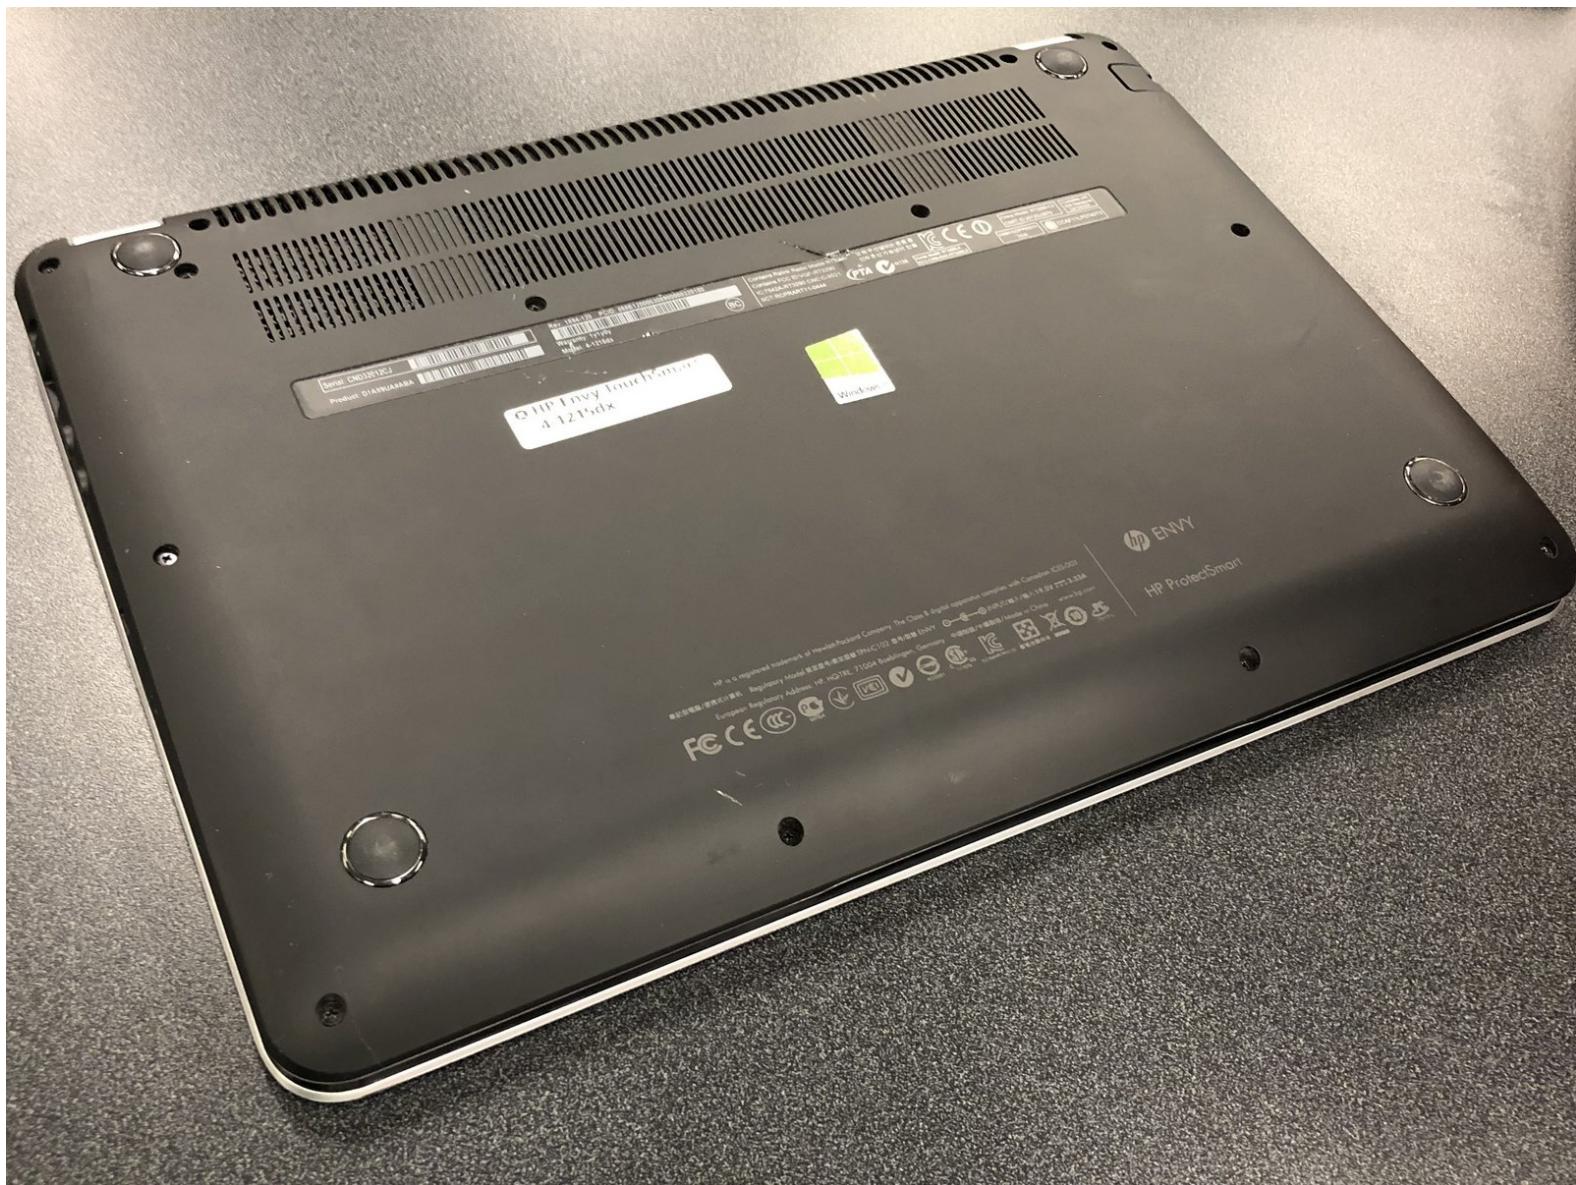

# HP Envy TouchSmart 4-1215dx Back Panel Assembly Replacement

A guide on how to properly remove and replace the back panel on the HP Envy TouchSmart 4-1215dx.

Written By: Jaewonhong



This document was generated on 2019-11-15 02:56:41 PM (MST).



## INTRODUCTION

A guide on how to properly remove and replace the back panel on the HP Envy TouchSmart 4-1215dx.

### TOOLS:



- Phillips #0 Screwdriver (1)

## Step 1 — Back Panel Assembly

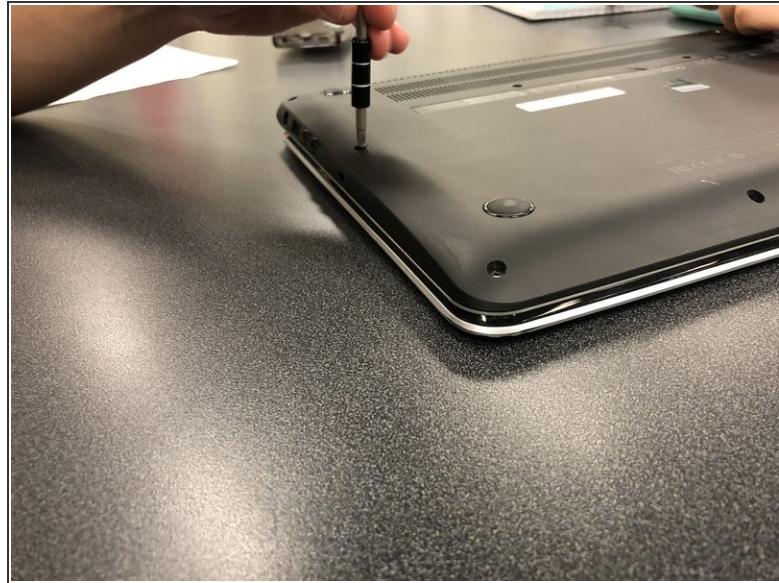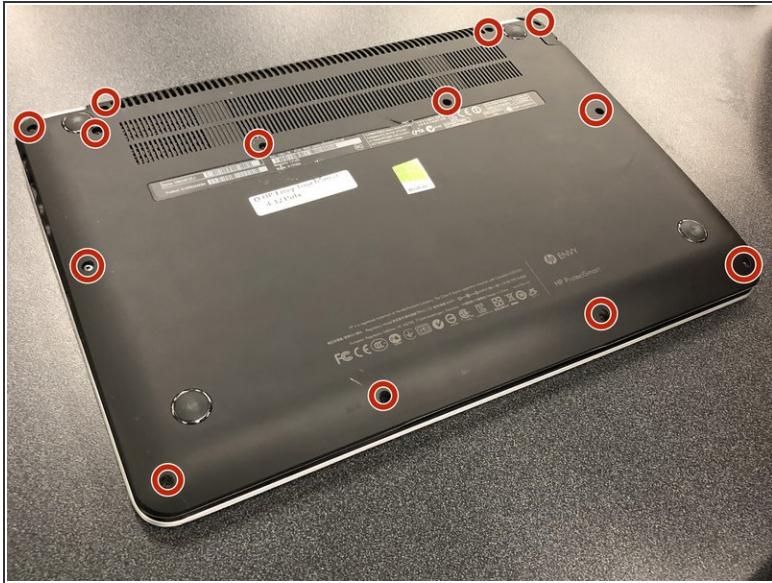

- Remove the thirteen Phillips #0 screws.

## Step 2

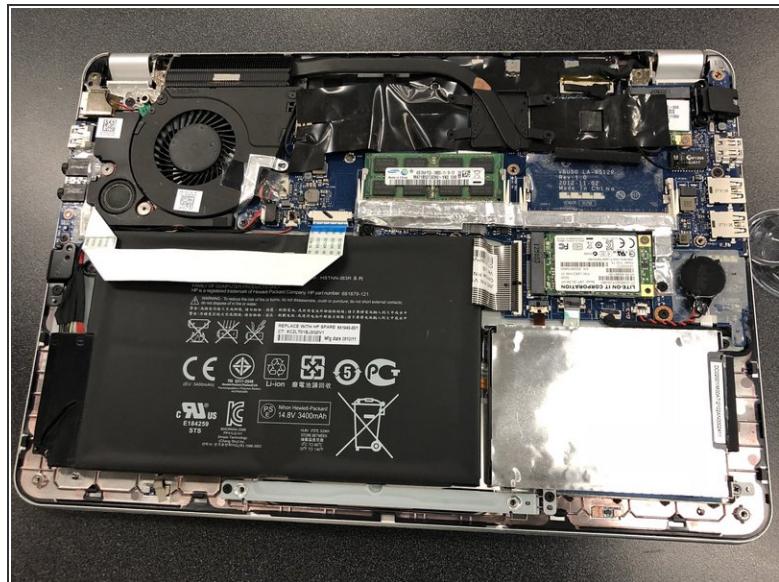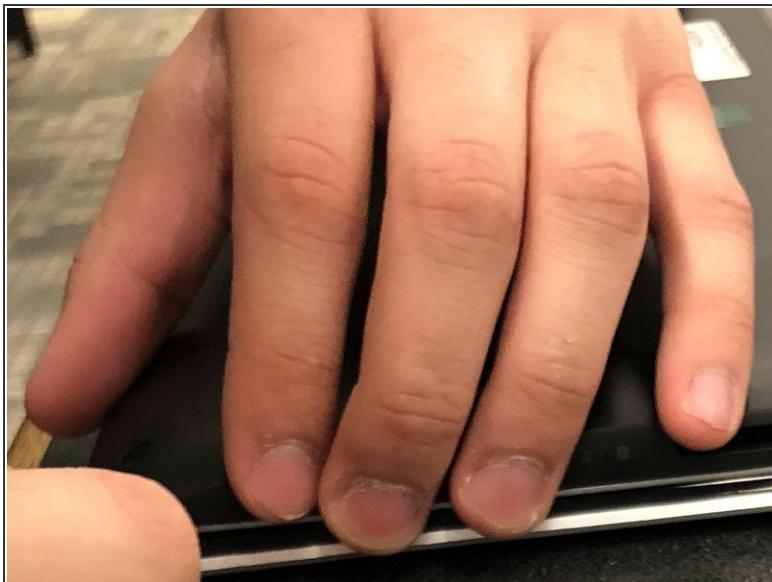

- Pull the panel up and off to remove from the laptop.

To reassemble your device, follow these instructions in reverse order.