



# HP Envy TouchSmart m7 k010dx Battery Replacement

Use this guide to replace the battery in your HP Envy TouchSmart m7 k010dx.

Written By: Owen Ou



## INTRODUCTION


This guide will walk you through the process of replacing a faulty battery in the HP Envy TouchSmart m7 k010dx.



## PARTS:

- [Replacement Battery \(1\)](#)

## Step 1 — Battery

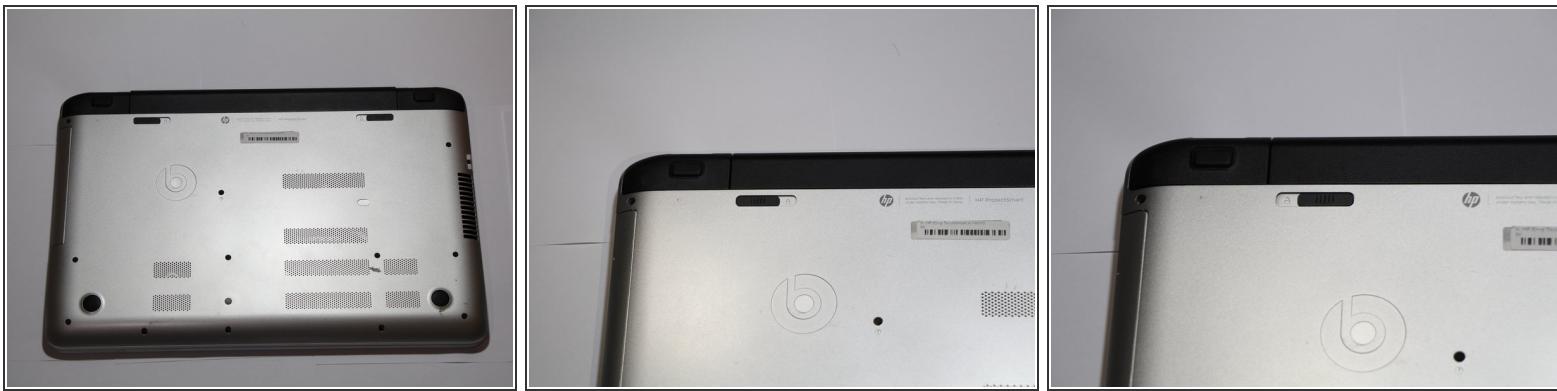


- Turn your computer over so that the bottom is facing up.
- Slide the left black switch towards center.
- You should see an unlock image exposed to the left of switch if done correctly.

## Step 2



- Slide the right black switch towards center to release the battery.

## Step 3

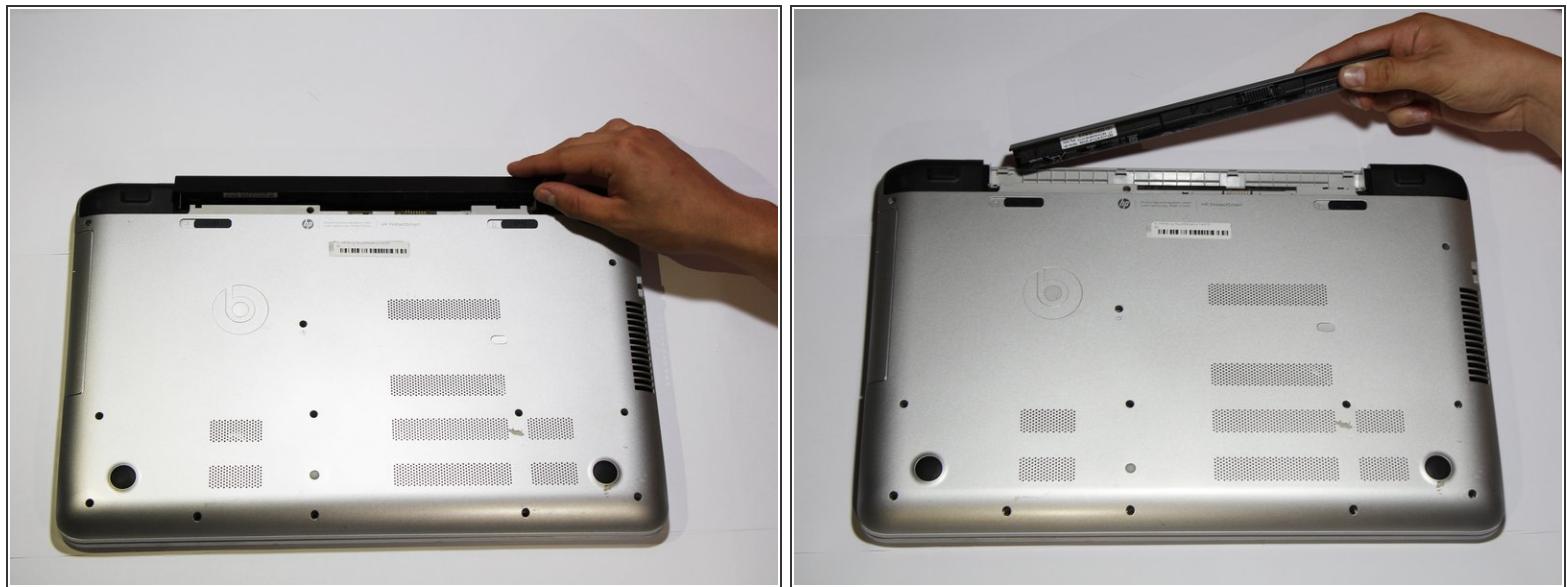

- Pivot the loose edge of the battery closes to you by pushing it toward the back of the computer.
- The battery should slide out freely.

**⚠** If battery is not pivoted before sliding out, you risk breaking interlocking tabs on the battery or computer.

To reassemble your device, follow these instructions in reverse order.