




HP Envy TouchSmart m7 k010dx Motherboard Replacement

Use this guide to replace the motherboard in your HP Envy TouchSmart m7 k010dx.

Written By: Owen Ou

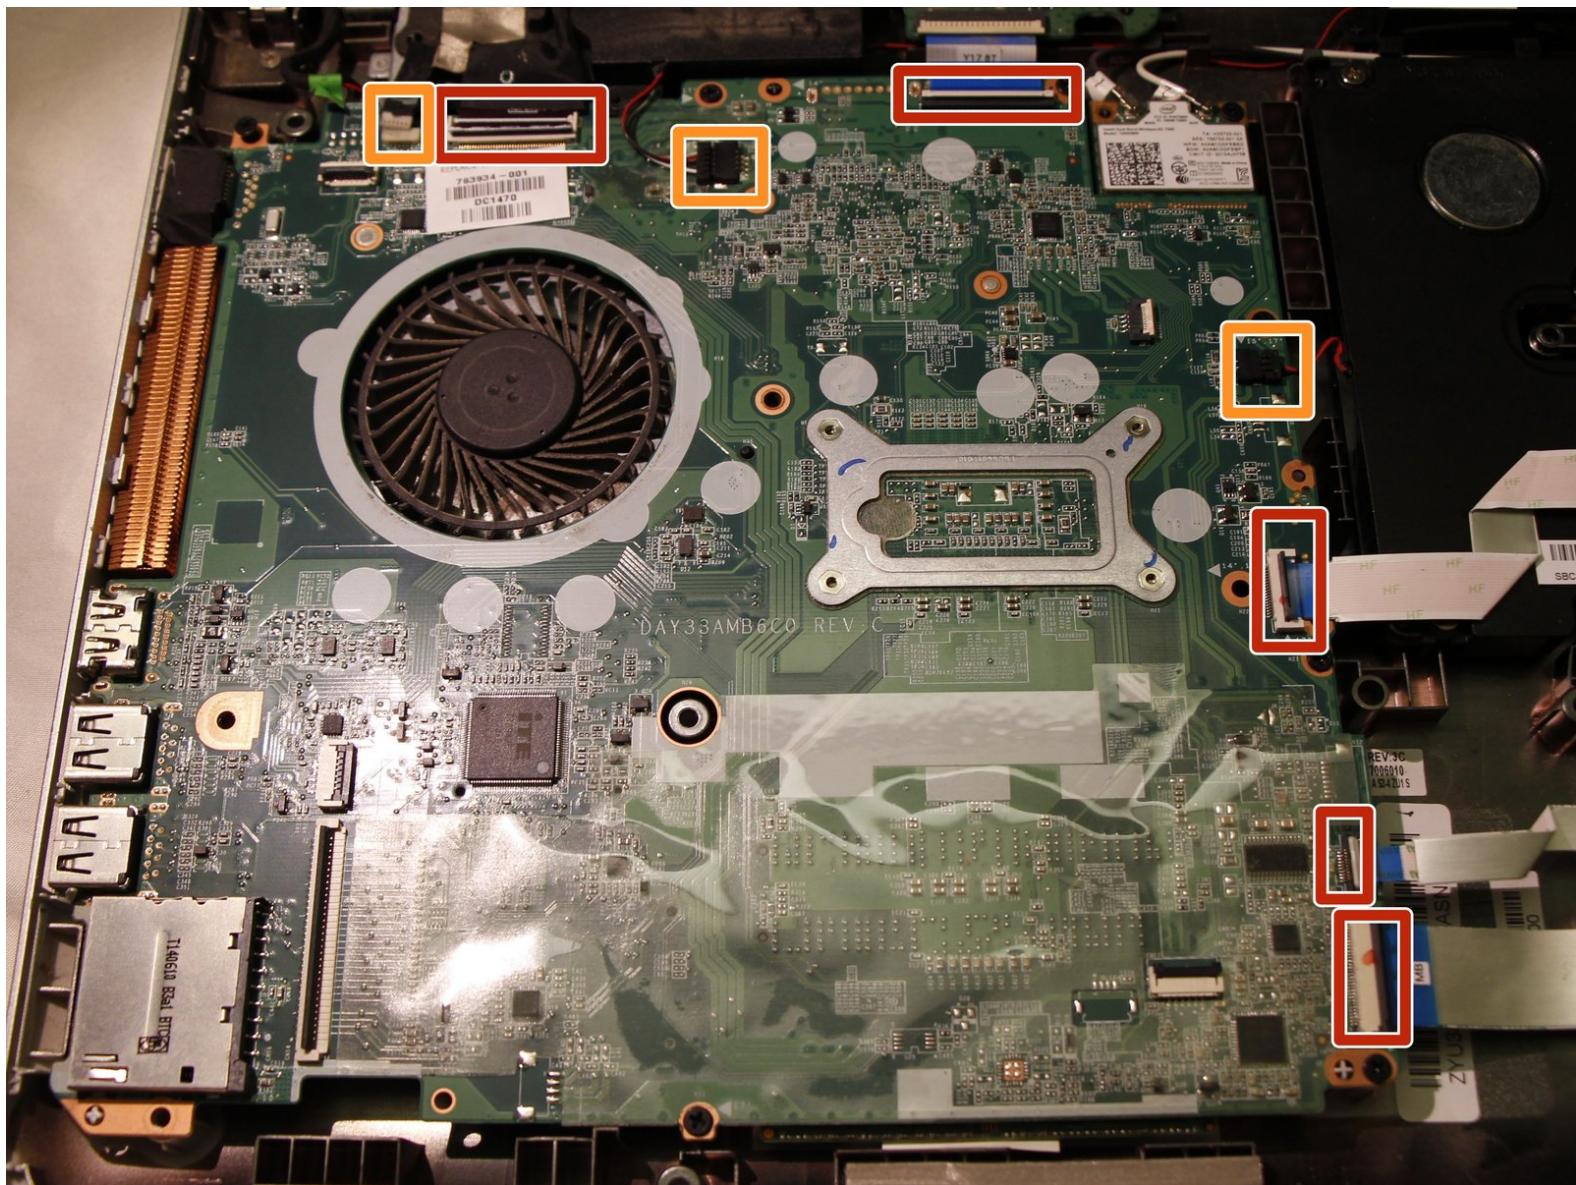

INTRODUCTION

This guide will walk you through the process of replacing a broken motherboard in the HP Envy TouchSmart m7 k010dx.


TOOLS:

- Plastic Cards (1)
- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- JIS #000 Screwdriver (1)
- Spudger (1)

PARTS:

- Replacement motherboard (1)

Step 1 — Battery

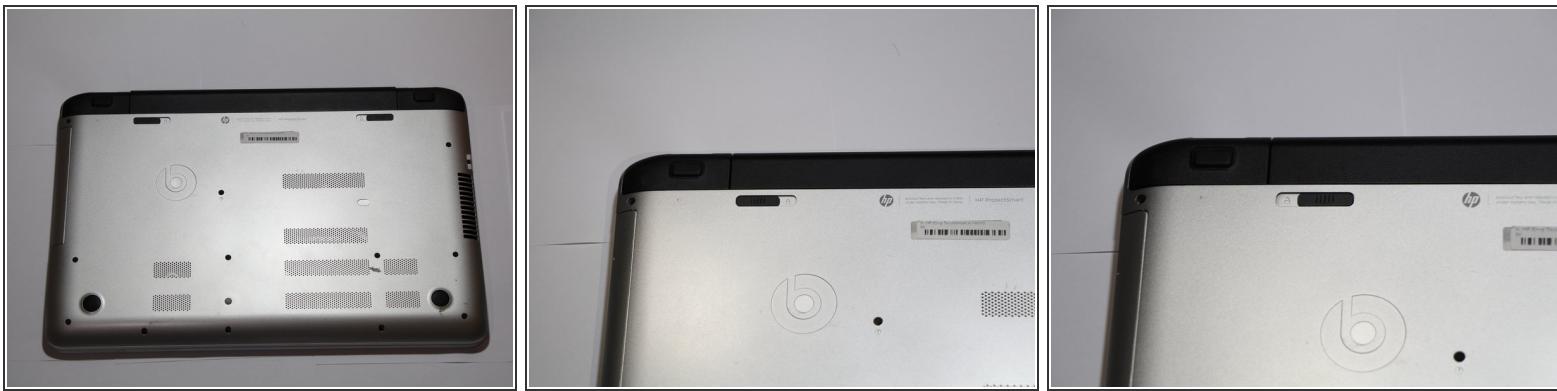


- Turn your computer over so that the bottom is facing up.
- Slide the left black switch towards center.
- You should see an unlock image exposed to the left of switch if done correctly.

Step 2



- Slide the right black switch towards center to release the battery.


Step 3

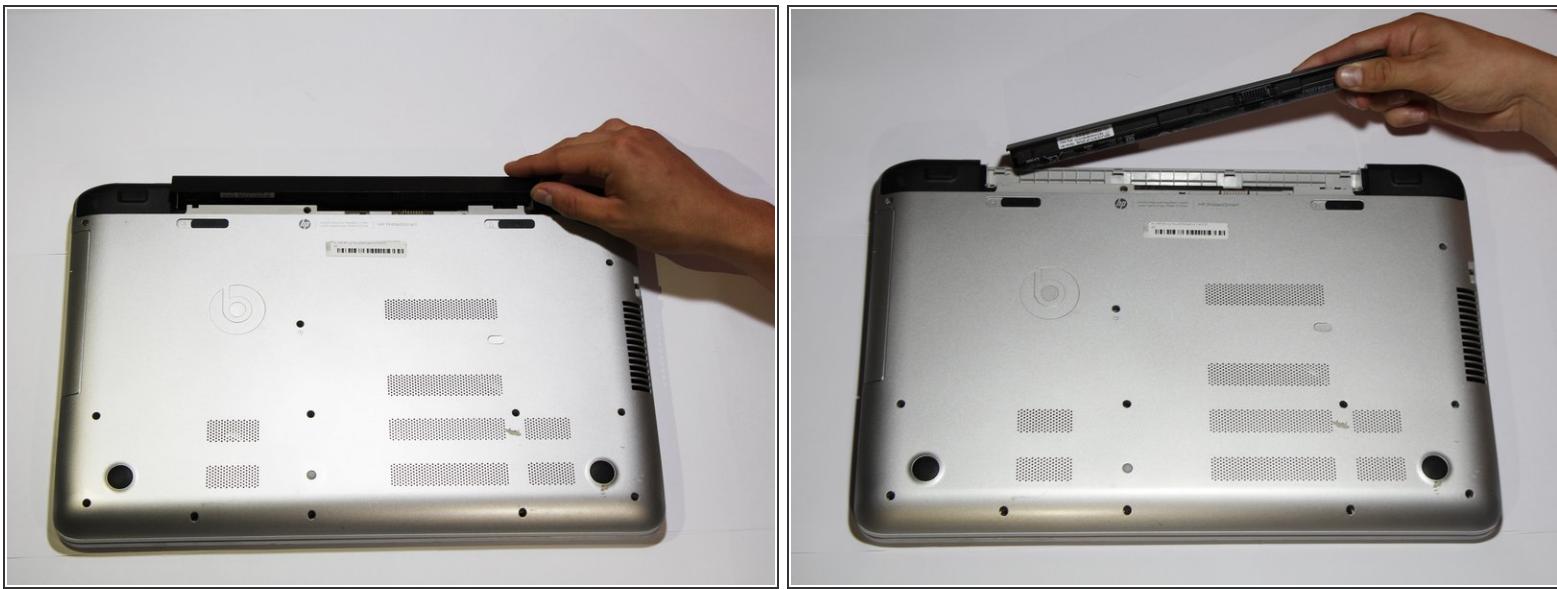

- Pivot the loose edge of the battery closes to you by pushing it toward the back of the computer.
- The battery should slide out freely.

! If battery is not pivoted before sliding out, you risk breaking interlocking tabs on the battery or computer.


Step 4 — Keyboard

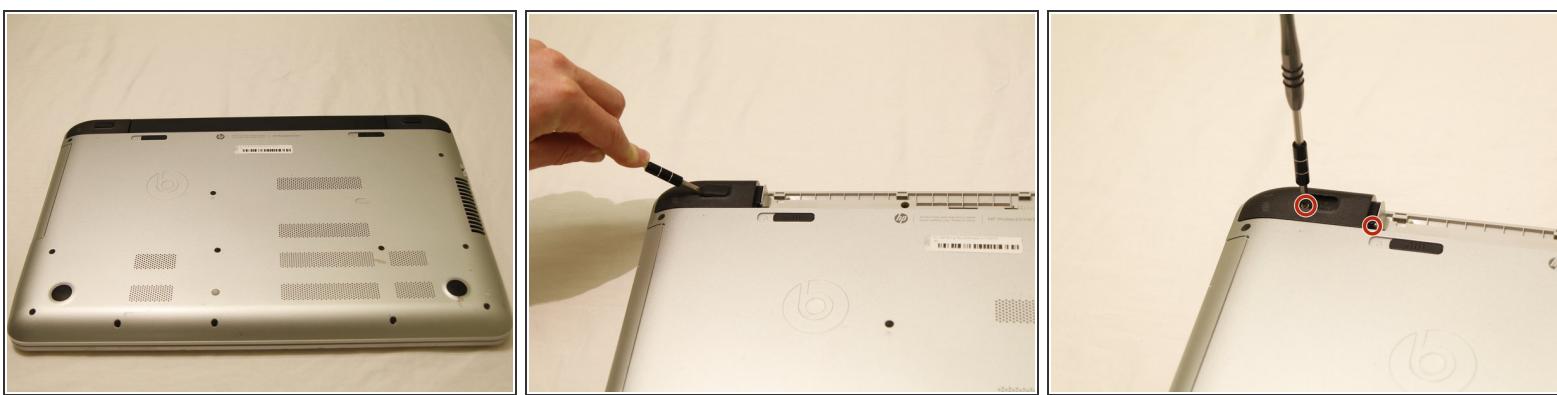

- With the computer turned over use a nylon spudger to pry the rectangular pads off to reveal two hidden screws.
- Using a Phillips #0 screwdriver, remove the screw that is beneath the black rubber pad, as well as the other holding down the black corner plastic pieces on both the left and right sides.

This document was generated on 2019-11-05 05:50:07 AM (MST).

Step 5

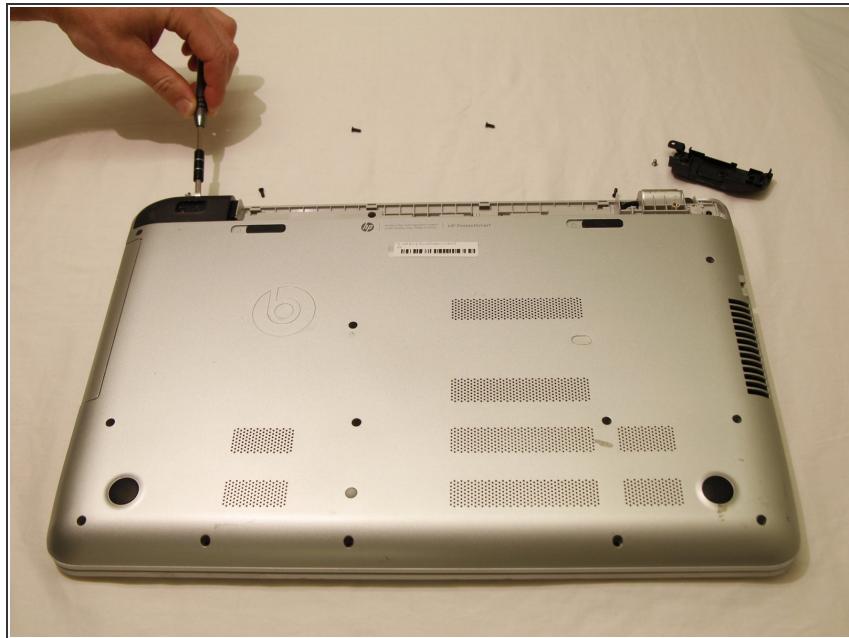


- Use a plastic opening tool to pop the corners off by wedging between casing. Do this for both legs as depicted in the picture.

Step 6




- Using the Phillips #0 screwdriver, remove the screw in the center of the computer, and to the right of the Beats logo.
- Use your fingernails to pull out the optical drive. It will have some resistance to start, but will come out easily afterwards.

Step 7

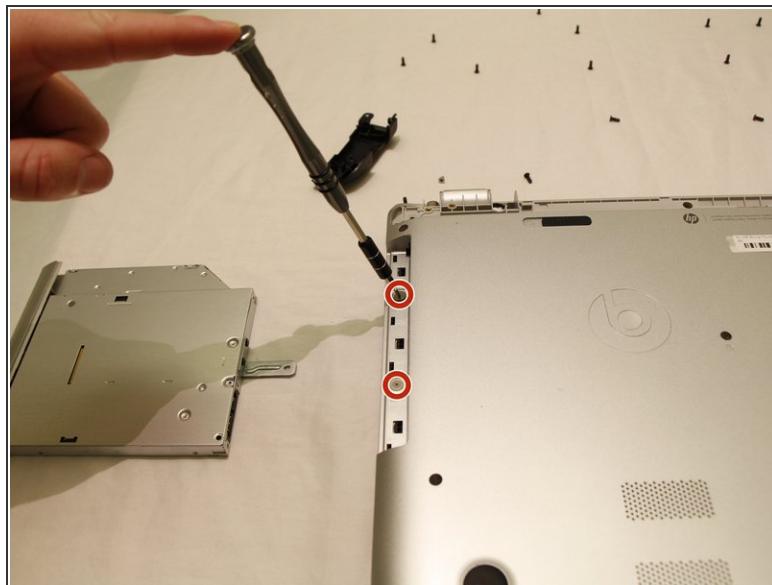

- Using a JIS #00 screwdriver, remove the two screws that were revealed when the optical drive was removed.
- Use a Phillips #0 screwdriver to remove all screws that are visible on the bottom.
- There is an oval tab near the center of the laptop, use the flat end of a nylon spudger to wedge it free to reveal another Phillips #0 screw.

Step 8

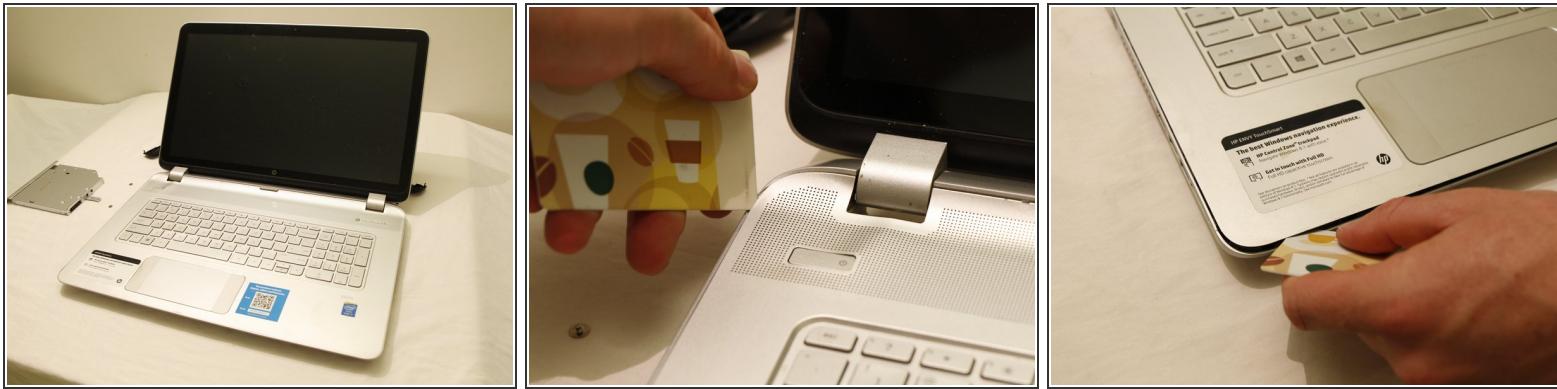

- Open up the laptop and set it down normally.
- Use a credit card or spudger to wedge between the top and bottom keyboard casing.
- Slide the card all the way around the laptop, making sure to pop free all tabs.

Step 9



- Place the computer on the backside of the screen, so that the bottom of it is pointing up into the air.
- *(i)* You may want to place a rag over the screen so that if the front panel touches it while being removed, no damage is caused.
- Carefully begin to separate the top case from the bottom case, as if you are opening it like a book from the edge nearest the touch pad.


This document was generated on 2019-11-05 05:50:07 AM (MST).

Step 10




- The two panels are connected with 4 flexible electrical ribbon strips. The ribbon strips have a locking tab that will need to be disengaged prior to removal. Using fingers, begin by removing the two strips nearest to the opening.
- Picture 3 shows the tab unlocked

Step 11

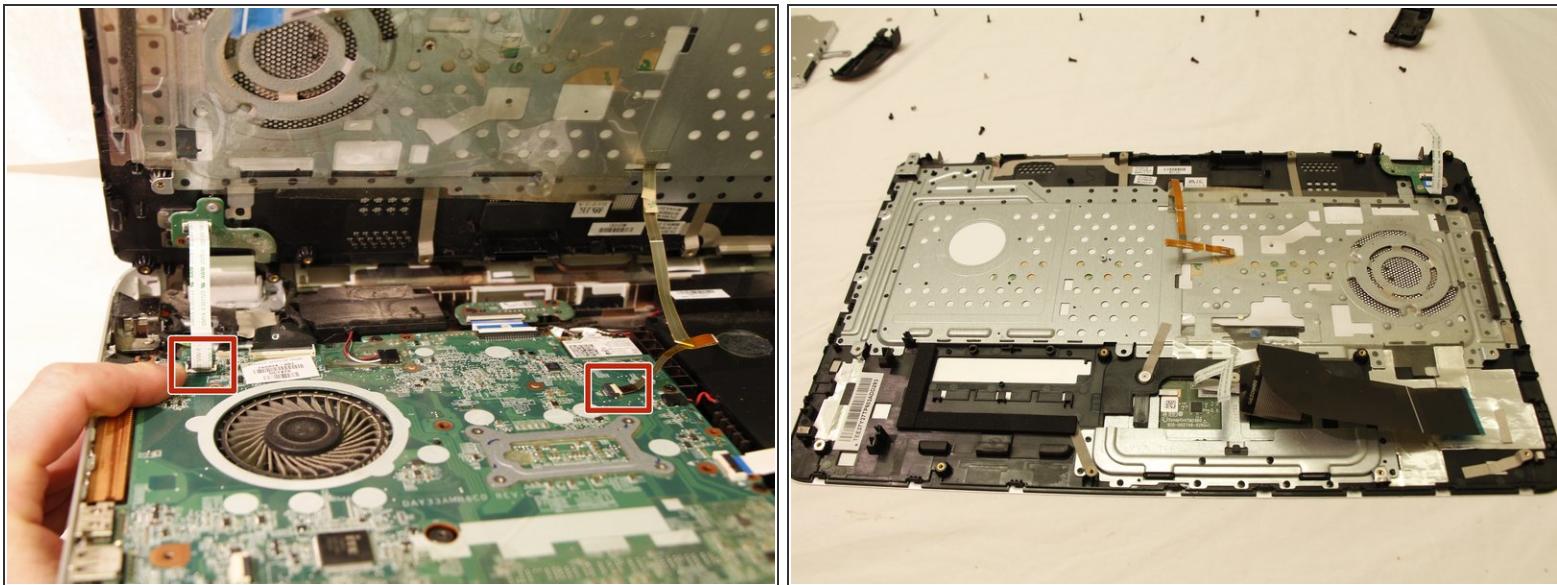

- With the two panels now separated, you can see the other two strips towards the back of the computer. With finger, carefully release each strip from the locking tab.
- Once all are unplugged, carefully remove the top case.

Step 12 — Motherboard

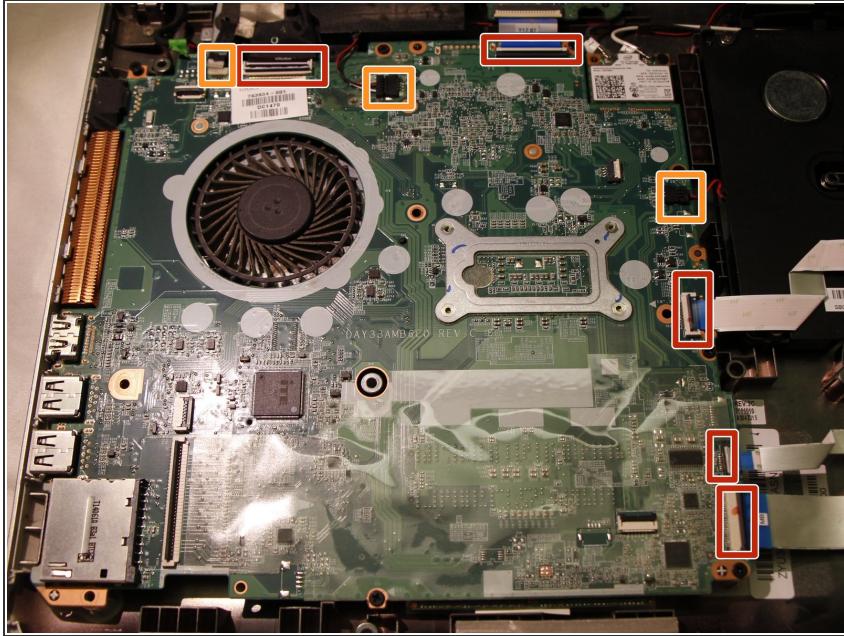


- There is a series of tabs that hold ribbon strips around the outside of the motherboard. Remove all of the tabs as you did when removing the front panel.
- To disconnect the 3 plugs, use your fingernails or the spudger to pry them free.
- Some of these connections may be covered with tape that will need to be removed to gain access to the tab.*

Step 13




- In the top right of the motherboard is the wireless card, which is separate from the motherboard.
- Remove the one screw on it and unplug the two antennae, then pop it up and pull it out gently.

Step 14

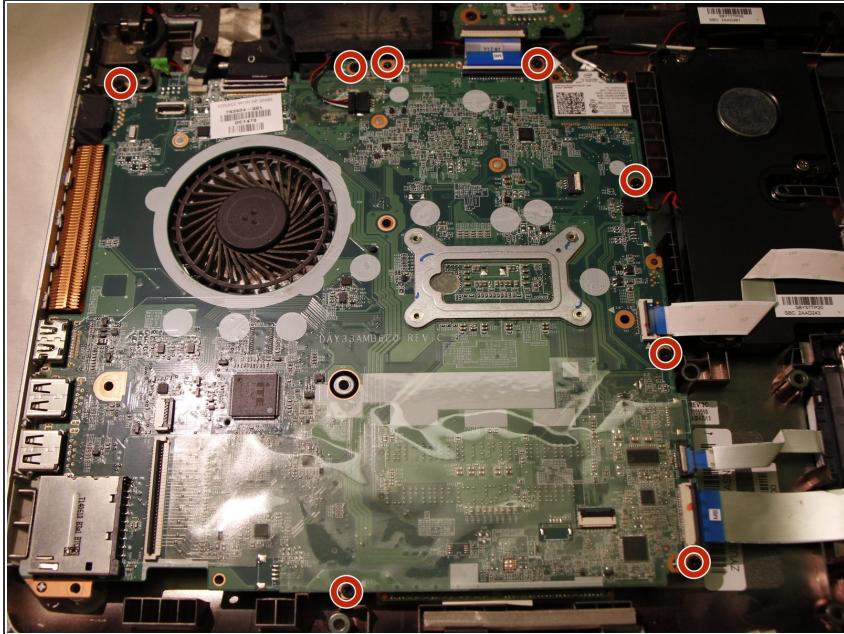

- Remove all screws around the outside of the motherboard.
- Pop the motherboard up, then gently remove it.

Step 15

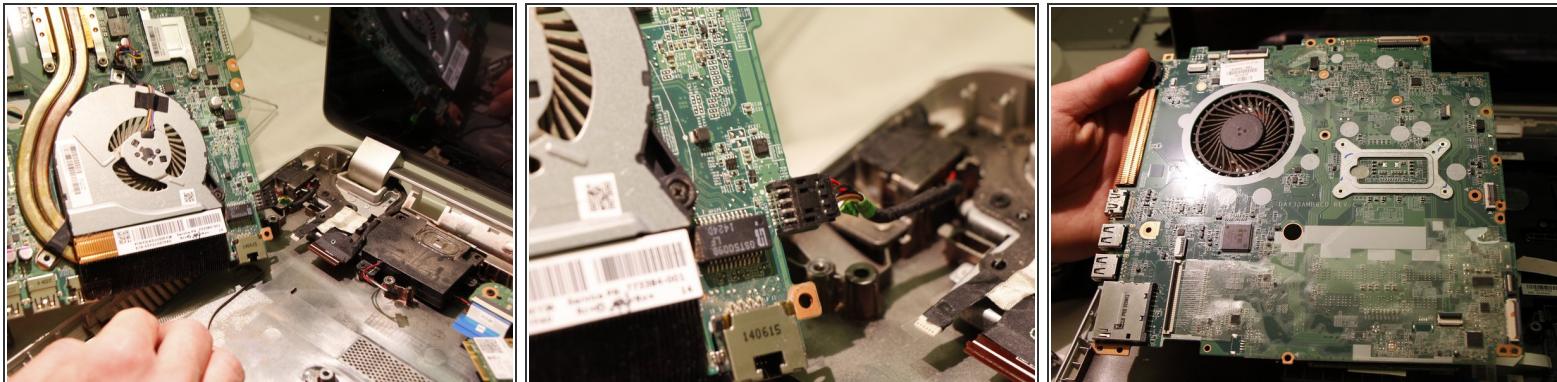

- Flip the motherboard over to find the power connection.
- Remove the connection.

To reassemble your device, follow these instructions in reverse order.