



HP Envy m6-1105dx Battery Replacement

Battery Replacement for the HP Envy m6-1105dx.


Written By: Ian Mwalago



INTRODUCTION


This is a simple procedure to remove and replace your battery. You won't need any tools for this step. Simply slide the battery release lever and lift out the battery.

Step 1 — Battery

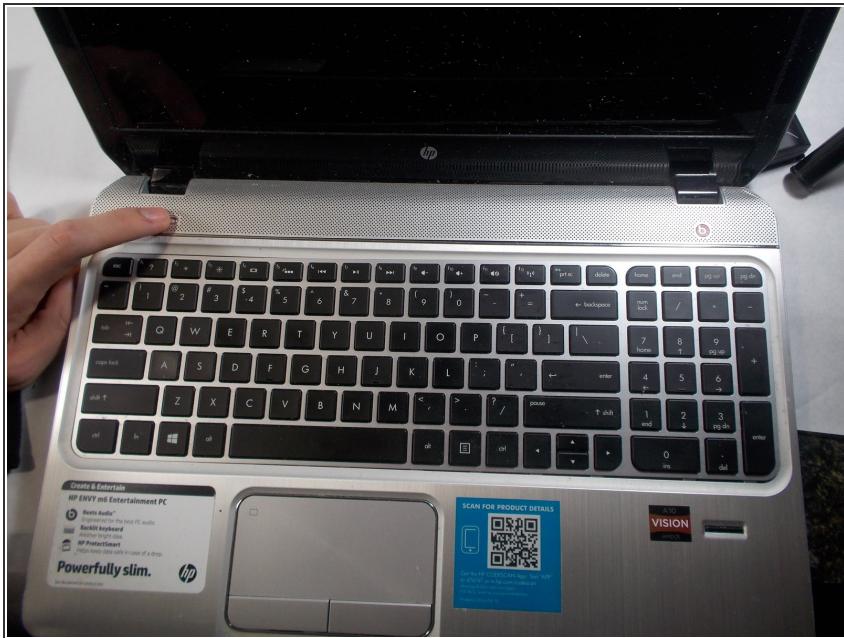

- Turn the computer completely off.
- Disconnect any devices you have on it.
- Turn the computer upside down on a flat surface.

Step 2

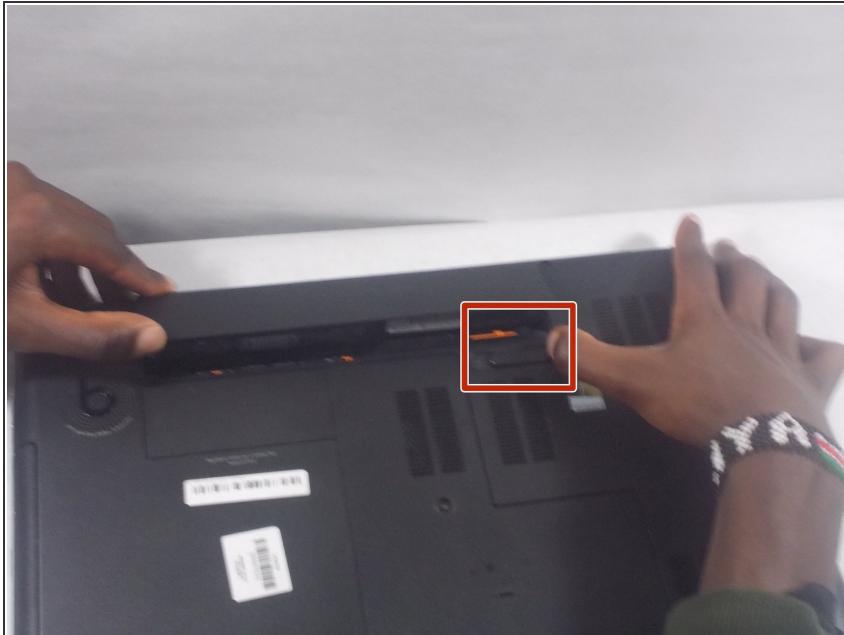

- Push the battery release latch with one hand.
- Grab the battery with the other hand.
- Lift out on an angle.

To reassemble your device, follow these instructions in reverse order.