



HP Flyer Red Battery Replacement

In this replacement guide we are going to show you how to take out and replace the battery on your laptop.


Written By: Anthony Ciotti



INTRODUCTION

We will show step by step progression of how to unlock the battery and remove it. This guide will help you understand the fundamentals of a battery replacement with this HP laptop. This guide is useful if you have a new battery and are looking to swap it out with the old one.


Step 1 — Battery

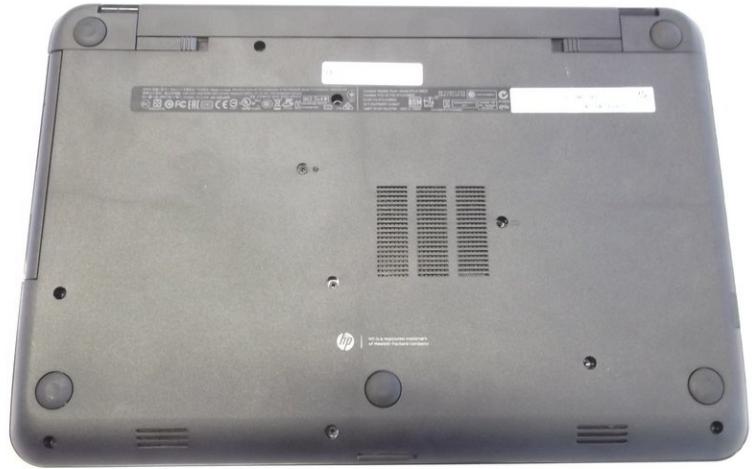

 Make sure your laptop is powered off.

- With laptop closed flip to look at the underside of the laptop.

Step 2

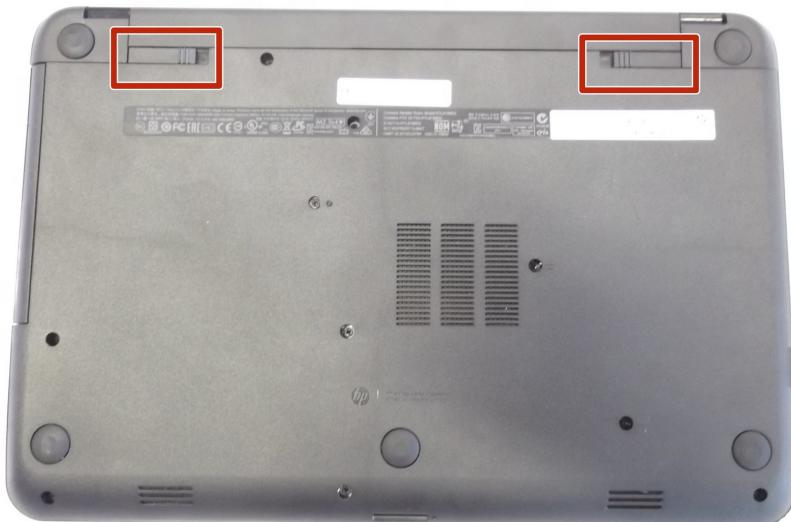

- On the underside of the laptop towards the hinge for the screen there are two rectangular slide switches located inside of rectangular tracks.

Step 3



- The left switch is the battery unlock switch.
- Inside the rectangular track of this switch there is an image of a closed lock that should be visible. Push this switch to the other end of the track and an image of an open lock should be visible.

Step 4



- Then take and slide the other switch to the other end of its track which will pop out the battery.
- Grab the battery and pull it out of the slot.

To reassemble your device, follow these instructions in reverse order.