




# HP G60-443CL Battery Replacement

Replacing the battery will solve the problem of a computer not being able to turn on.

Written By: Alora Allen

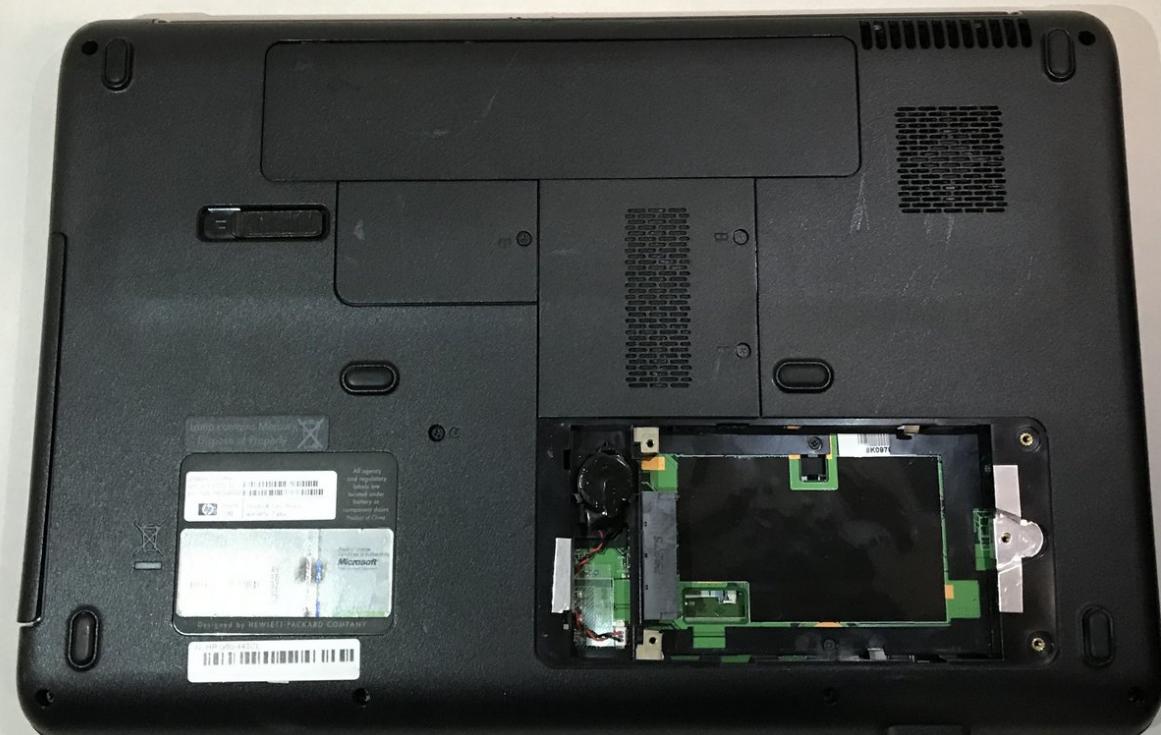

## INTRODUCTION

A defective battery could be the reason for replacing a battery; however, it is also possible that the battery has not been handled with care or that it has exceeded its maximum life. Removing the battery is very simple and requires no tools. Pressing buttons on the side will release the battery from the computer.

## TOOLS:


- Fingers (1)

## Step 1 — Battery



- Place the laptop upside down where the headphone and auxiliary jack are facing you.

## Step 2

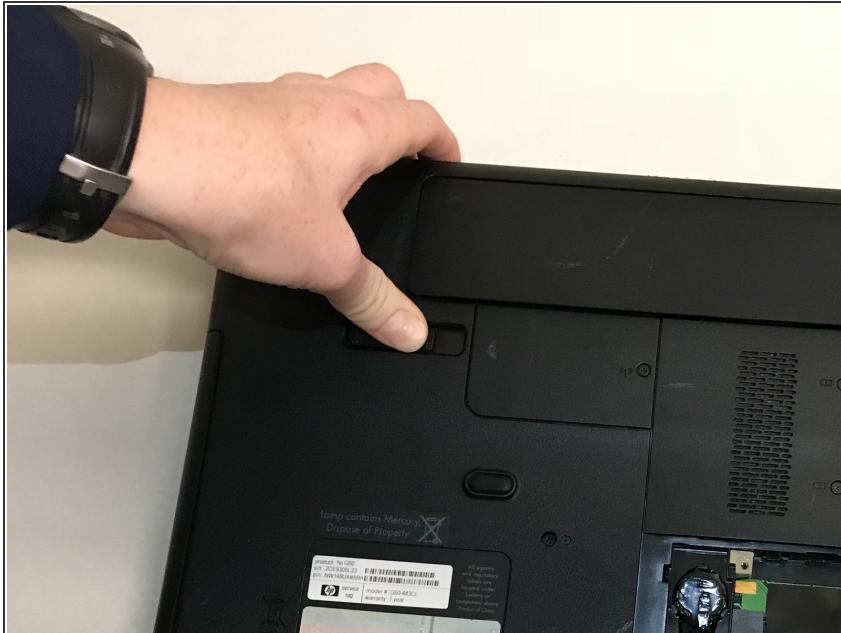

- In the top left corner, there is a lever that has a small picture of a battery on it. Slide the lever to the left.

## Step 3



- Once you have slid the lever to the left, the front part of the battery will be released and you should be able to grab the released part of the battery with your thumb.

## Step 4



- The battery can then be pulled out of its compartment by hand.

To reassemble your device, follow these instructions in reverse order.