



HP G60-443CL RAM Replacement

This guide will describe how to replace the RAM to solve the problem of the laptop freezing.

Written By: Samantha




INTRODUCTION

Failure for the computer to start up and show a constant black screen will likely be an issue concerning the RAM. The tool needed for this process is a Philips Head #0 screwdriver in which you will unscrew two screws on the outside and press on two levers on the inside. After this process is done delicately, the RAM can be removed.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — RAM

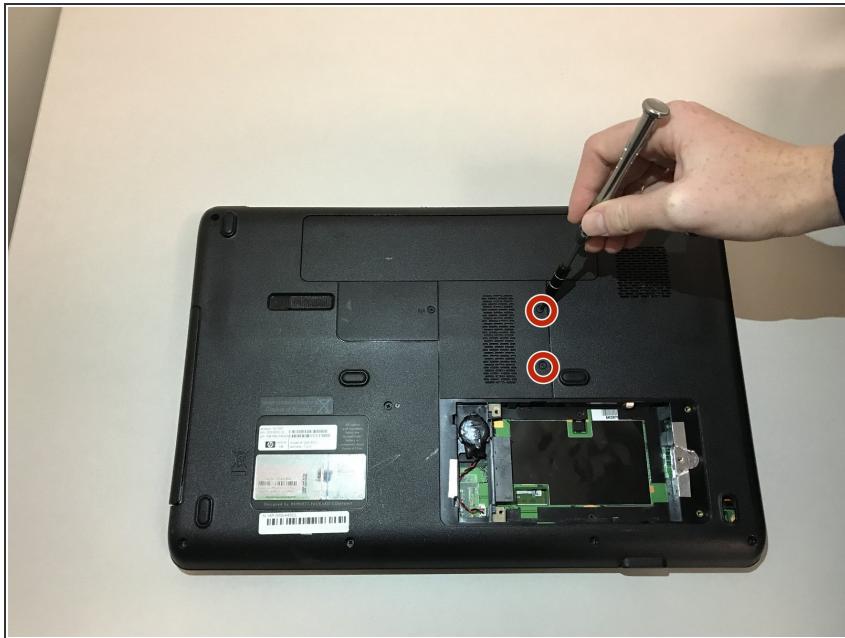


- Unscrew and remove the two 5mm Philips #0 screws that keep the cover on.

Step 2



- Remove cover.

Step 3

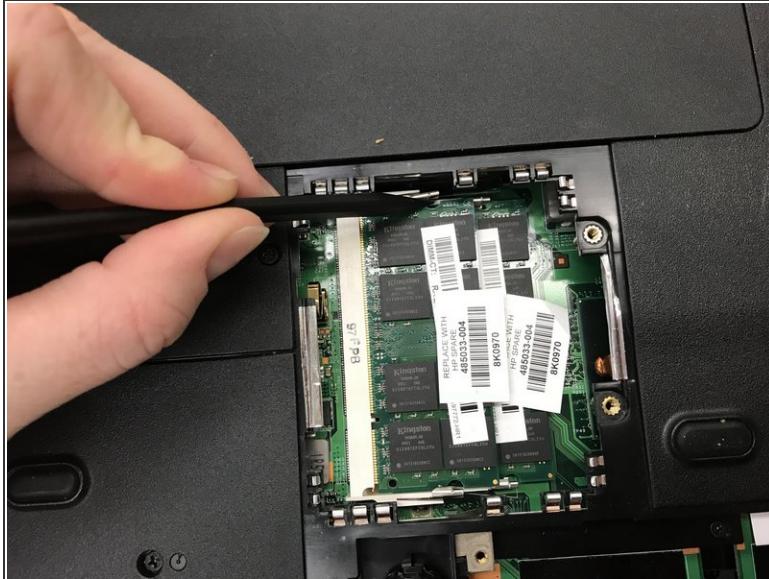


- Press on the two levers on either side of the first RAM.
- The RAM will pop up if the levers have been pushed properly.

Step 4



- Gently remove the first RAM.

Step 5

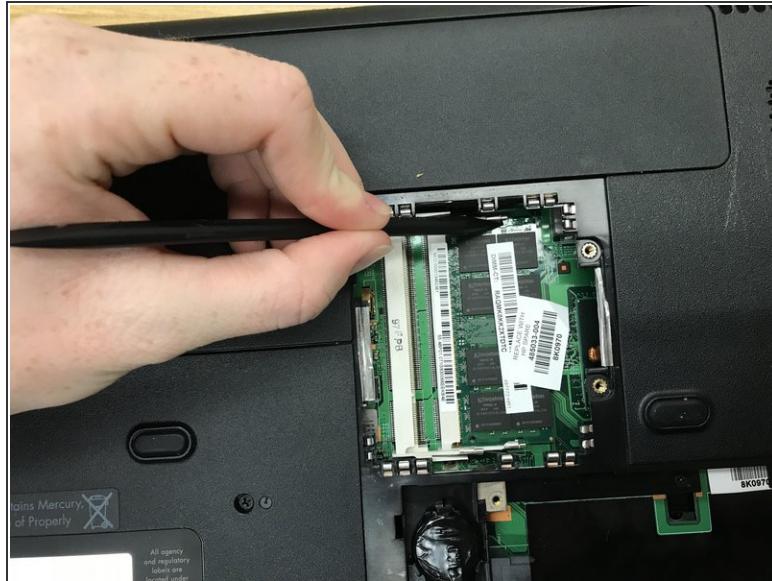

- Repeat steps 1-4 for the second RAM.
- After gently taking the second RAM out, the RAMs have successfully been removed.

To reassemble your device, follow these instructions in reverse order.