


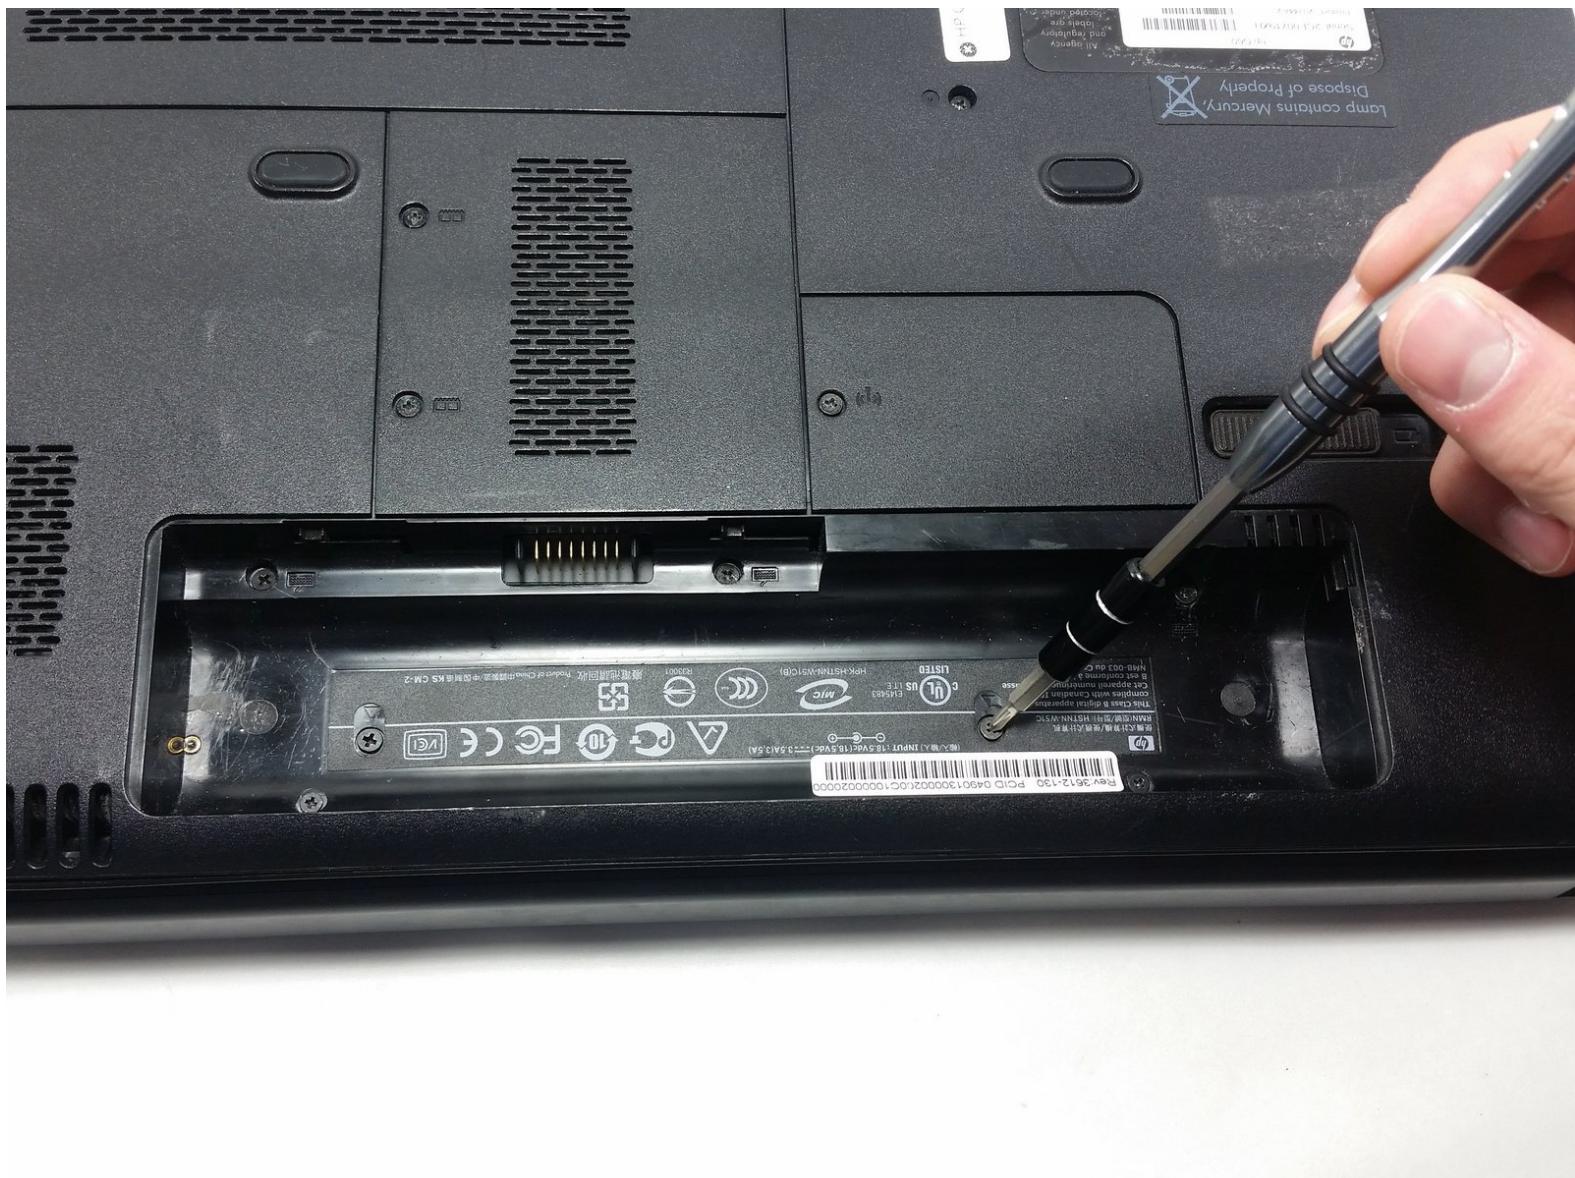

# HP G60T-600 CTO Keyboard Replacement

This guide will show you how to replace your broken or malfunctioning keyboard on this device.

Written By: Dominic DeSantis



## INTRODUCTION

If you have a broken or malfunctioning keyboard on the device, this is your guide.

### TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Battery



⚠ Failure to remove the battery before performing any replacement guide may result in electric shock.

- Close your device, then turn it over.

## Step 2




- Place your index finger on the ridged tab.

## Step 3




- Apply moderate pressure to the tab and slide it to the right.
- While the tab is on the right, you should be able to gently slide your battery out of your device.

## Step 4 — Keyboard

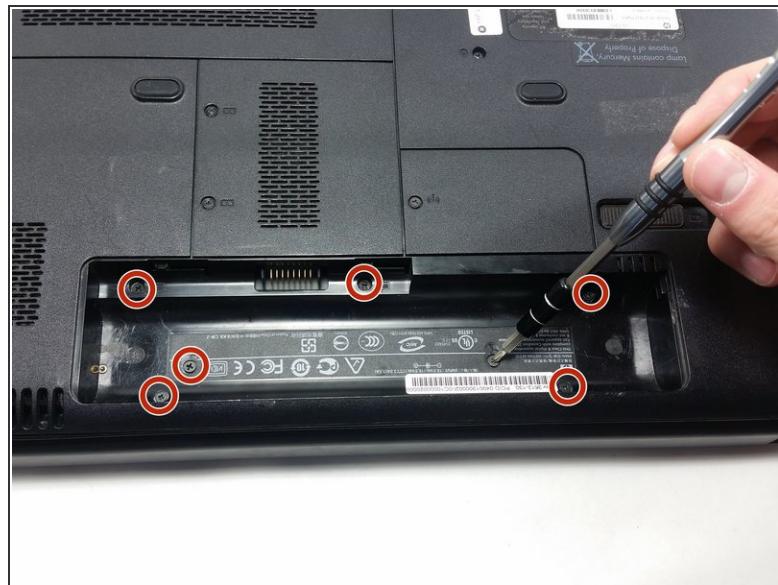


- Unscrew the following 5mm screws with a #0 Phillips screwdriver.

## Step 5

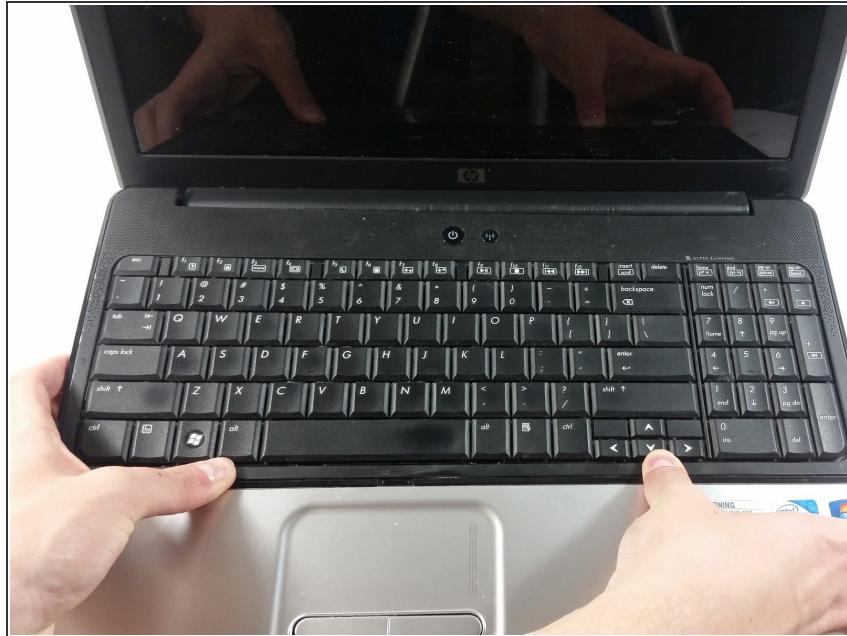

- Turn your laptop over and open it up.
- Grip your laptop firmly from both sides and use your thumbs to slide the keyboard towards the screen.

## Step 6

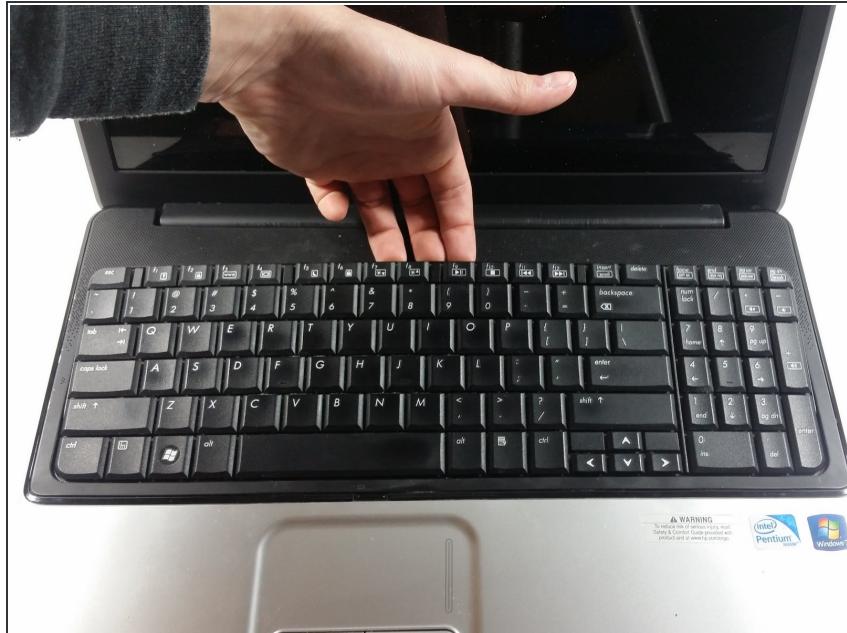


- Pull up on the top of your keyboard with medium force. It should start to pop out.

**i** A plastic opening tool may facilitate this task.

- Run your hands underneath the edges of the keyboard until it is free from the device.

**!** Do not pull hard to take the keyboard out. There is a small connection that needs to be undone.

## Step 7

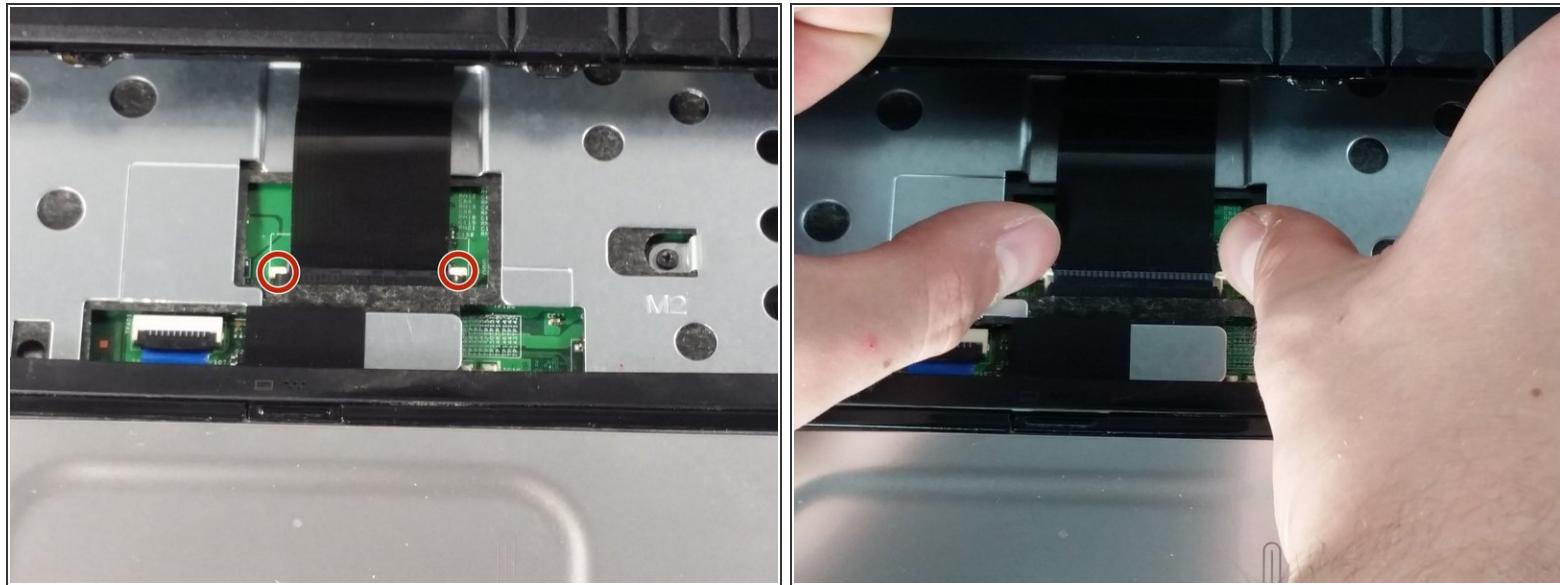

- Place your thumbs on the two small, white tabs.
- Push these tabs forward to release the connection and free the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.