



HP G60T-600 CTO RAM Replacement

This guide will show you how to replace/upgrade RAM for this device.

Written By: Dominic DeSantis



INTRODUCTION

You will be removing a small plastic cover to get to your device's RAM, then with a couple short steps you will be able to remove it.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery



⚠ Failure to remove the battery before performing any replacement guide may result in electric shock.

- Close your device, then turn it over.

Step 2



- Place your index finger on the ridged tab.

Step 3



- Apply moderate pressure to the tab and slide it to the right.
- While the tab is on the right, you should be able to gently slide your battery out of your device.

Step 4 — RAM



- Turn your device over and orient it so the battery is facing you.

Step 5



- Unscrew the following 5mm screws using a Phillips head #0 screwdriver.
- Remove the cover.

Step 6



- Place your fingers on little metals tabs on both sides of the RAM casing.
- Push the tabs towards the sides. This should cause the RAM to pop up.

Step 7



- Pull on it with medium force at the angle it is oriented.

To reassemble your device, follow these instructions in reverse order.