



HP G62 347NR CD/DVD Drive Replacement

This guide will show users how to replace the CD/DVD Drive (also known as the optical drive) for an HPG62-347NR laptop.

Written By: McKenzi Morris




INTRODUCTION

This guide will show users how to replace the CD/DVD Drive for the device. You will need a Phillips #1 screwdriver and a plastic prying tool.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)


Step 1 — CD/DVD Drive

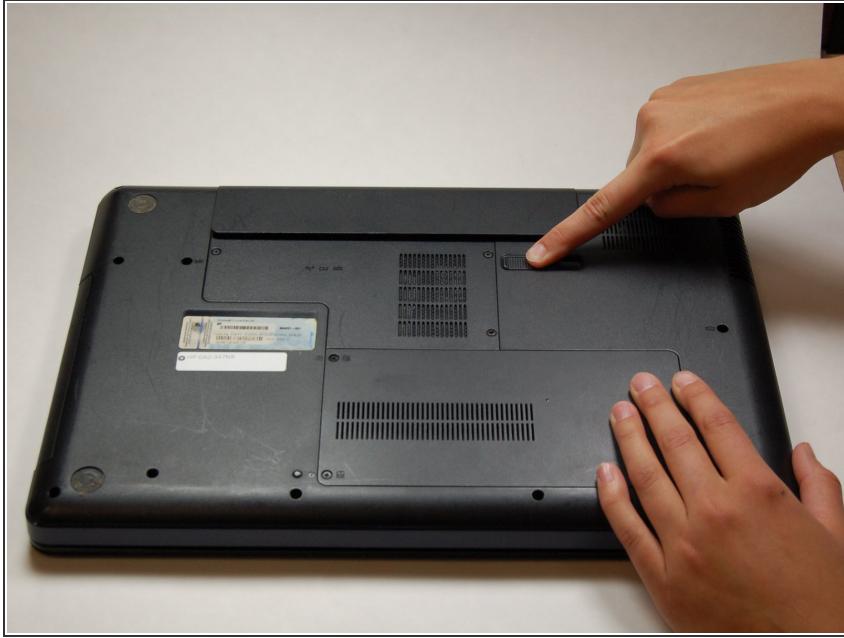

! Make sure the device is turned off before removing the battery to avoid loss or corruption of files.


- Turn the device over so the bottom is facing up.
- Slide the battery release to the left until you hear a click.
- Once you hear a click, the battery will have been released from the battery compartment.

Step 2

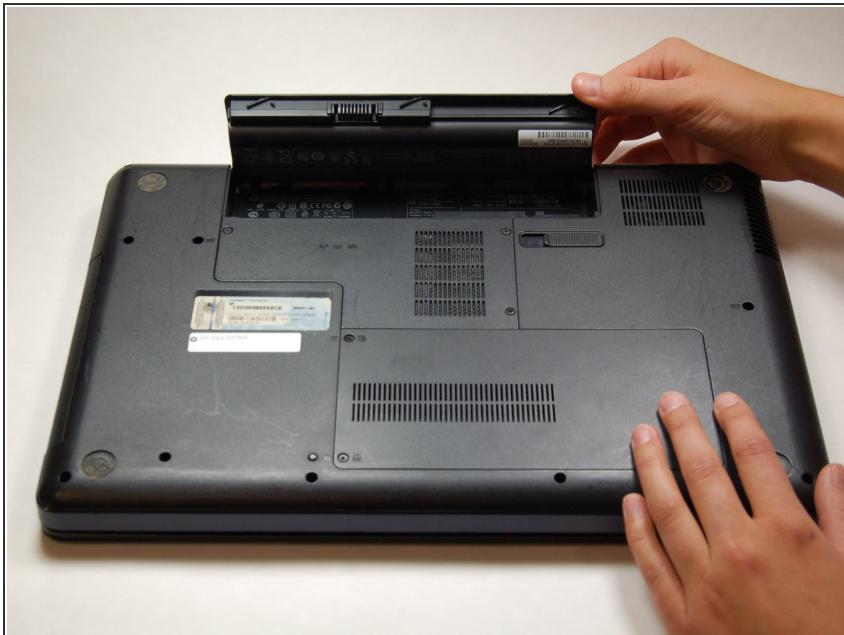

- Remove the battery, carefully, from the compartment.

Step 3

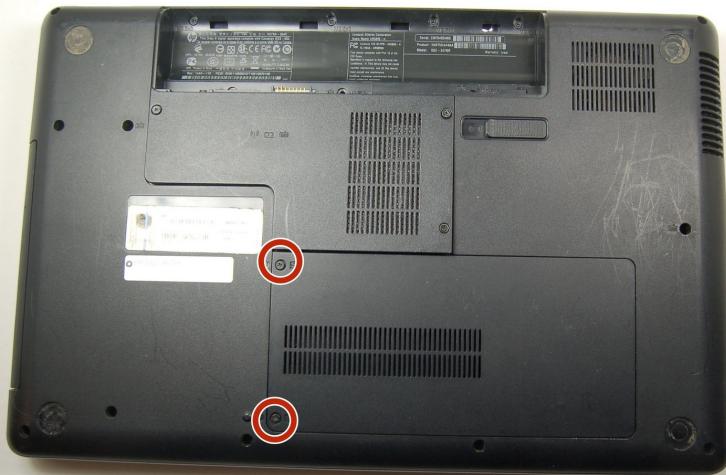


- Find the hard drive compartment with two Phillips head screws.
- Use the PH1 screwdriver to loosen and remove both screws.
- Gently remove the hard drive compartment.

Step 4



- On the far left of the hard drive compartment, find the Phillips head screw.
- Remove the Phillips head screw with the PH1 screwdriver.

Step 5

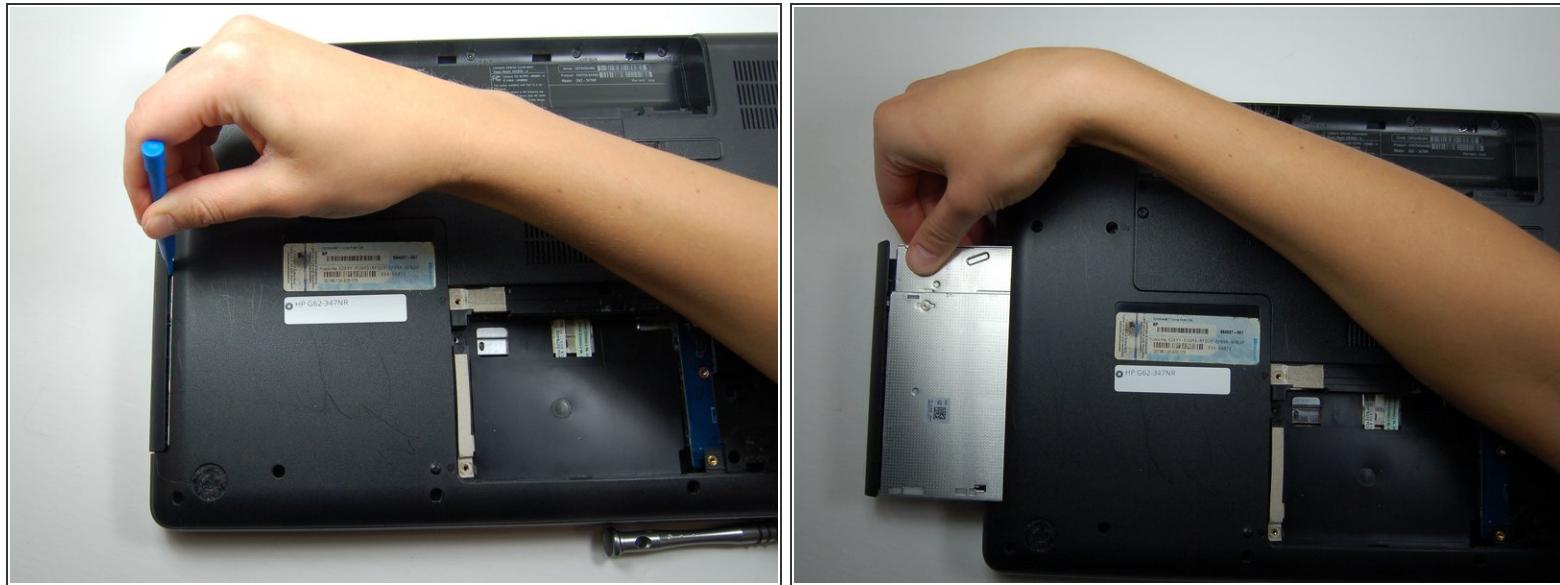

- Get the plastic opening tool and place it between the laptop and the CD/DVD drive. Place it toward the center of the drive for maximum support.
- Carefully pry the CD/DVD drive open.
- Slide the CD/DVD drive out once it is pried open.

To reassemble your device, follow these instructions in reverse order.