




# HP G62-144DX RAM Replacement

How to replace the RAM in the HP G62-144DX.

Written By: Cameron Moran

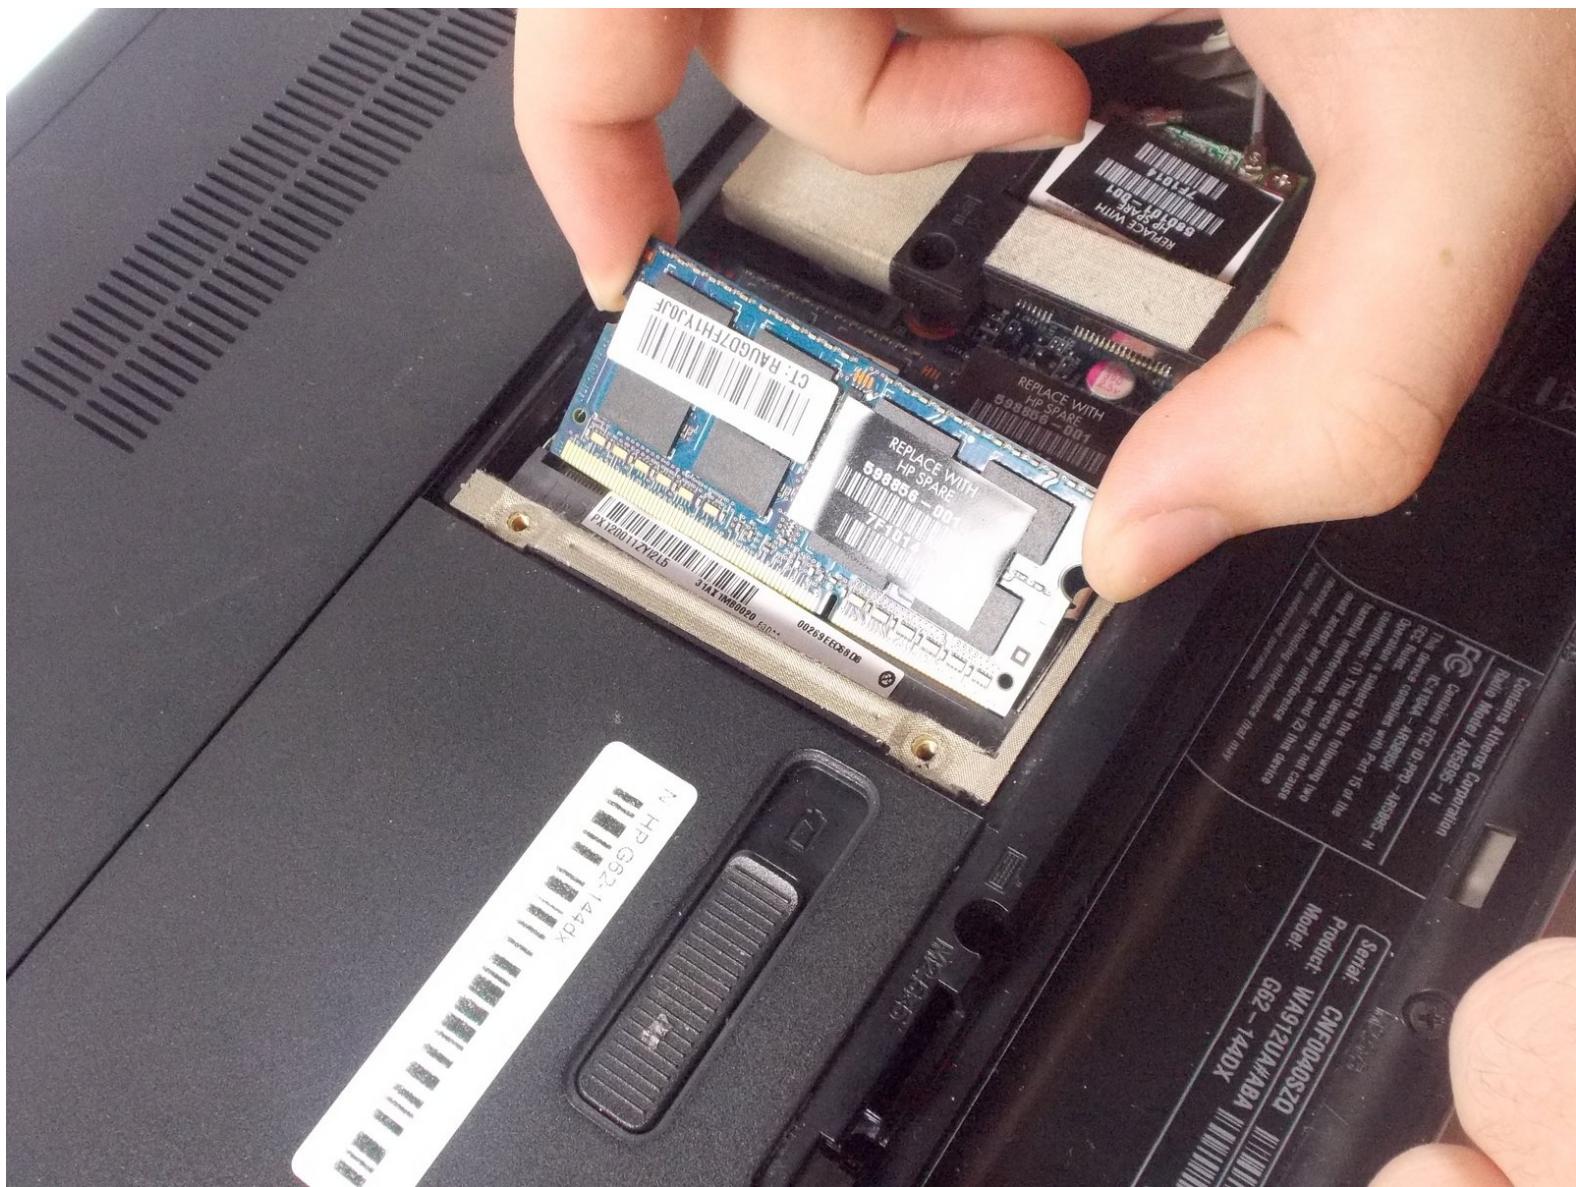


## INTRODUCTION

This guide will show you how to remove the back panel and replace the 2 RAM modules in the HP G62-144DX.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Battery

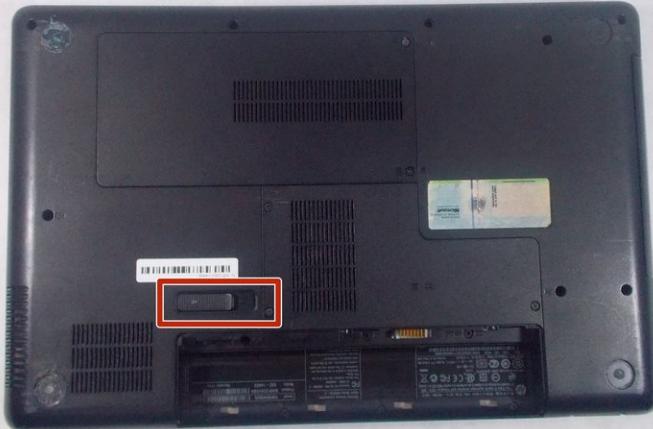

⚠ Make sure to turn off the laptop before removing the battery.


- Slide the lock to the right, located slightly above the battery location.
- While pulling the lock, pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

## Step 2 — RAM



- Unscrew the three Phillips 2.5x6 screws in the L-shaped panel on the back with a Phillips #1 screwdriver.
- *(i)* The screws will stay in the panel, but will come loose from the body of the laptop.
- Use a plastic opening tool to gently pry the panel free from the laptop.

## Step 3

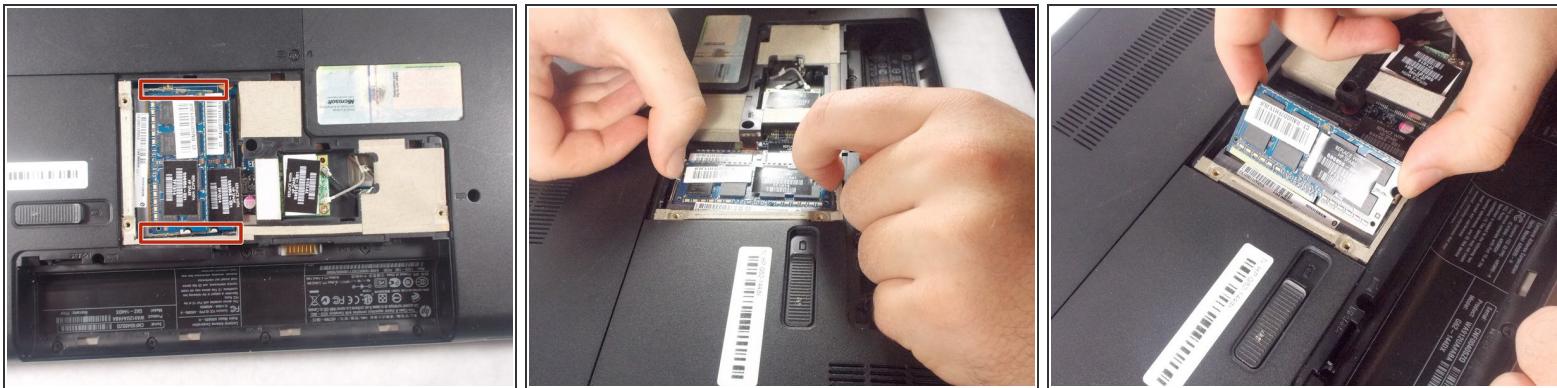

- Pull the two metal clips to the top RAM module outwards parallel to the laptop.
- After the RAM module pops up, gently pull it out from the computer.
- Repeat for the second RAM module.

To reassemble your device, follow these instructions in reverse order.