



HP G62-144dX Battery Replacement

This guide will show you how to replace the battery in the HP G62-144dX.

Written By: Cameron Moran



INTRODUCTION

If your battery is not working and you need to take it out, do the following steps to remove it properly.



PARTS:

- [HP MU09XL Replacement Laptop Battery](#) (1)
-

Step 1 — Battery



 Make sure to turn off the laptop before removing the battery.

- Slide the lock to the right, located slightly above the battery location.
- While pulling the lock, pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

To reassemble your device, follow these instructions in reverse order.