




HP G71t-400 LCD Screen Replacement

This guide is meant for a successful replacement of the LCD screen in your HP G71t-400.

Written By: Nicholas Castro

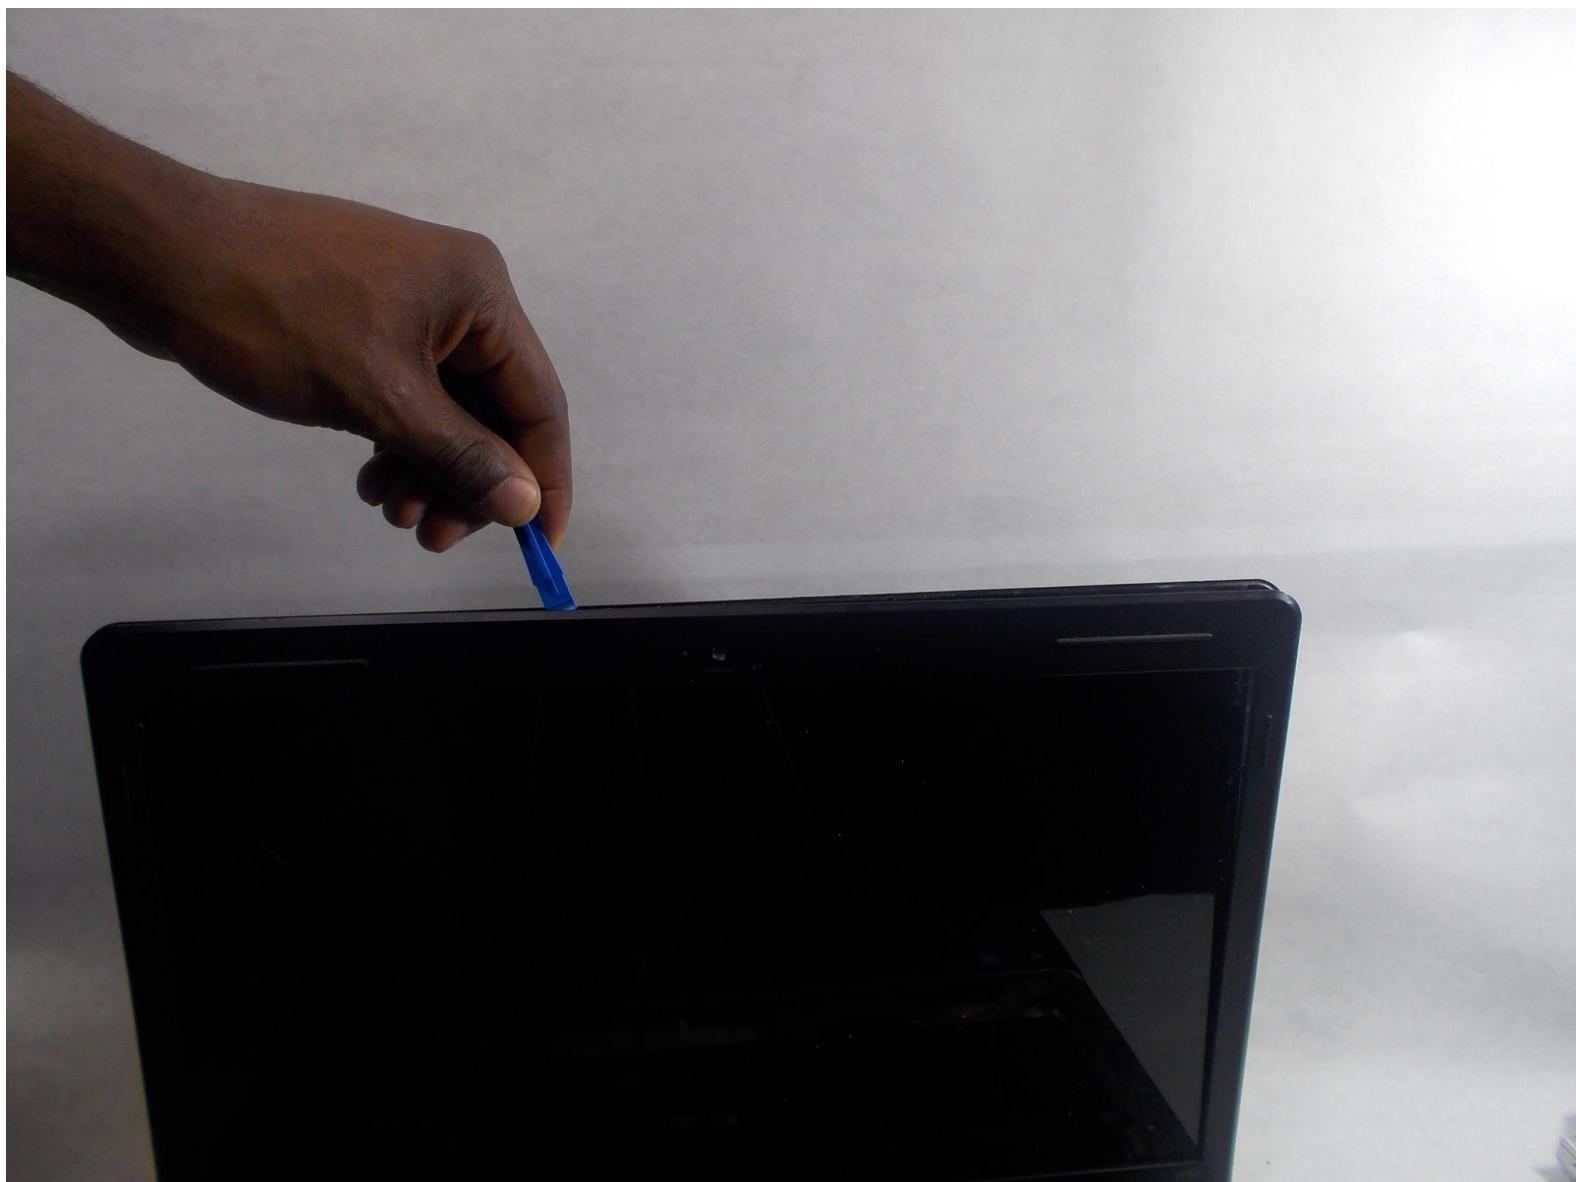

 **TOOLS:**


- Essential Electronics Toolkit (1)

Step 1 — LCD Screen



- Lay the laptop down so the bottom is facing up.
- Push the slide button, circled in photo 1, to release the battery.
- Action in picture 2 shows the direction and release.
- Tilt the battery back in the direction it popped up in and remove the battery.
- This ensures there is no power in the system that could potentially short out any components.

Step 2

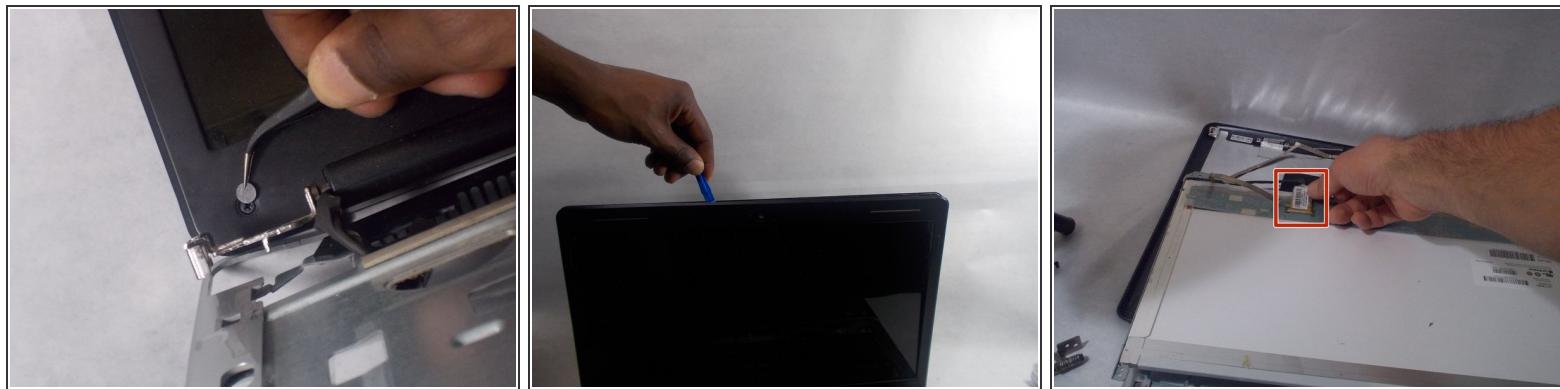

- Remove the stickers covering two screws on both sides just below the screen.
- Unscrew the two screws.
- Using the plastic opening tool to split the screen from the bezel or face of the device.
- Disconnect the chord attaching the screen to the monitor.
- The LCD screen is now detached from the device and ready for replacement.

To reassemble your device, follow these instructions in reverse order.