



HP HDX 16-1160US Battery Replacement

This guide will allow the user to replace the battery.

Written By: Daniel McBroom



Step 1 — Battery



- Turn the device over so that the bottom side is facing up and the battery is facing away from you.

Step 2



- Locate the slider under the right side of the battery.
- Using your thumb, slide it all the way to the left until the front of the battery lifts up.

Step 3



- With your thumb still holding the slider to the left, use the opposite hand to lift the battery out, removing it from the computer.

To reassemble your device, follow these instructions in reverse order.