




HP HDX 16-1160US Wifi Card Replacement

This guide is used to help the user replace the Wifi card for the HP HDX 16-1160US.

Written By: Marshall Reid

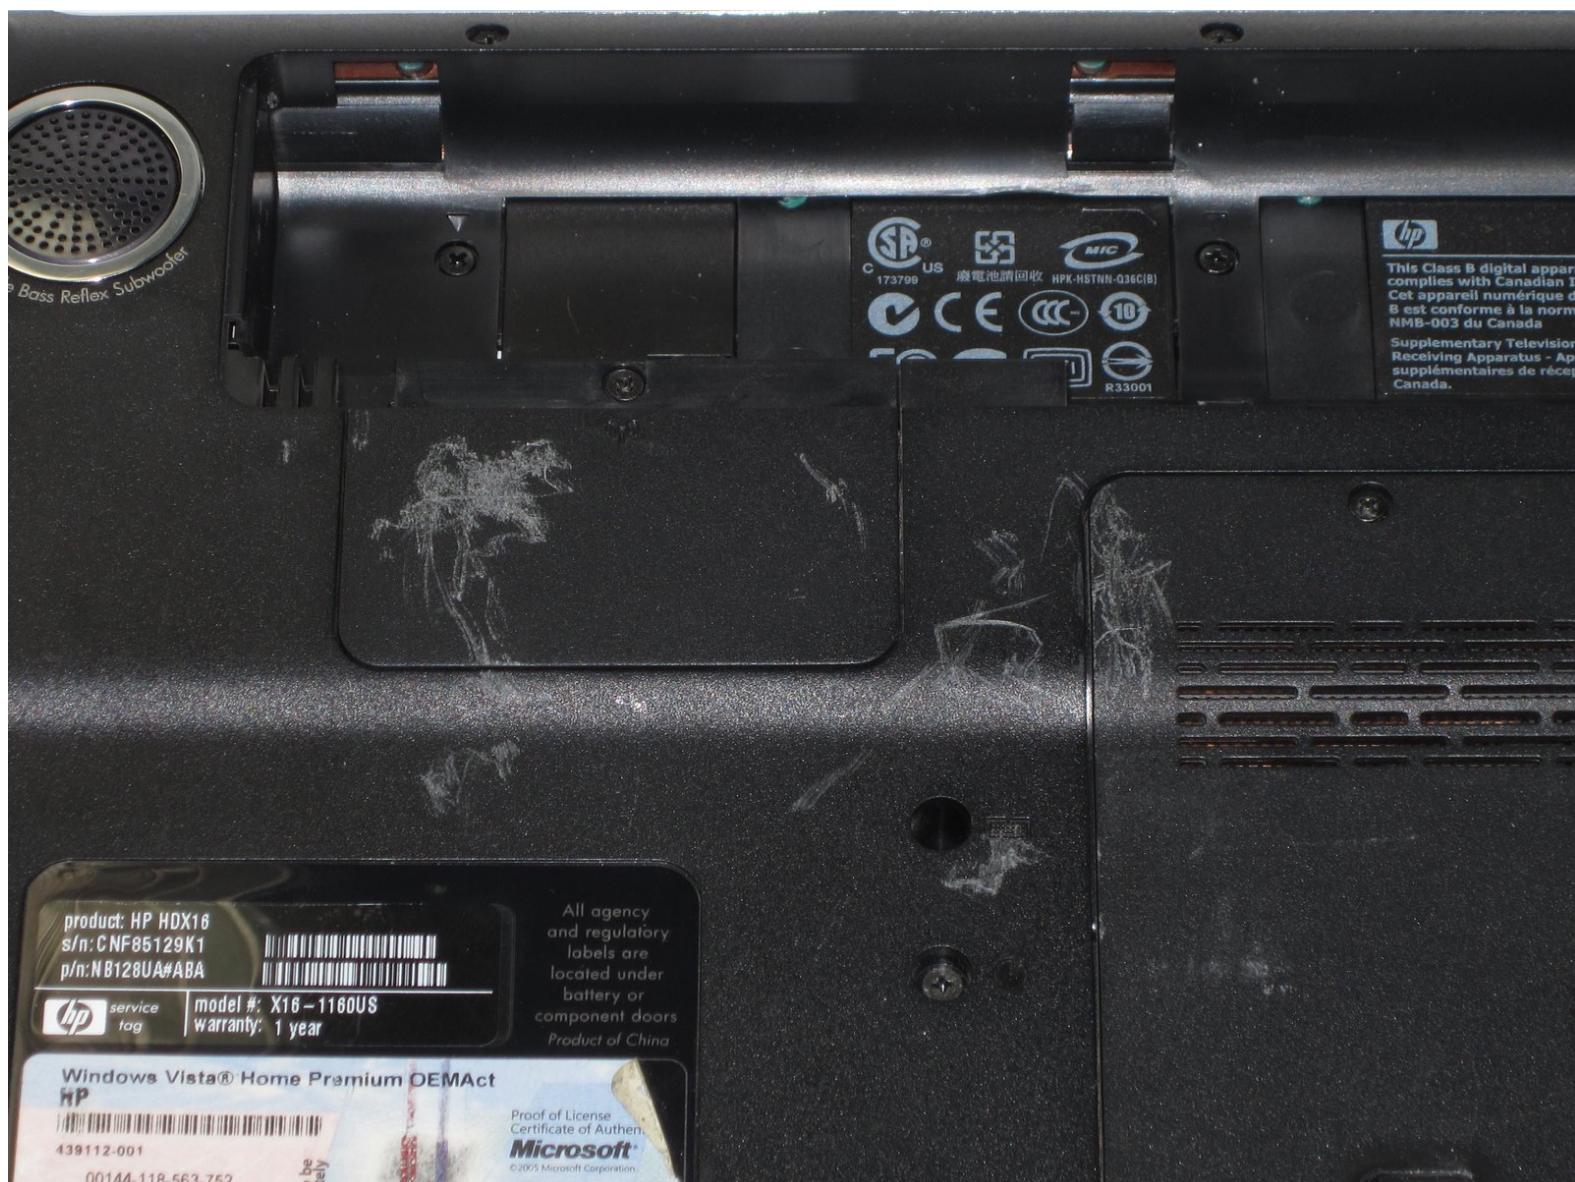

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- Turn the device over so that the bottom side is facing up and the battery is facing away from you.

Step 2



- Locate the slider under the right side of the battery.
- Using your thumb, slide it all the way to the left until the front of the battery lifts up.

Step 3



- With your thumb still holding the slider to the left, use the opposite hand to lift the battery out, removing it from the computer.

Step 4 — Wifi Card



- Use the Phillips #1 Screw Driver to unscrew the 6mm screw from the Wi-Fi Card Panel.
- (i)* The 6mm screw will remain in the Wi-Fi card panel and will not fall out.
- Lift off the Wi-Fi card panel off using the opposite hand.

Step 5



- Remove the gray and black wires by gently pulling up on them so that they "unsnap" from the Wi-Fi card.

Step 6



- Remove the two 4mm screws with the Phillips #1 screw driver.

Step 7



- Carefully use the plastic opening tools to lift the Wi-Fi card up on the left side.
- Using the opposite hand, pull the Wi-Fi card to the left.

⚠ Do not lift the Wi-Fi card straight up, this will damage or break the Wi-Fi card.

To reassemble your device, follow these instructions in reverse order.