




# HP LaserJet 1160 or 1320 Duplexer PCB Replacement

Written By: jrw01

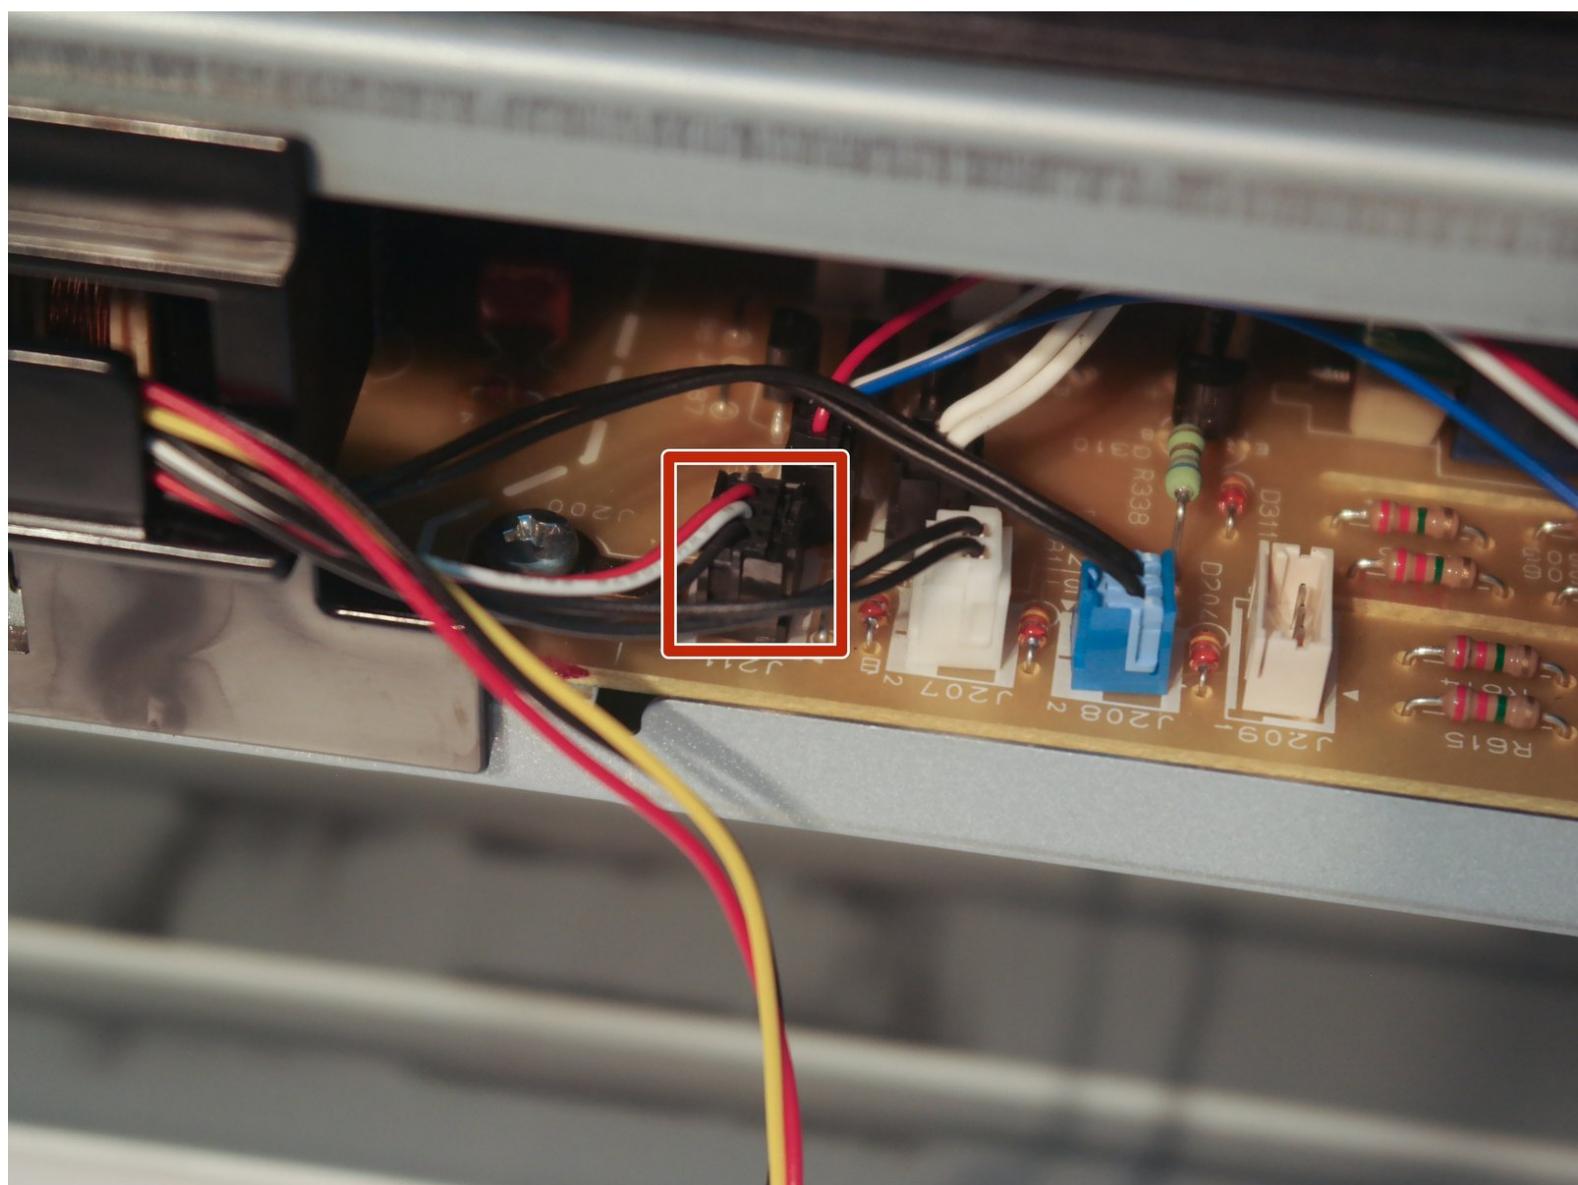

 **TOOLS:**

- Metal Spudger Set (1)
- Phillips #0 Screwdriver (1)

 **PARTS:**

- HP LaserJet 1160 or 1320 Duplexer PCB (1)

## Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

## Step 2 — Right Side Cover




- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.

## Step 3 — Back Cover



- Remove 4 screws on the back of the printer.
- Remove the back cover.


## Step 4 — Top Cover

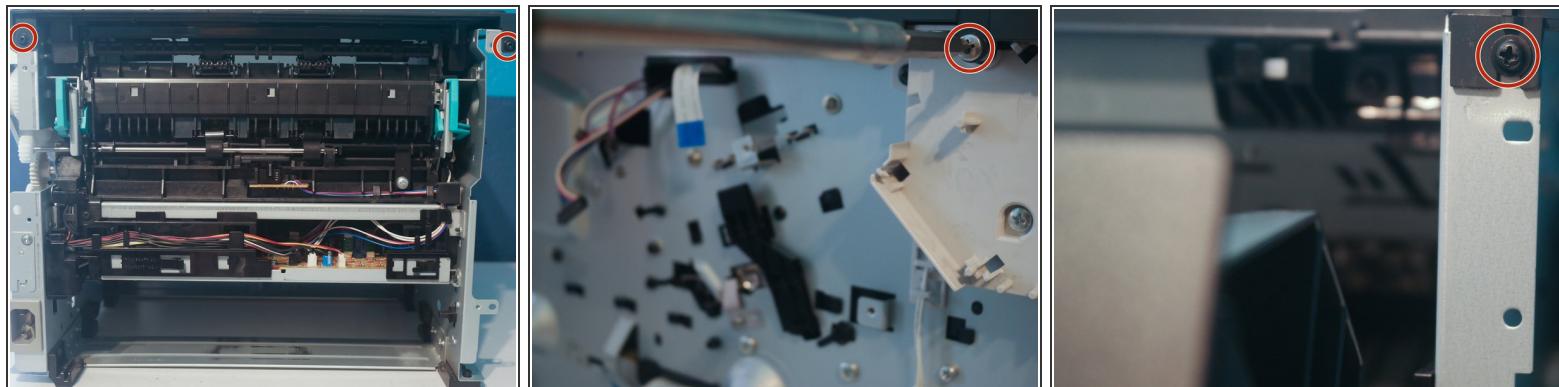

- Remove 2 screws on the back of the printer, one on the left, and one on the front.



*(i)* The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

## Step 5 — Top Cover

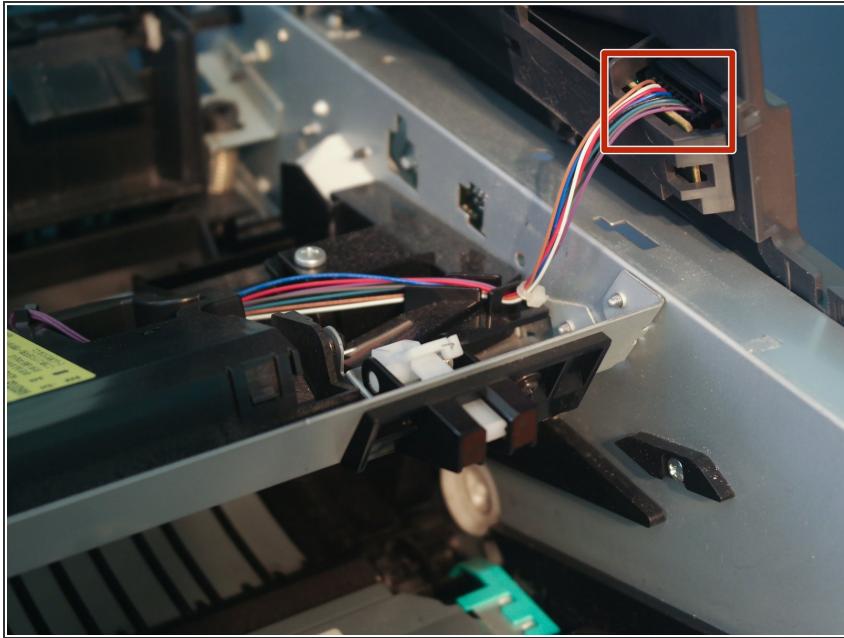


- Disconnect the control panel cable and remove the top cover.

## Step 6 — Fan

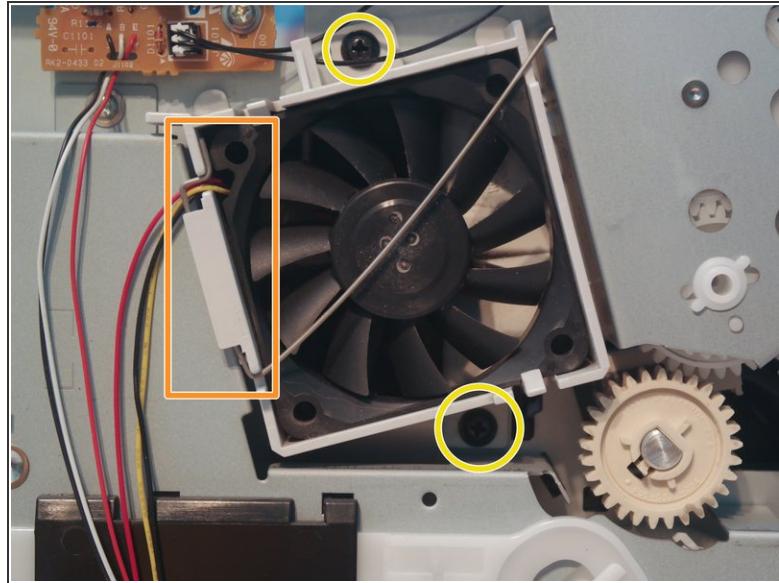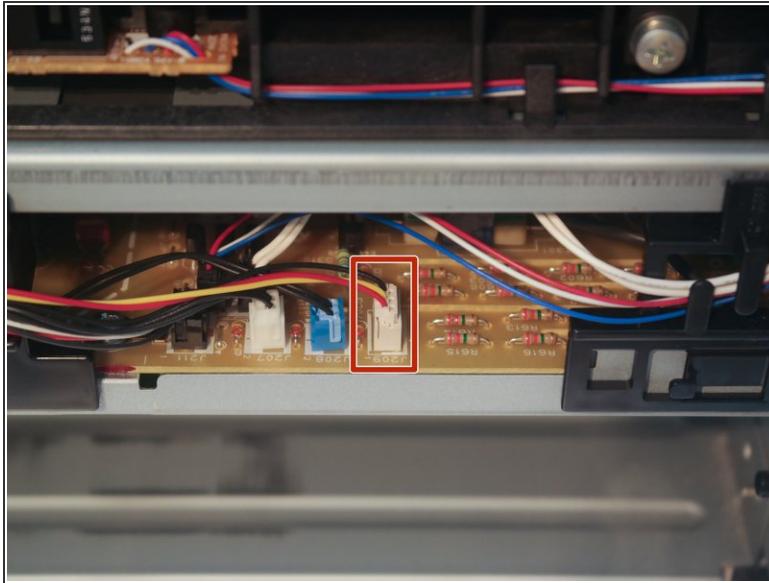


- Disconnect the fan cable from the main board of the printer.
- Remove the retaining clip holding the fan in.
- Remove the 2 screws holding the fan in.

## Step 7 — Fan Cable

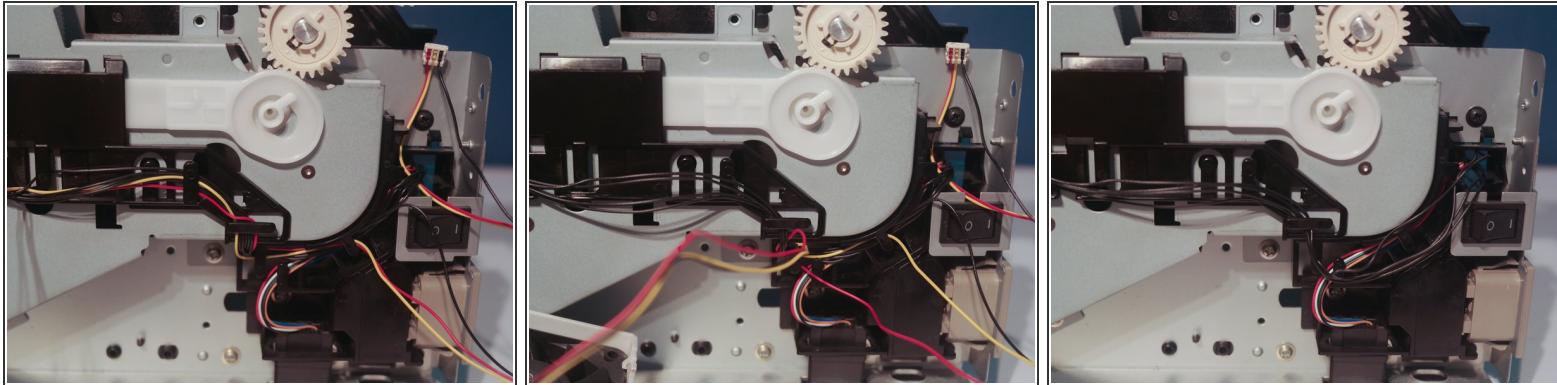

- Remove the fan cable from the cable guide.

## Step 8 — Duplexer PCB

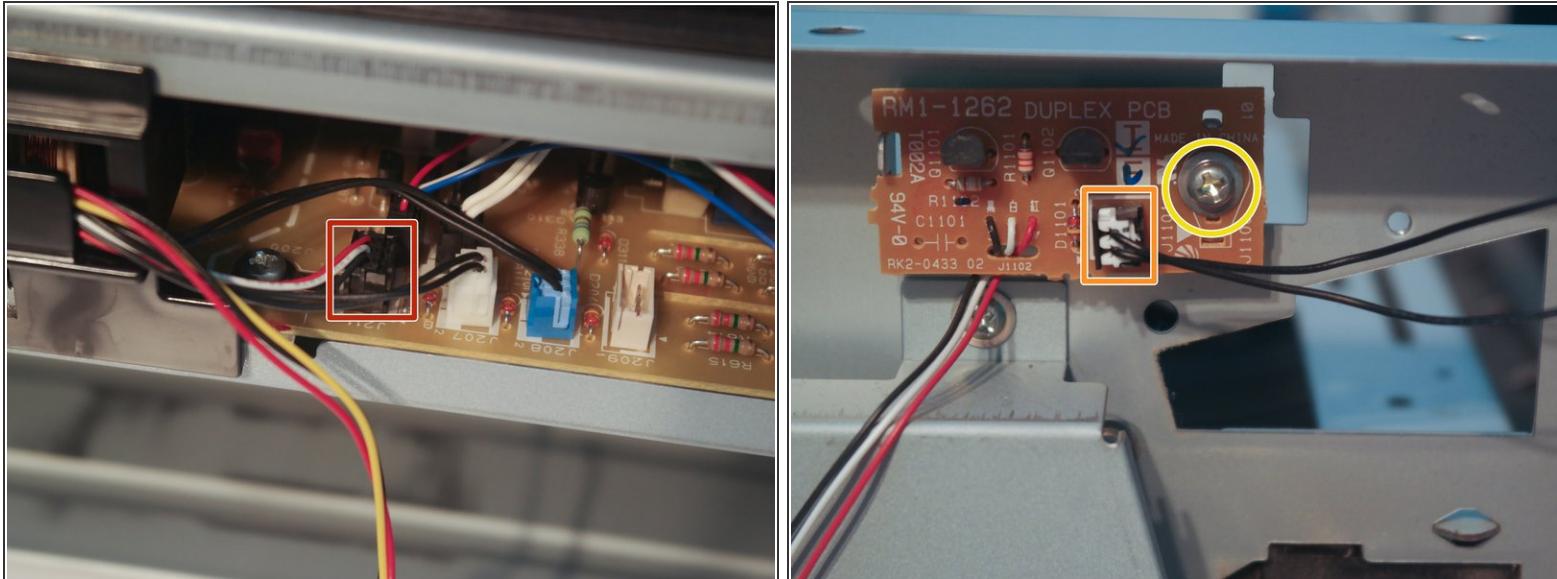

- Disconnect one cable from the main board of the printer.
- Disconnect the duplexer solenoid cable from the duplexer PCB.
- Remove one screw on the duplexer PCB and remove the PCB from the printer.

To reassemble your device, follow these instructions in reverse order.