


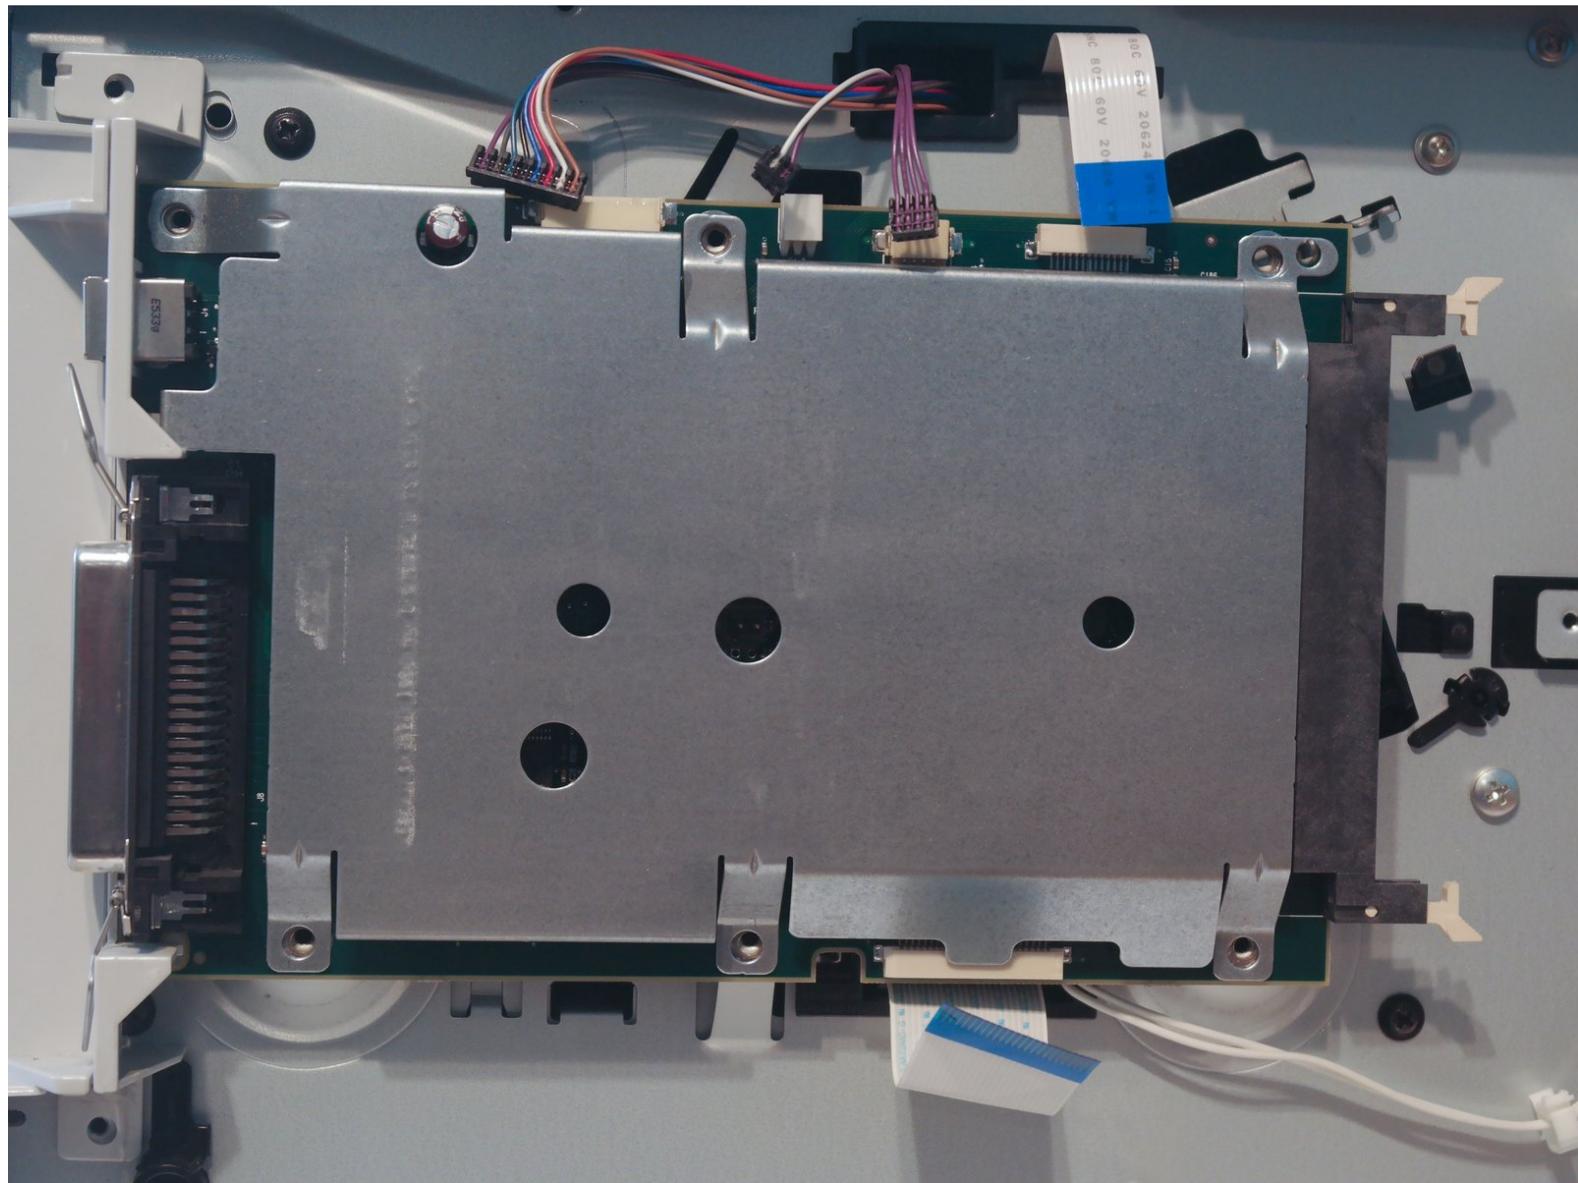

# HP LaserJet 1160 or 1320 Formatter Replacement

Replace the formatter in an HP LaserJet 1160 or 1320.

Written By: jrw01



## INTRODUCTION

Replace the formatter in an HP LaserJet 1160 or 1320.

### TOOLS:

- Phillips #0 Screwdriver (1)

### PARTS:


- HP LaserJet 1160 or 1320 Formatter (1)

## Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

## Step 2 — Formatter

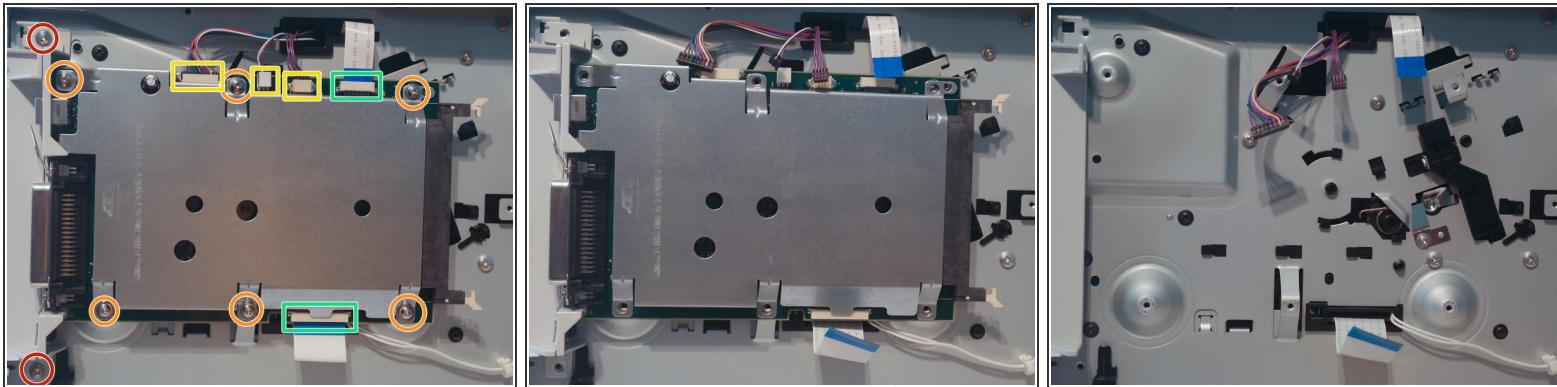

- Remove 2 screws on the I/O port cover.
  - Remove 6 screws on the formatter.
  - Disconnect 3 connectors from the formatter.
  - Disconnect 2 flat flexible cables from the formatter.
  - Remove the formatter from the printer.
- ⚠** Be careful not to fold, crease, or tear flat flexible cables.
- (i)** The I/O port cover will need to be transferred to the new formatter before installing it.

To reassemble your device, follow these instructions in reverse order.