




HP LaserJet 1160 or 1320 Pickup Roller Replacement

Written By: jrw01

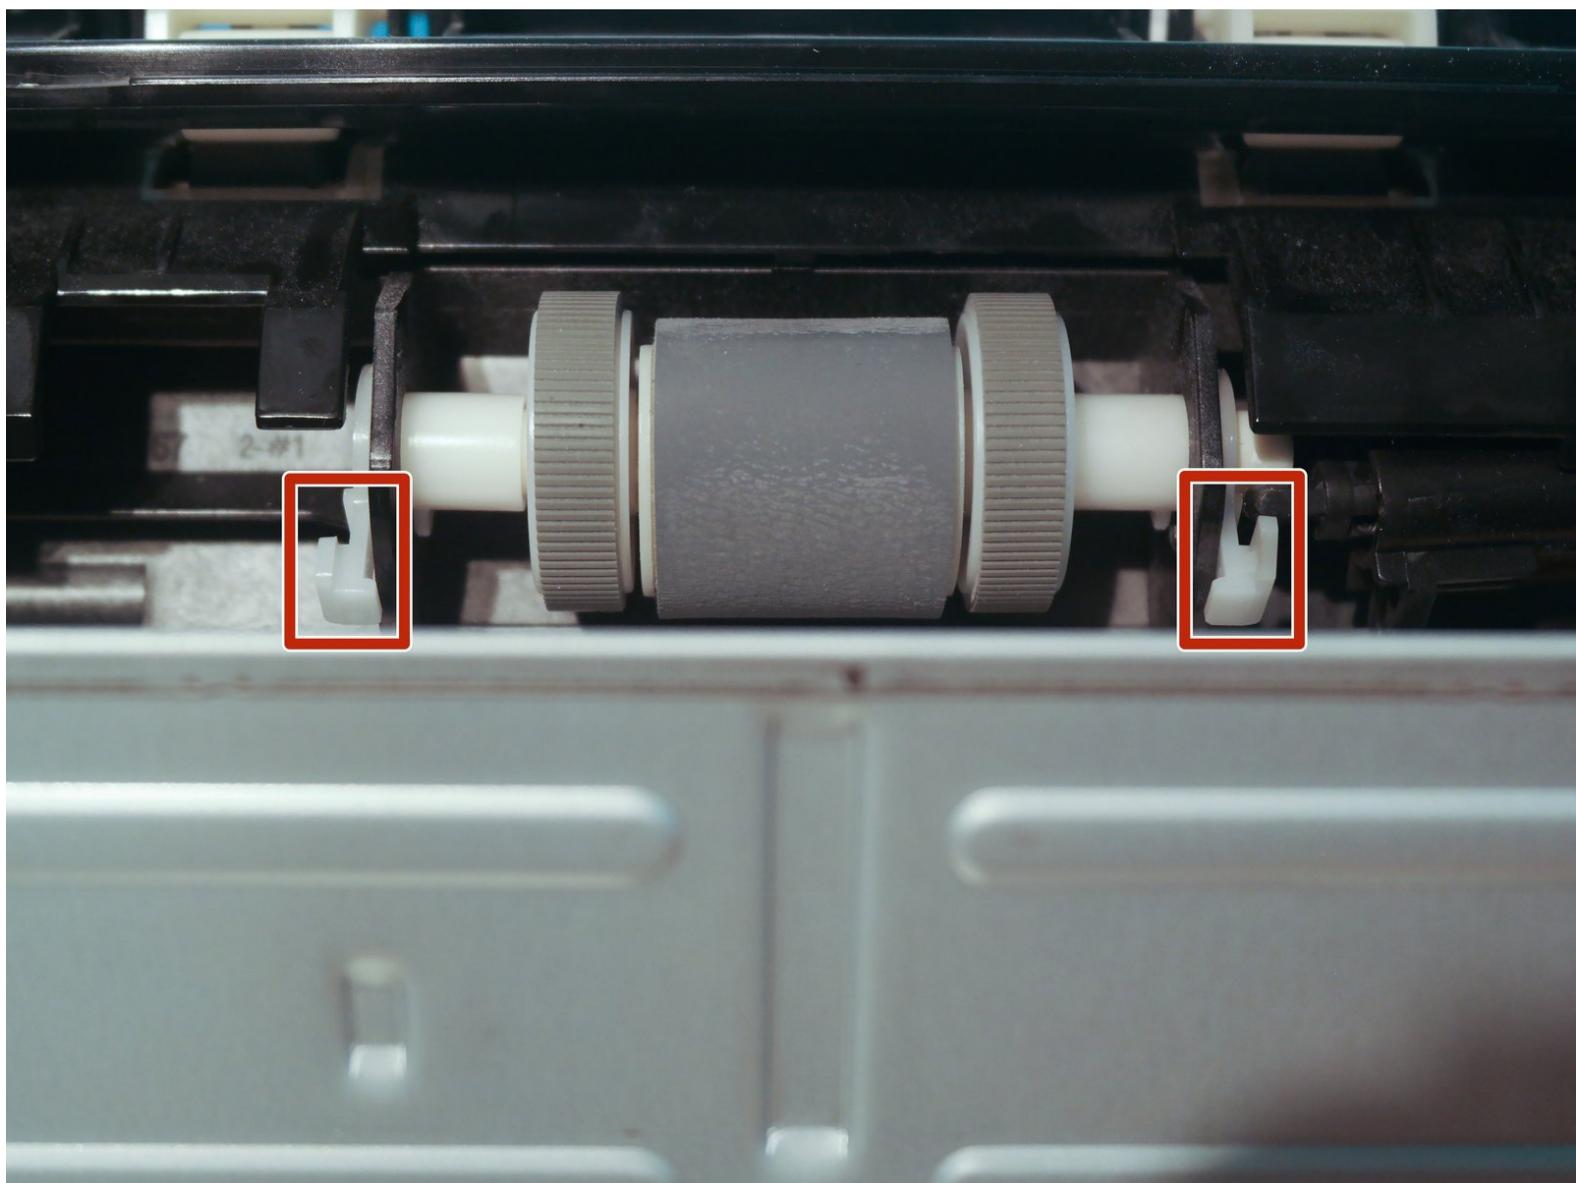

 **TOOLS:**

- Metal Spudger Set (1)
- Phillips #0 Screwdriver (1)

 **PARTS:**

- HP LaserJet 1160 or 1320 Pickup Roller (1)

Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

Step 2 — Right Side Cover




- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.

Step 3 — Back Cover



- Remove 4 screws on the back of the printer.
- Remove the back cover.


Step 4 — Top Cover

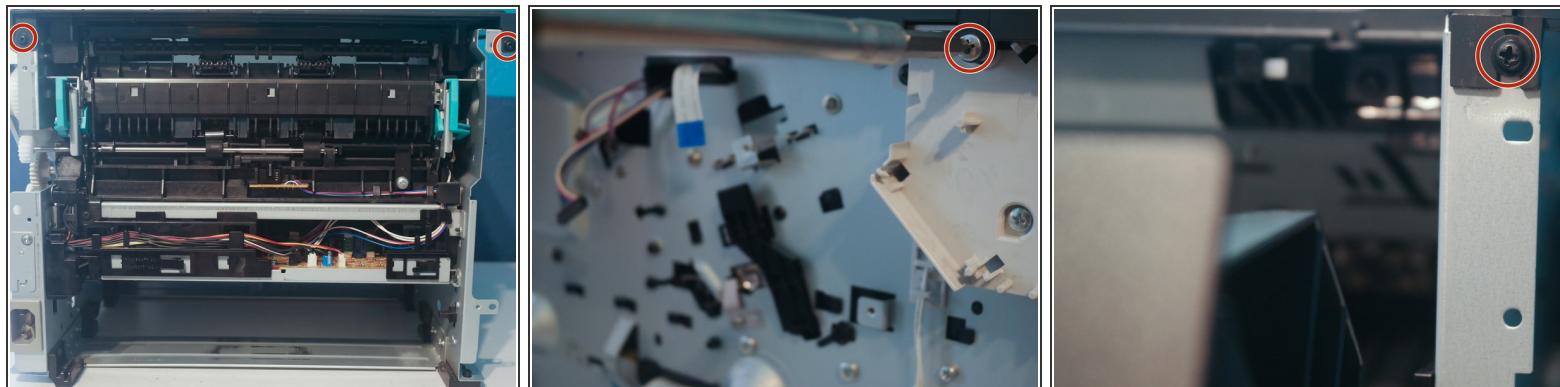

- Remove 2 screws on the back of the printer, one on the left, and one on the front.


(i) The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

Step 5 — Top Cover

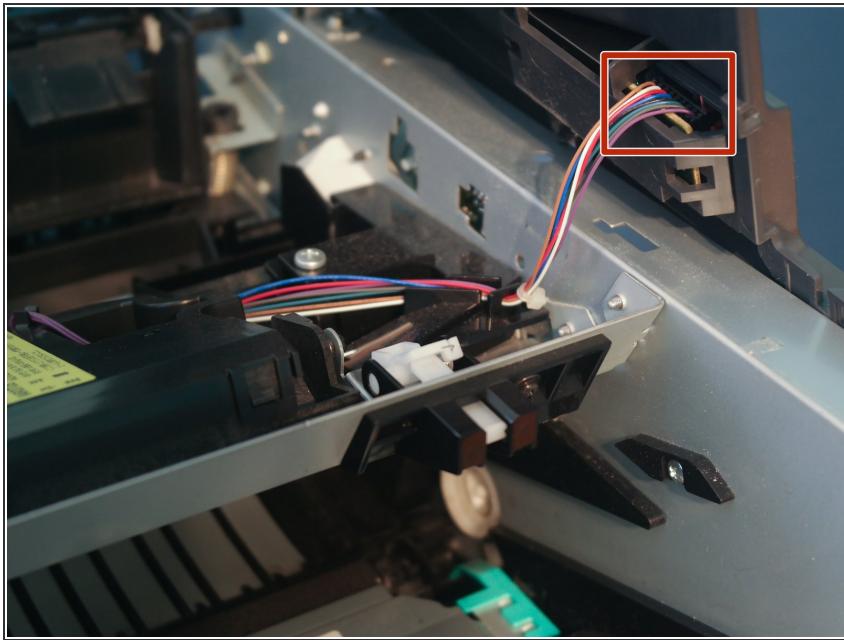

- Disconnect the control panel cable and remove the top cover.

Step 6 — Duplexer Tray

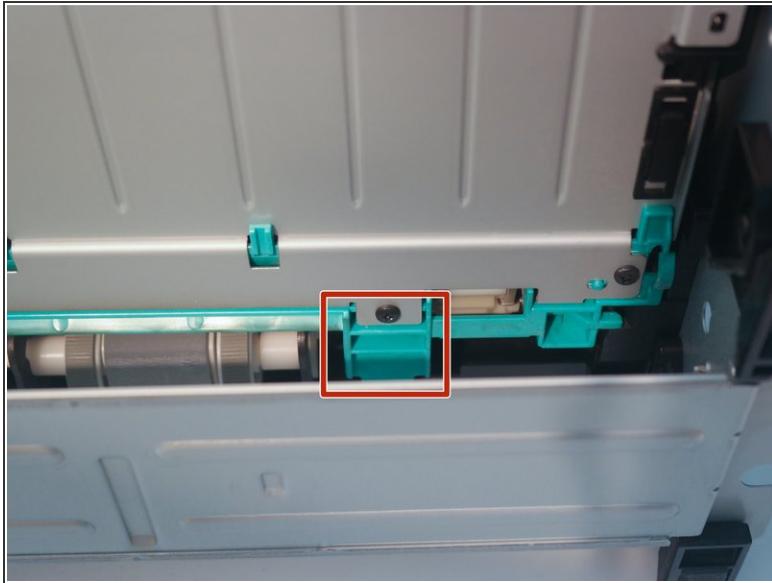



- Pull on the blue-green tab to release the duplexer tray.

Step 7 — Cartridge Door



- Remove 2 screws from the front of the printer.
- Remove the cartridge door.

Step 8 — Pickup Roller

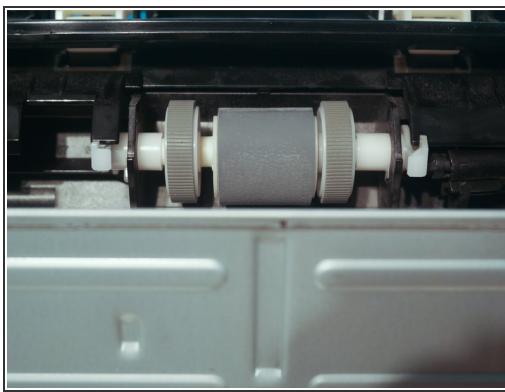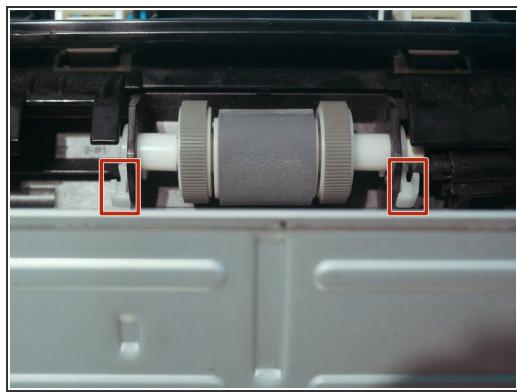

- Remove the pickup roller by rotating the white tabs upwards and pulling them outwards.

To reassemble your device, follow these instructions in reverse order.