



HP Mini 1000 RAM Replacement

Replace or upgrade the RAM on your HP Mini 1000.

Written By: Walter Galan



INTRODUCTION

Use this guide to replace or upgrade the single PC2-4200 RAM stick on your Mini 1000.

TOOLS:

- [Spudger \(1\)](#)

PARTS:

- [PC2-4200 1 GB RAM Chip \(1\)](#)
- [PC2-4200 512 MB RAM Chip \(1\)](#)

Step 1 — Battery



- With the case closed, place the Mini 1000 top-side down on a flat surface.
- Push both of the battery release latches toward each other.

Step 2



- Lift the battery out of the Mini 1000 from the edge closest to the release latches.

Step 3 — RAM



- Before proceeding, slide the right battery release latch to the unlocked position nearest the center of the computer.
- Use the tip of a spudger to slide the RAM compartment cover release latch away from the center of the computer.

(i) At this point, the edge of the RAM compartment cover nearest the battery compartment should pop up from the lower case.

Step 4



- Remove the RAM compartment cover from the lower case.

Step 5



- Use your fingers to simultaneously pull both RAM retaining arms away from the center of the RAM chip.
- The RAM chip should pop up slightly from its socket.
- Pull the RAM chip out of its socket and remove it from the Mini 1000.

This document was generated on 2019-09-30 06:12:12 PM (MST).

To reassemble your device, follow these instructions in reverse order.