



# HP Mini 110-3735dx Backcover Replacement

This guide removes the back cover to access components of your HP Mini 110-3735dx.

Written By: Tyrone Williams



## INTRODUCTION

Use this guide to remove the back plate of the HP Mini 110-3735dx to expose the internal parts of the laptop.

## Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

## Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.

## Step 3 — Backcover



- Pull upward from under the back cover via the missing battery area.
- *i* Best to start from one of the corners.

To reassemble your device, follow these instructions in reverse order.