



HP Mini 110-3735dx Battery Replacement

Removing the Battery from your HP Mini 110-3735dx

Written By: Tyrone Williams



INTRODUCTION

If your battery is not working properly, follow this guide to replace it. This is also a prerequisite guide to many other replacements for the HP Mini 110-3735dx.

Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.