




# HP Mini 110-3735dx Hard Drive Replacement

Replacing the hard drive of your HP Mini 110-3735dx.

Written By: Tyrone Williams

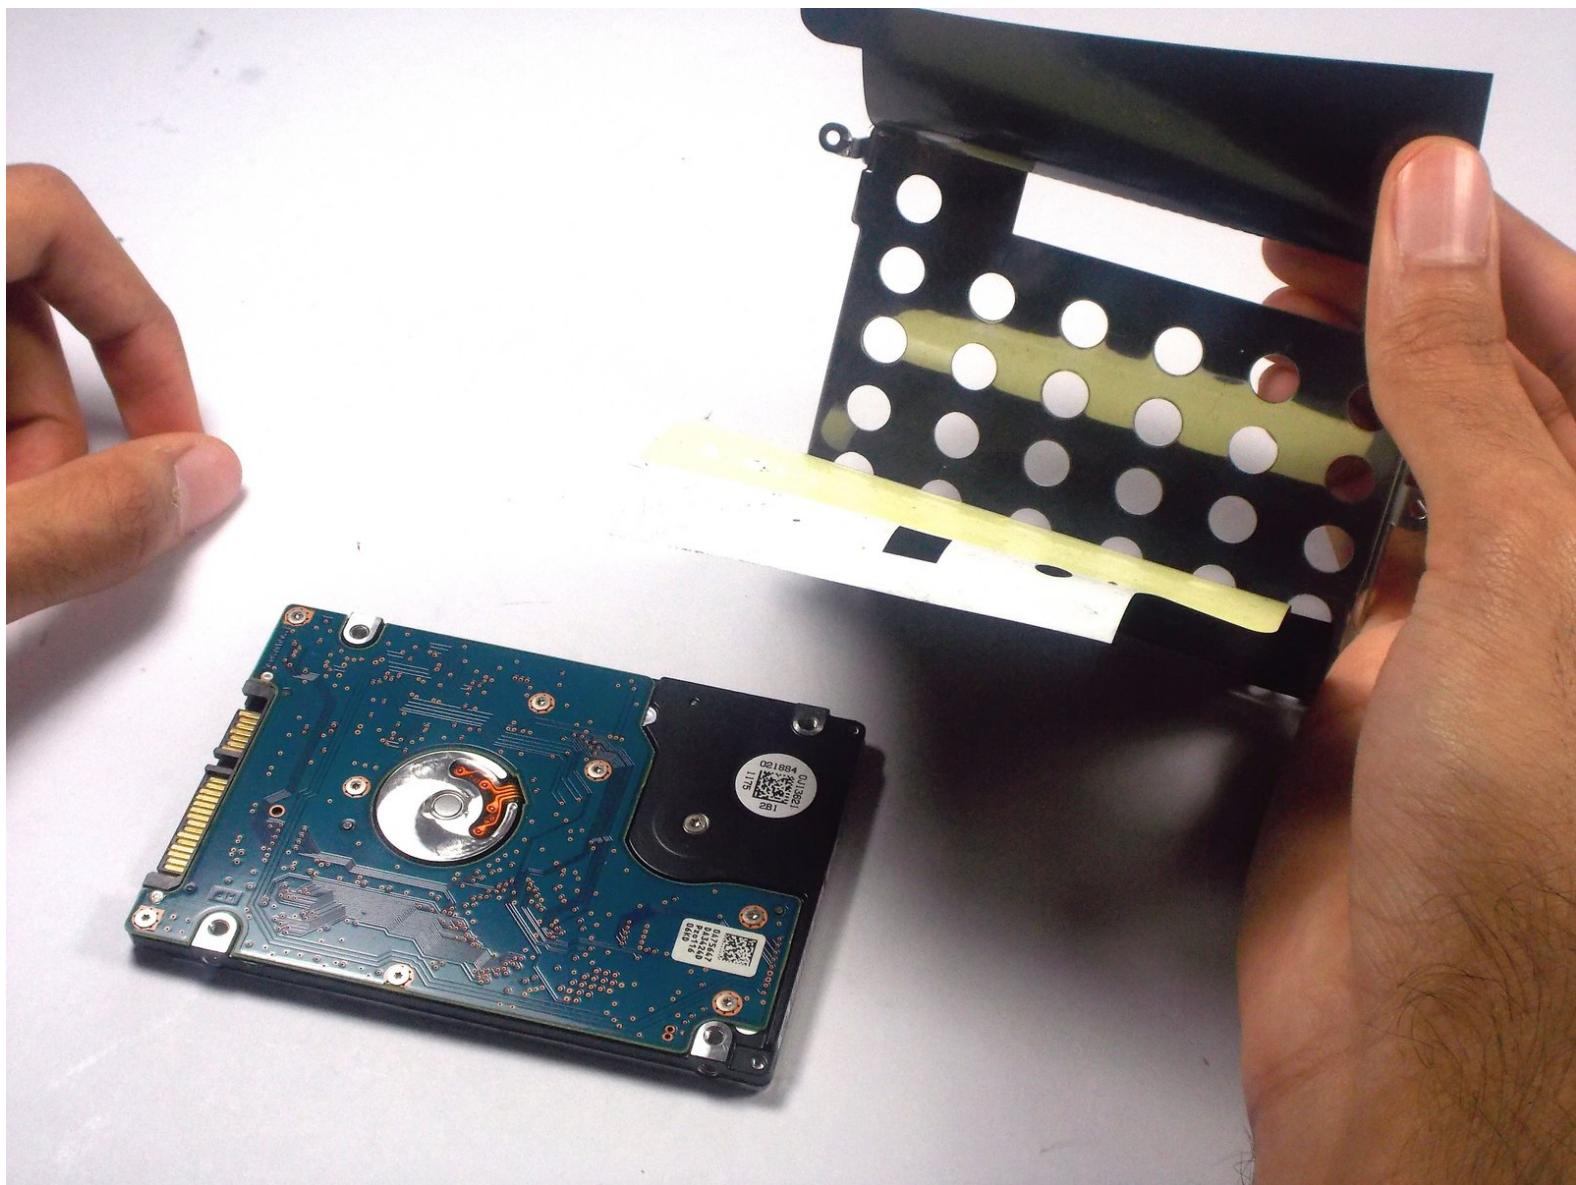

## INTRODUCTION

If your hard drive is broken or you just want to upgrade, this guide will walk you through the steps for replacing the hard drive.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

## Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.


## Step 3 — Backcover



- Pull upward from under the back cover via the missing battery area.


*(i)* Best to start from one of the corners.

## Step 4 — Hard Drive Cage

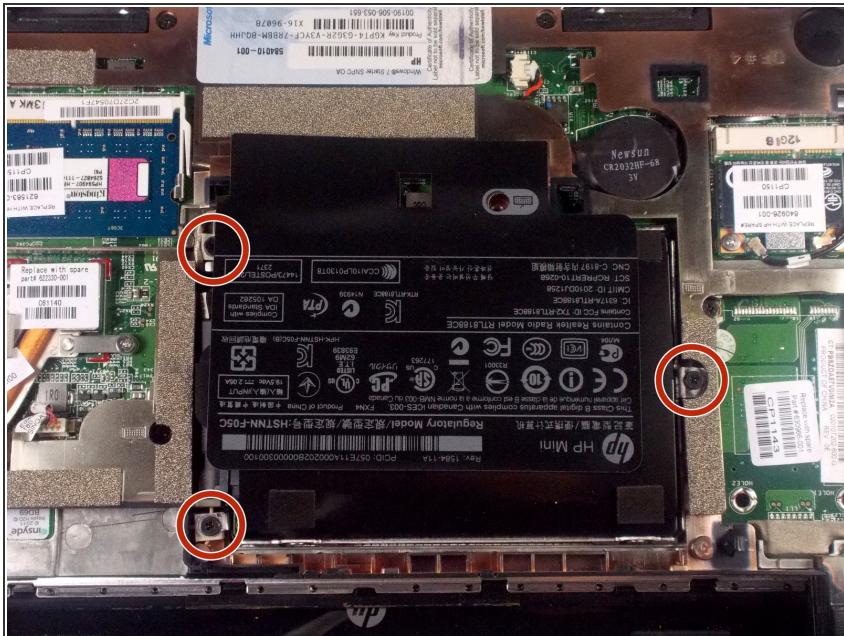


- Remove the three 5.0 mm screws holding the hard drive cage in place using a Phillips #1 screw driver.

## Step 5

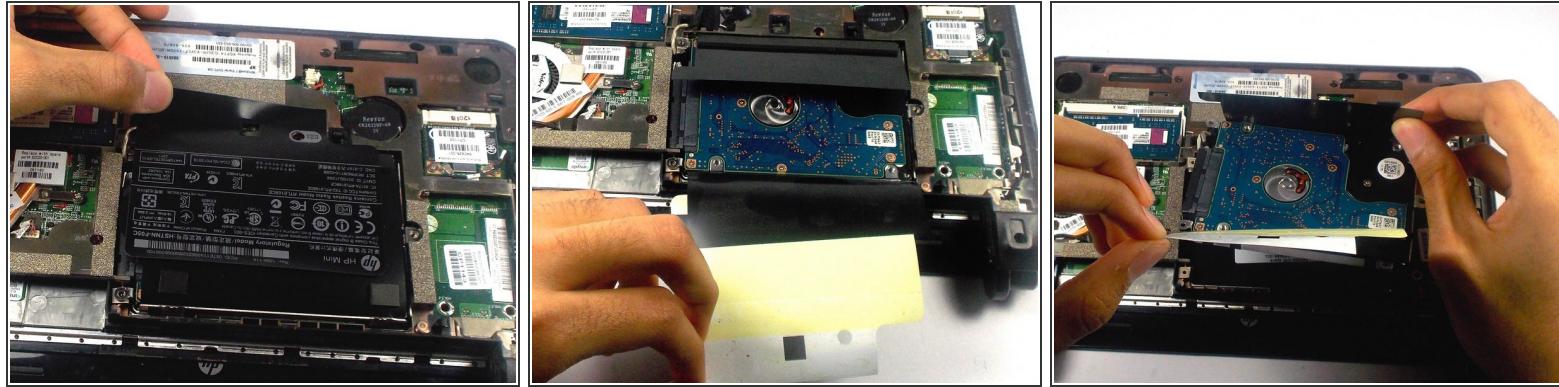


- Lift the hard drive cage by pulling the tape upward.
- Start by pulling the tape from the side with the keyboard symbol.

## Step 6

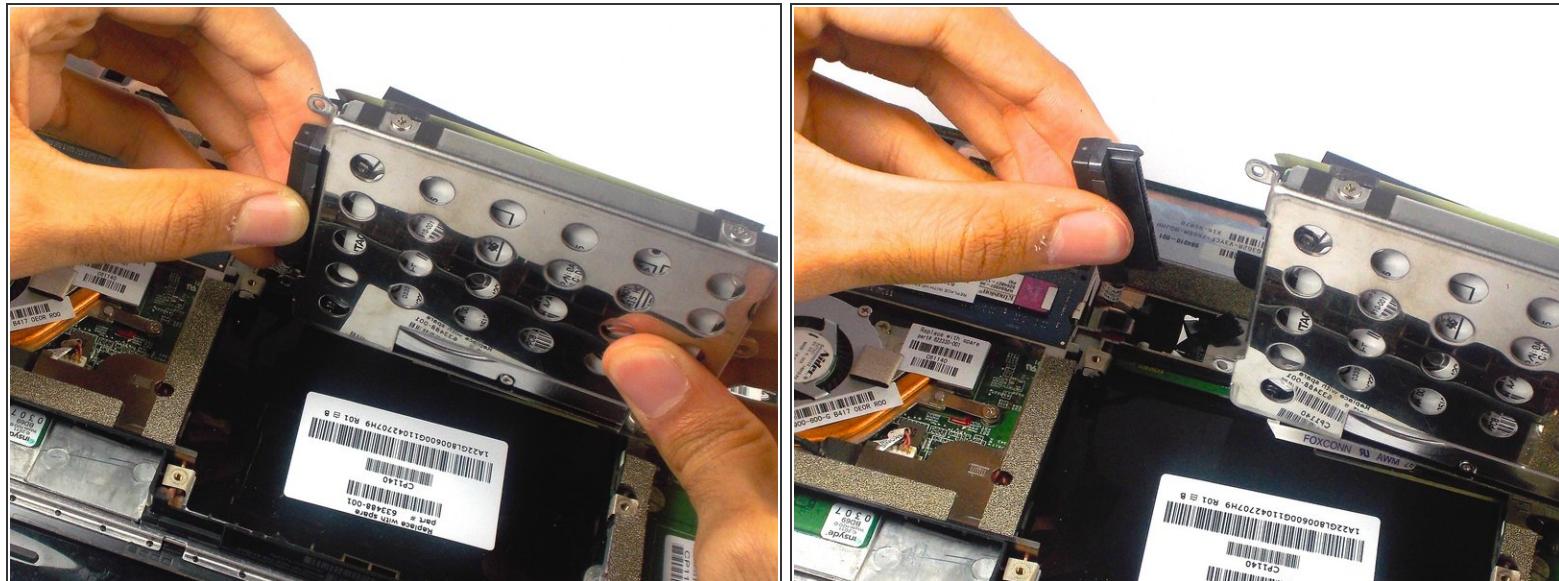

- Unplug the cable connecting to the hard drive.

## Step 7 — Hard Drive

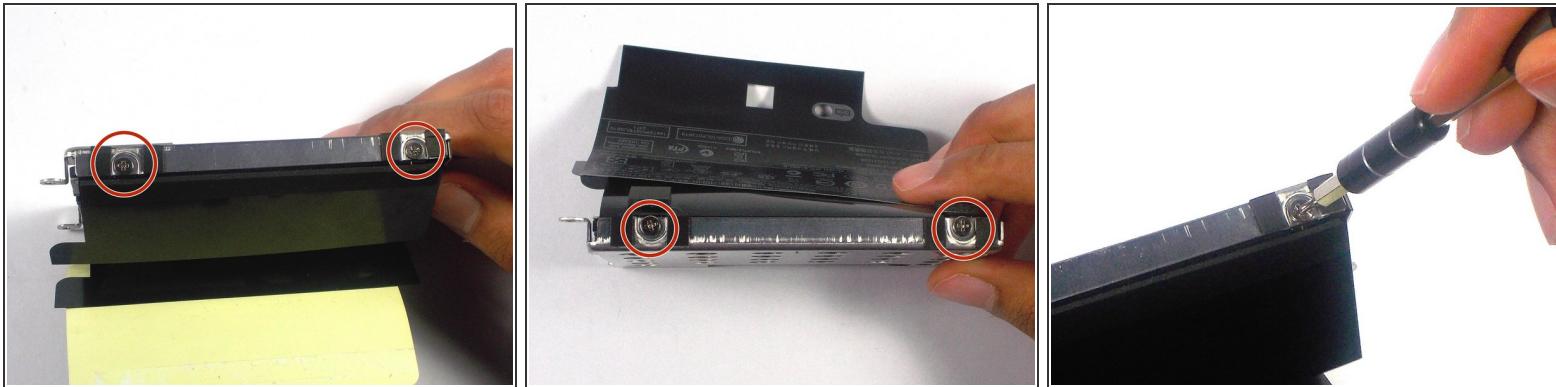

- Remove the four 4.0 mm screws on both sides of the cage using a Phillips #1 screw driver.

## Step 8



- Gently remove the hard drive from it's cage.

To reassemble your device, follow these instructions in reverse order.