




HP Mini 110-3735dx Keyboard Replacement

Replace the keyboard of your HP Mini 110-3735dx.

Written By: Tyrone Williams

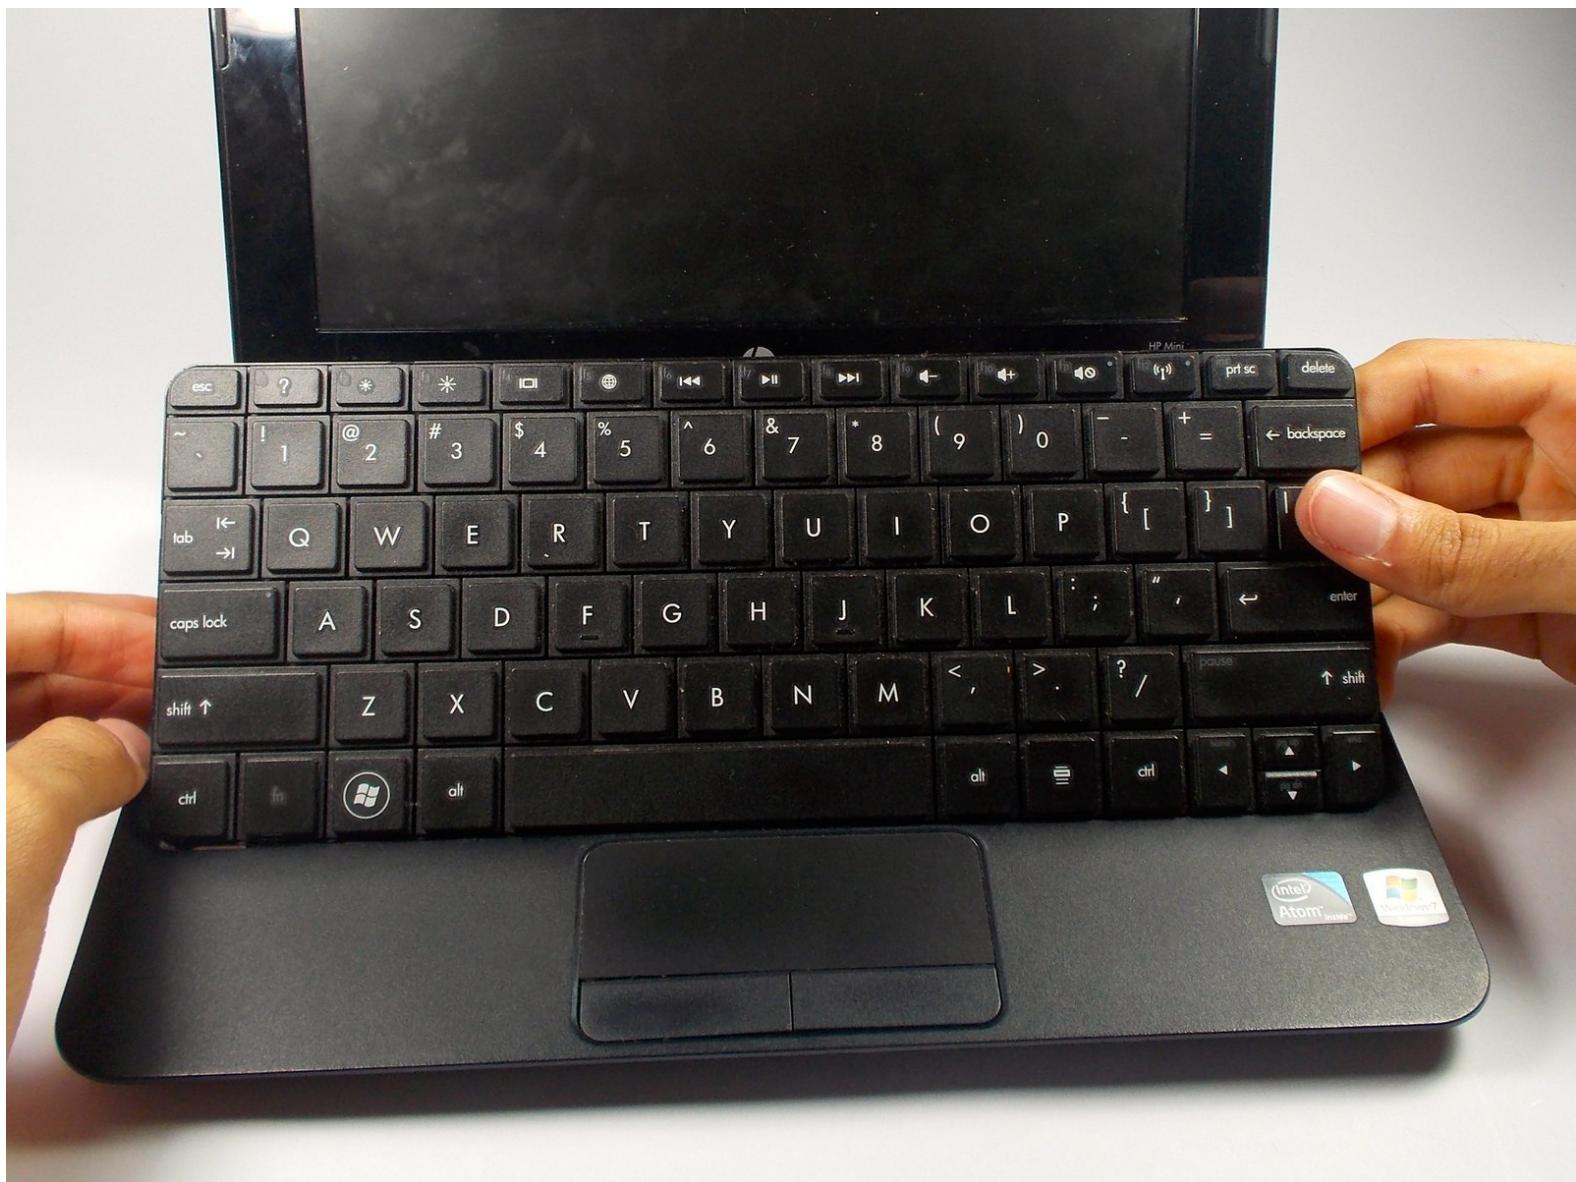

INTRODUCTION

If the keys on your keyboard are unresponsive, you might need to replace the keyboard itself. This guide will show you the steps for replacing your HP Mini 110's keyboard.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.


Step 3 — Backcover



- Pull upward from under the back cover via the missing battery area.

- *(i)* Best to start from one of the corners.

Step 4 — Keyboard

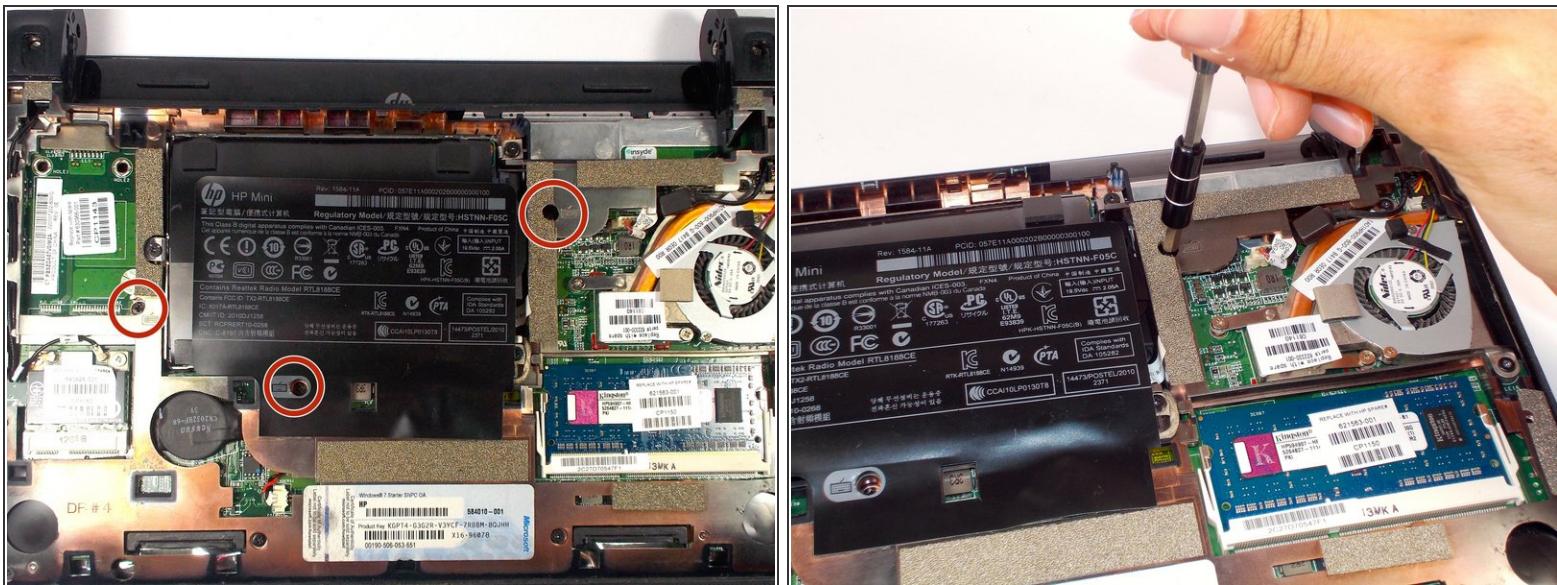

- Remove the three 4.0 mm screws with the keyboard indicator next to them using a Phillips #1 screw driver.


Step 5



- Flip the laptop over, and open it up.

(i) Don't worry! No pieces will fall out.


Step 6

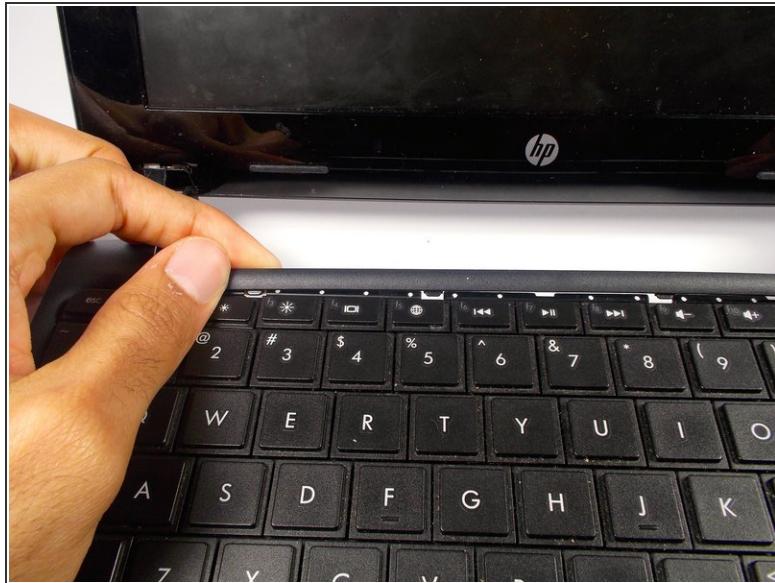

- With the keyboard facing you, pull the black bezel upward until its loose.


(i) You should hear three clicks.

Step 7

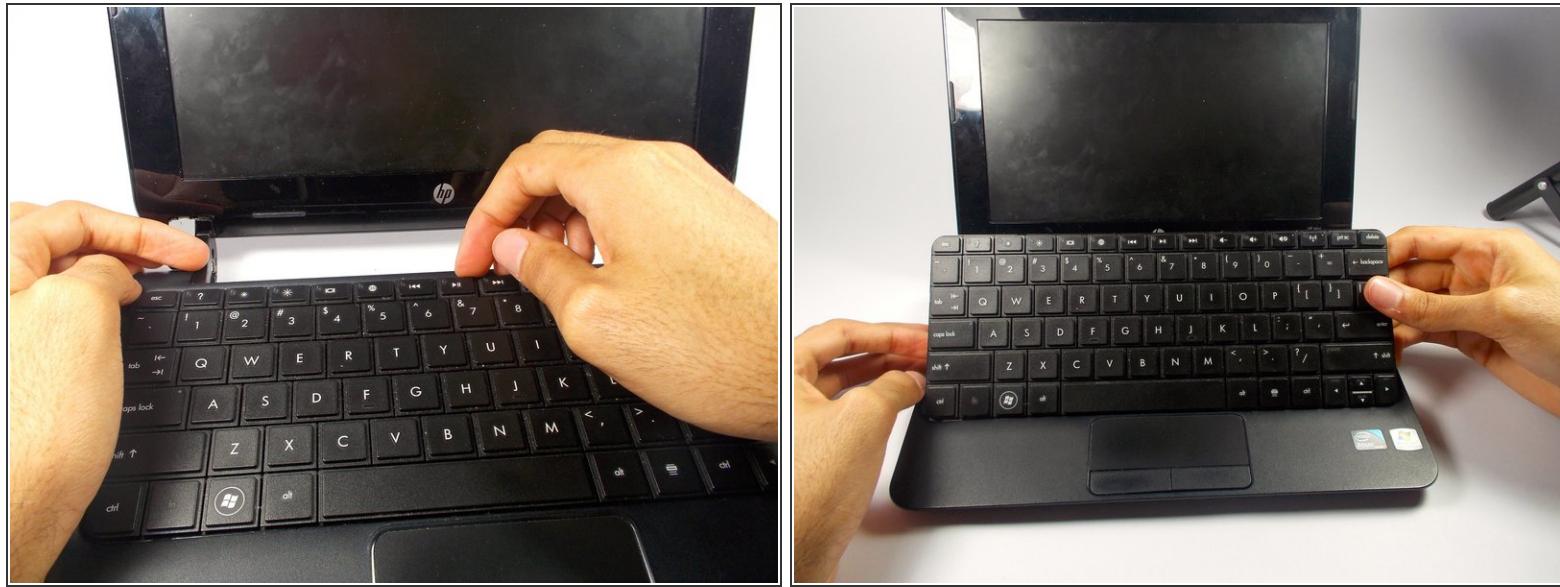



- Move and hold the bezel slightly towards the screen while lifting the keyboard from the top.

Step 8

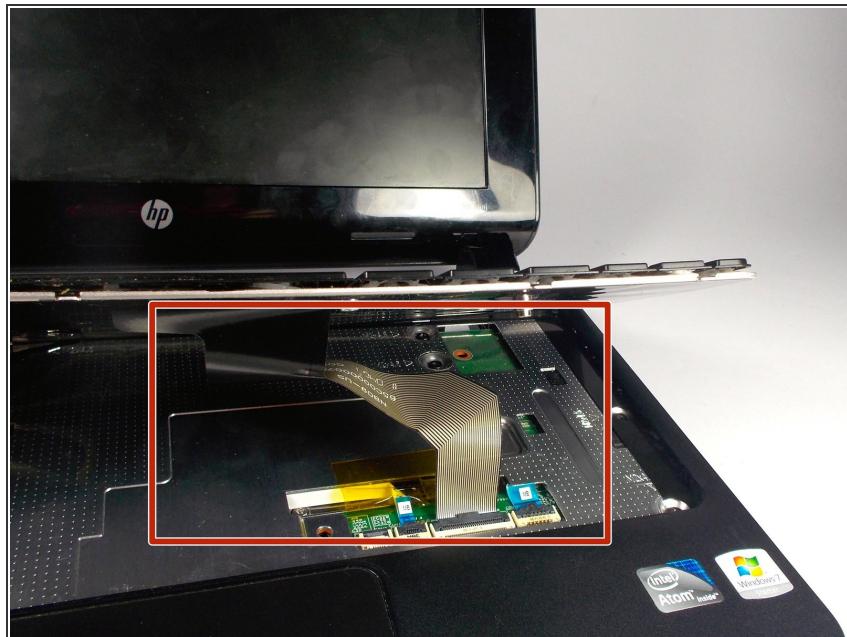


- Pull up the keyboard from the bottom corners exposing the keyboard cable.

Step 9

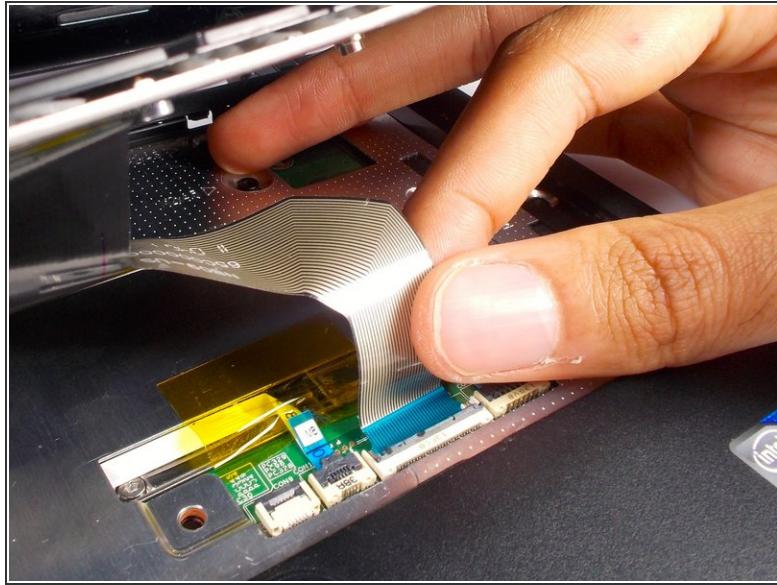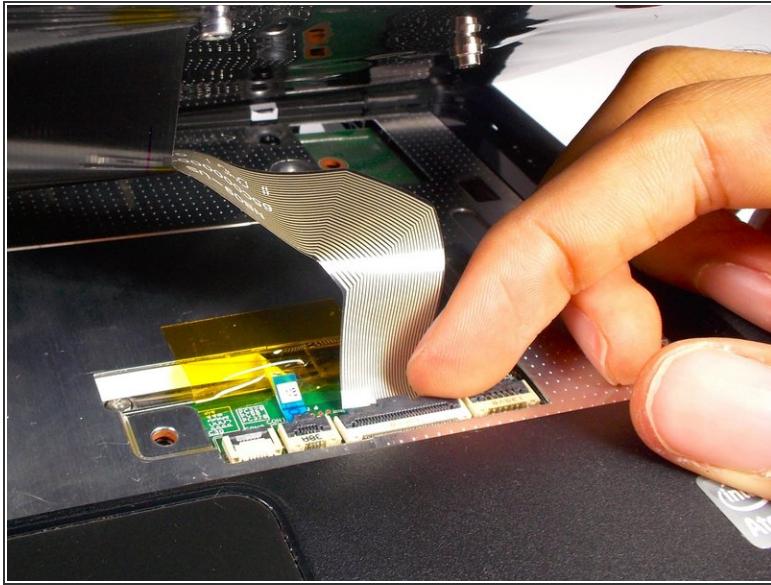

- Lift the black holder connected to the keyboard cable until it points up.

Step 10

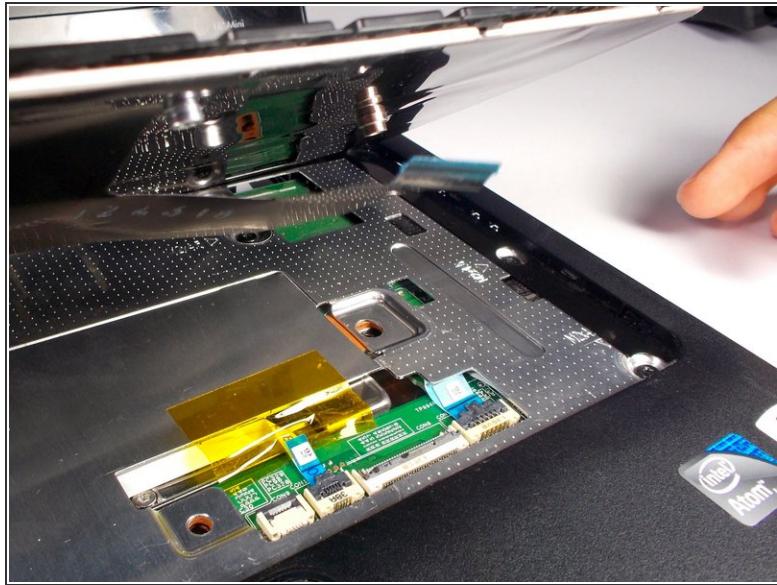

- Gently pull the keyboard cable from the socket.

To reassemble your device, follow these instructions in reverse order.