




# HP Mini 110-3735dx RAM Replacement

Replacing the RAM (memory) of your HP Mini 110-3735dx.

Written By: Tyrone Williams

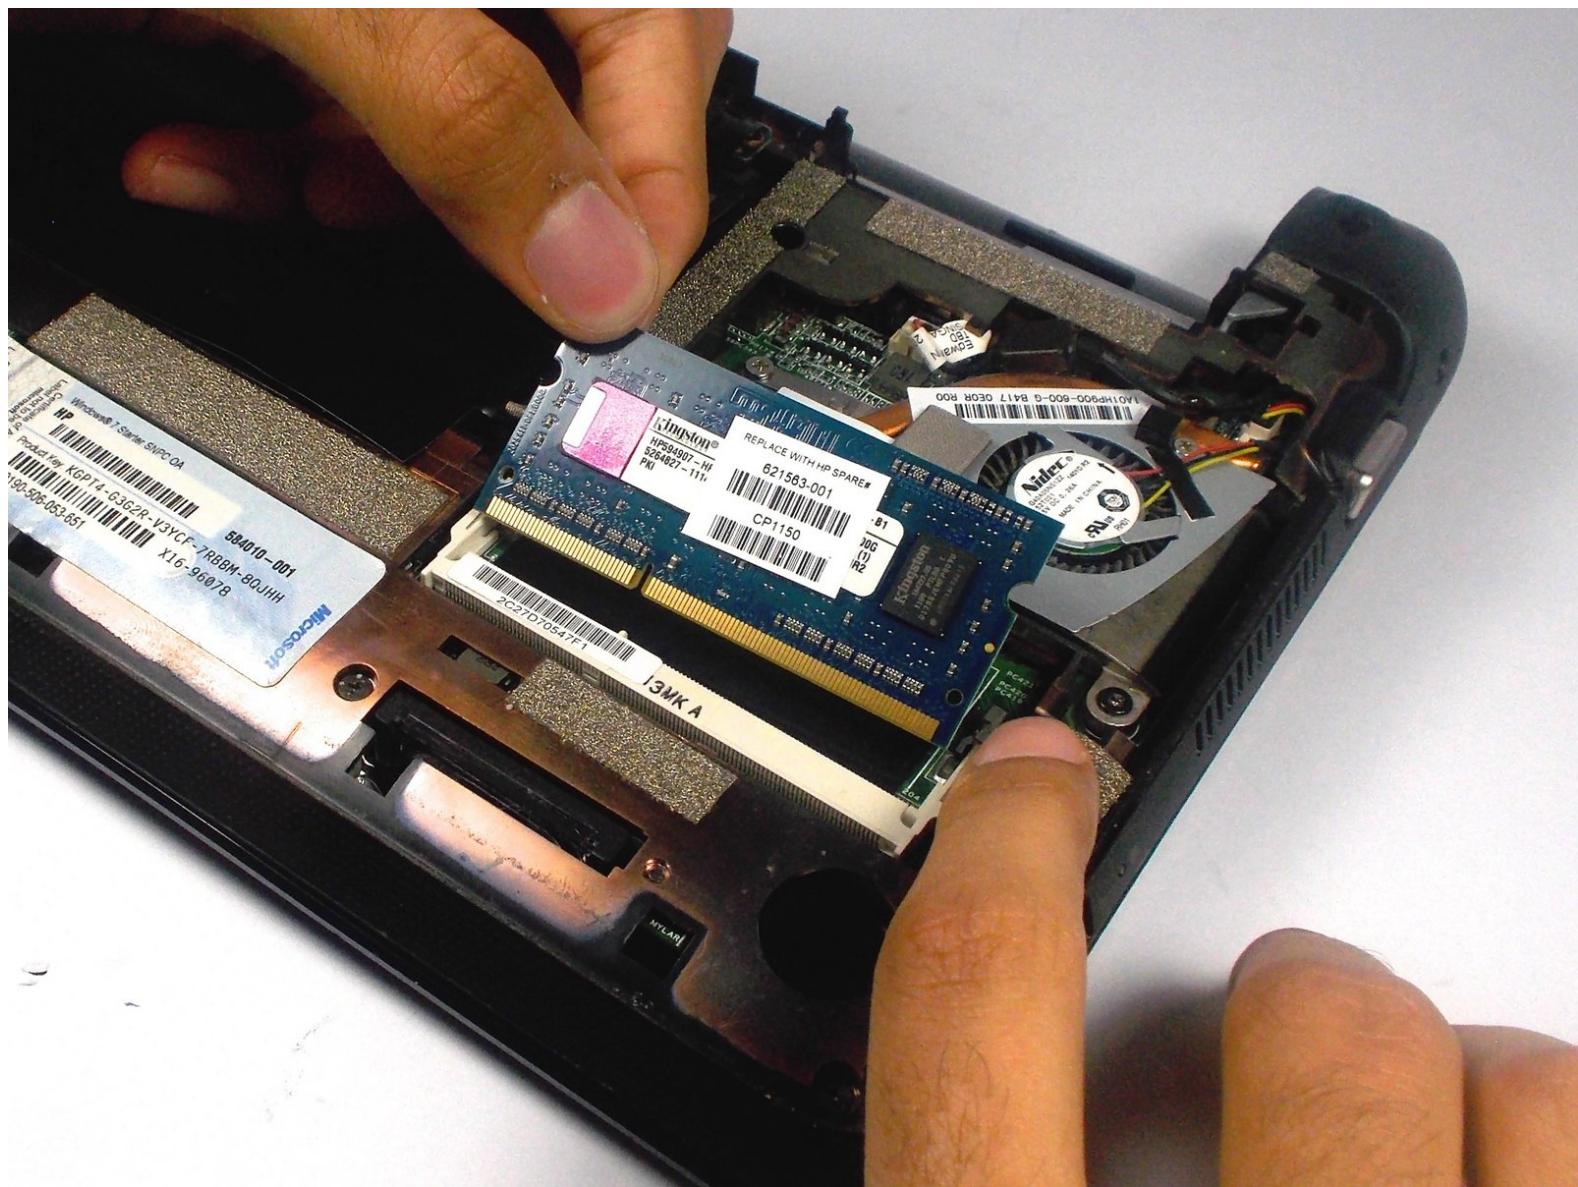

## INTRODUCTION

If your computer is running slow, has had blue screen of death, or you want to upgrade your HP Mini, follow this guide for replacing your RAM.

## Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

## Step 2




- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.

## Step 3 — Backcover




- Pull upward from under the back cover via the missing battery area.
- *i* Best to start from one of the corners.

## Step 4 — RAM

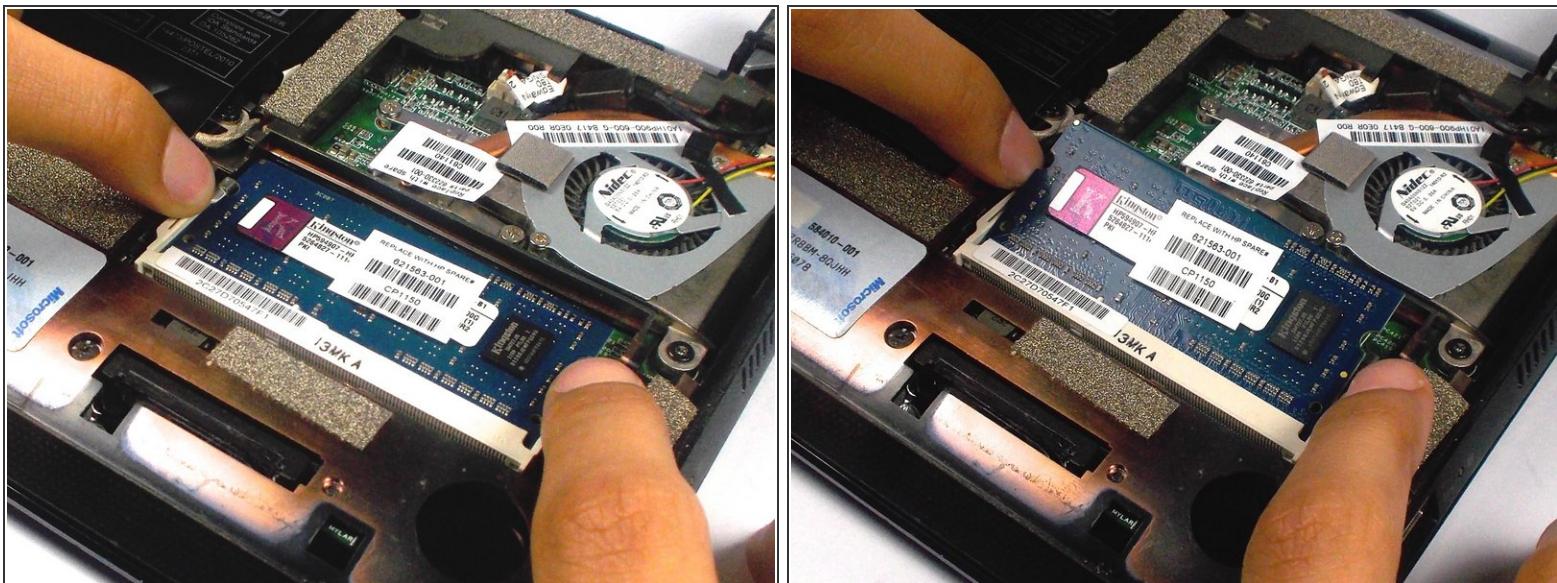

- Push the two white holders holding the RAM outward until it points upwards at about a 45 degree angle.

## Step 5

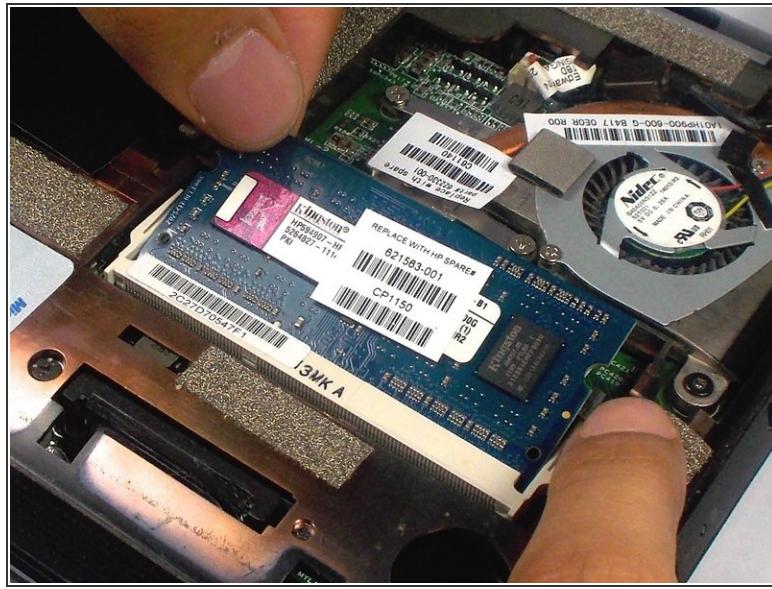

- Gently pull the RAM from it's socket.

To reassemble your device, follow these instructions in reverse order.