



# HP Mini 210-1199DX Bottom Cover Replacement

Replace the bottom cover of the HP Mini 210-1199DX.

Written By: Phillip Winston




## INTRODUCTION

The case of the HP Mini 210-1199DX needs to be removed in most circumstances for any computer repair or replacements. This guide will show the user how to complete this task.

### TOOLS:

- Spudger (1)

## Step 1 — Battery

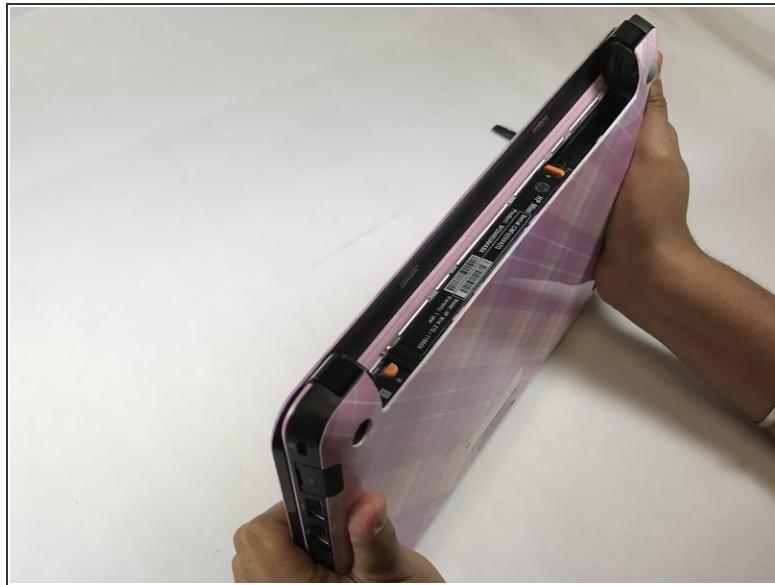


- Unplug the netbook.
- Secure the netbook in a upright position.
- Slide the plastic battery latch that secures it into the netbook.
- Keep thumb secure on the right tab as you begin to remove the battery.

## Step 2



- Remove the battery from the device.

## Step 3 — Bottom Cover

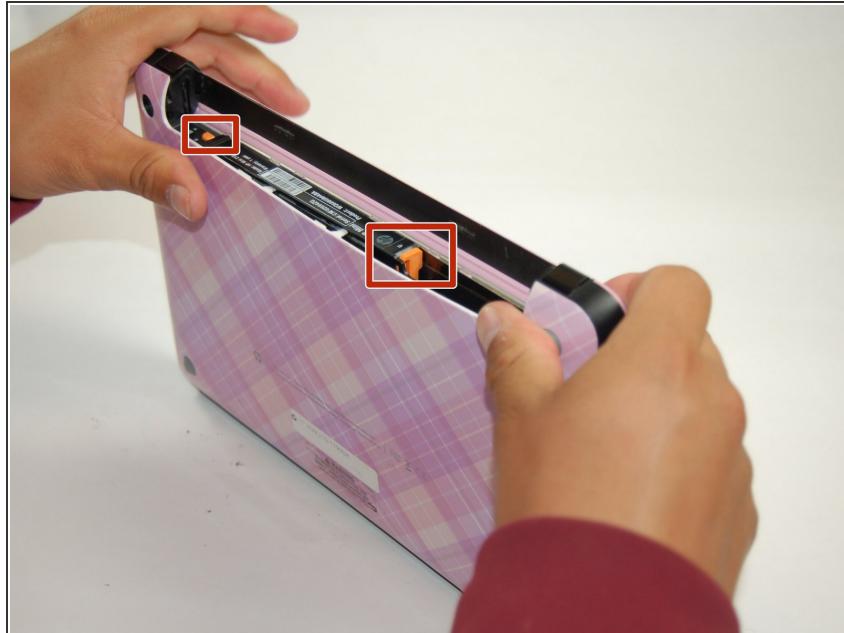


- Press down on the two orange buttons to release.
- If the case does not pop off, begin to use Spudger to pry the case off the back.

## Step 4



- Place the spudger on corners and openings in order to begin removal of the back.
- Continue this on all corner until the case comes fully off of the back.

## Step 5

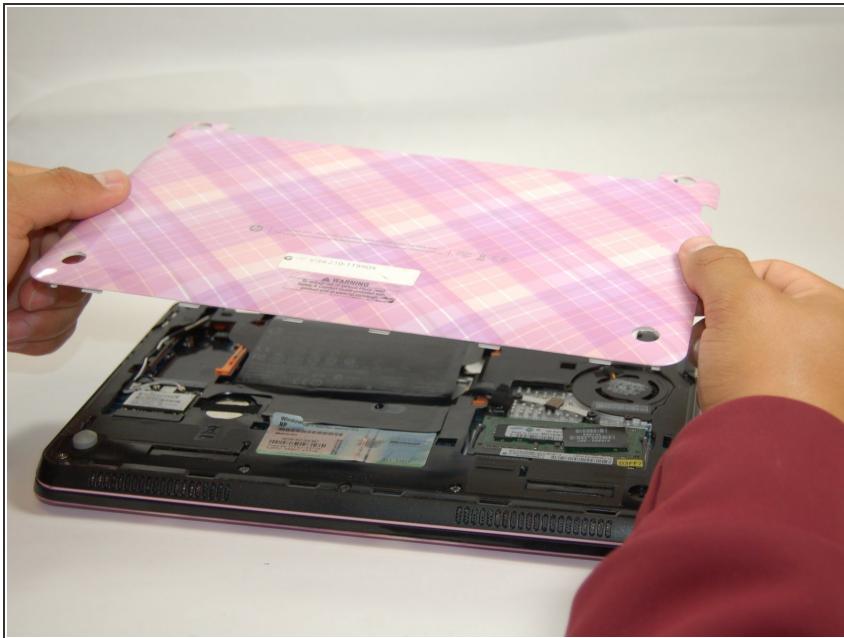

- Pull the case off of the device

To reassemble your device, follow these instructions in reverse order.