



HP Mini 210-1199DX Wireless Card Replacement

Wireless card with weak connection. Wireless card needs replacement.

Written By: Phillip Winston



This document was generated on 2019-10-07 06:32:05 PM (MST).


INTRODUCTION

In this guide you'll be able to locate and remove or change out the Wireless Card of the HP Mini 210-1199DX.

TOOLS:

- [Spudger](#) (1)
- [Phillips PH000 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery

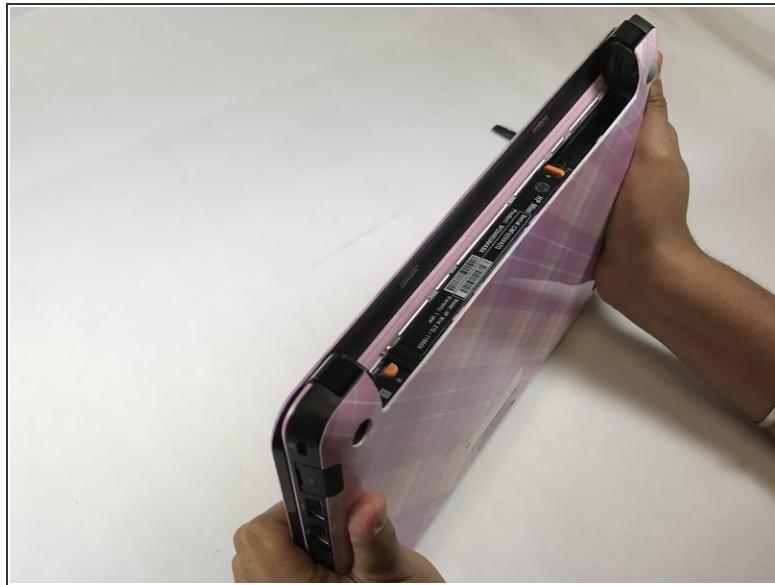


- Unplug the netbook.
- Secure the netbook in a upright position.
- Slide the plastic battery latch that secures it into the netbook.
- Keep thumb secure on the right tab as you begin to remove the battery.

Step 2



- Remove the battery from the device.

Step 3 — Bottom Cover

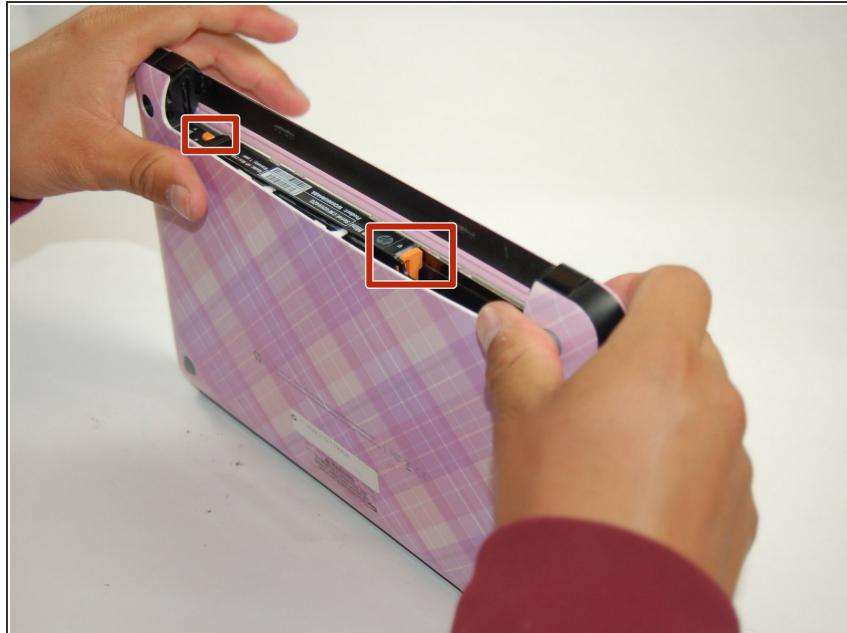


- Press down on the two orange buttons to release.
- If the case does not pop off, begin to use Spudger to pry the case off the back.

Step 4



- Place the spudger on corners and openings in order to begin removal of the back.
- Continue this on all corner until the case comes fully off of the back.

Step 5

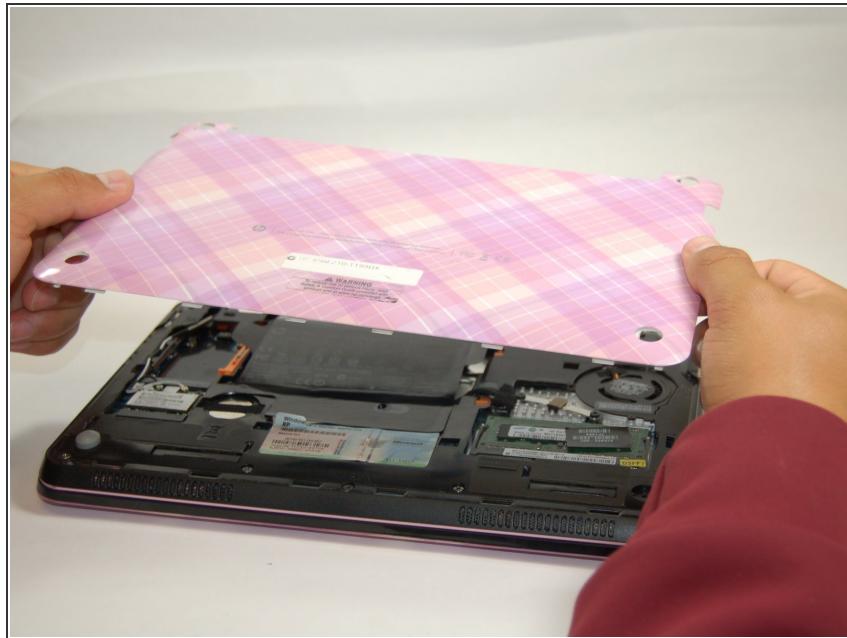

- Pull the case off of the device

Step 6 — Wireless Card




- Locate the Wireless Card.

Step 7



- With fingers or tweezers, carefully pull the black and white wire connectors from their sockets and move them to the side.

Step 8

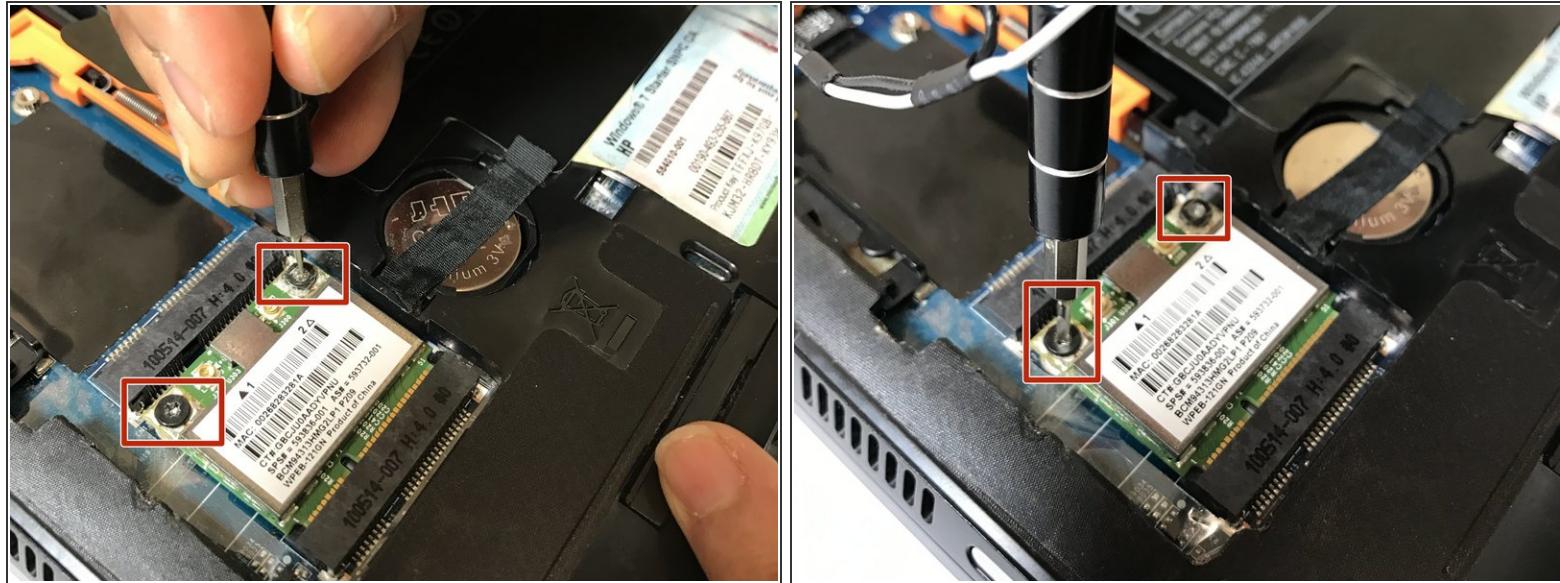

- With a Phillip's Screwdriver, firmly but slowly remove the two screws from the top of the wireless card.
- Be careful not to strip the nail head.

Step 9



- Pull the wireless card out.

To reassemble your device, follow these instructions in reverse order.