



HP Mini 311 RAM Replacement

This installation guide will provide the necessary information needed to replace the RAM for an HP Mini 311.

Written By: Christian Santoyo



INTRODUCTION

If you want to increase your computers memory or are having trouble with speed, the RAM is simple to replace in HP Mini 311.

TOOLS:

- [Phillips #00 Screwdriver \(1\)](#)

PARTS:

- [PC3-10600 2 GB RAM Chip \(1\)](#)

Step 1 — Battery



- Lay the laptop on a flat surface, bottom side up and slide the two battery release latches toward the outside of the case.

Step 2



- Slide the battery away from the device to remove.


Step 3 — Memory Shield



- With the device still in a bottom side up position, proceed to unscrew the two 4.8mm Phillips 00 screws from the memory shield.

(i) The screws will remain in the shied.

Step 4

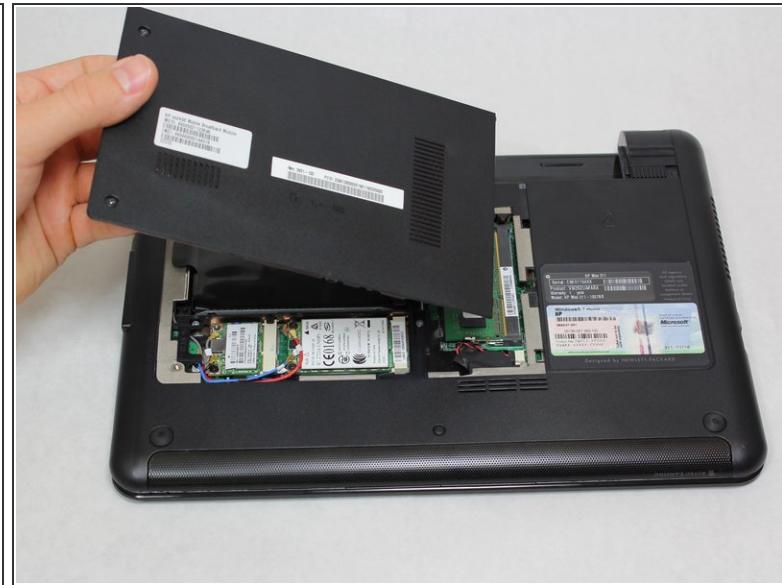

- Lift the memory shield up and remove from the laptop.

Step 5 — RAM



- Firmly press on the metal pins located on both sides of the RAM.
- One side of the RAM will pop up to form a 40 degree angle with the body of the laptop.
- Simply grab and remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.