



HP Mobile Thin Client mt41 Fan Replacement

This guide will help you replace the fan in your laptop

Written By: William Rapp



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Spudger \(1\)](#)


Step 1 — Back Cover



- Locate the screws highlighted to remove.

(i) We recommend removing the battery first. Refer to the "Battery Replacement" guide to learn how to remove the battery.


Step 2

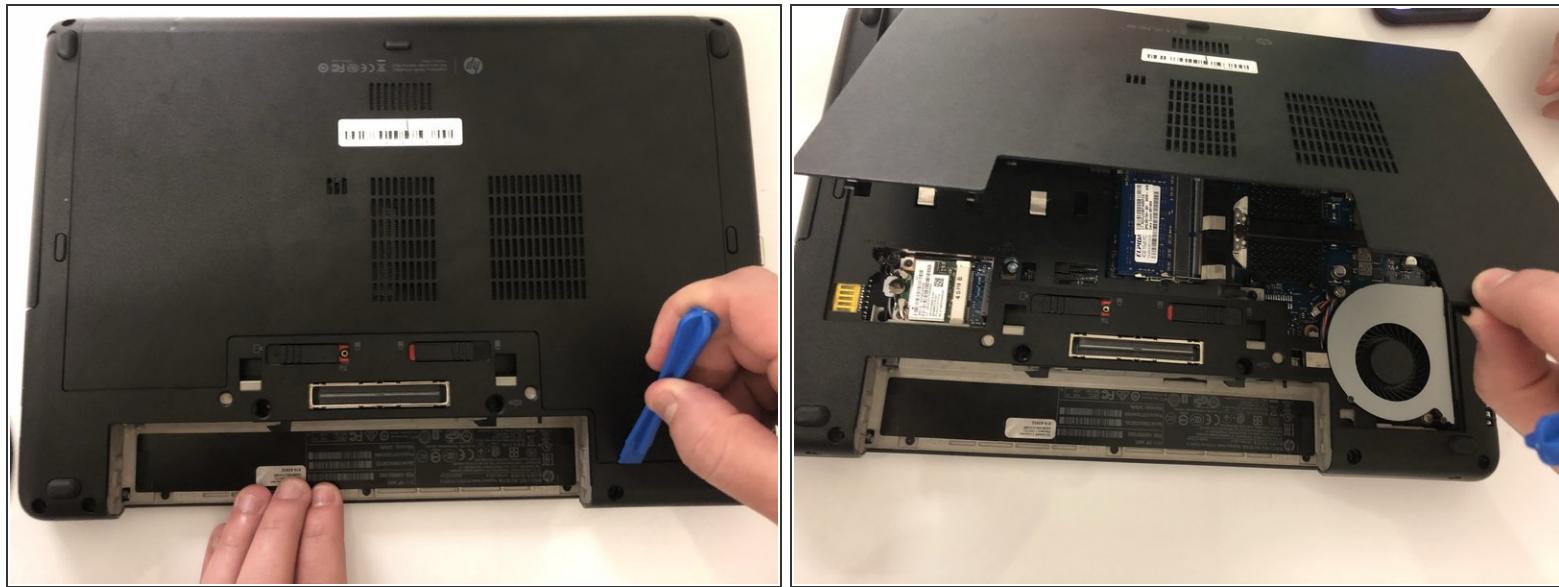

- Remove the middle back lid shown in the image.

(i) May require a bit of force. If it is not coming out try the other side.

Step 3

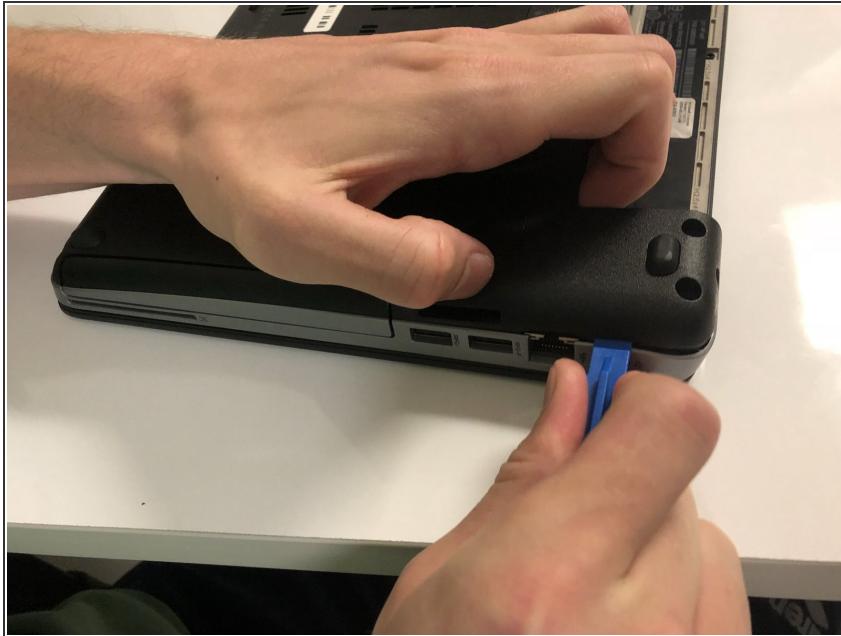

- Go around the edges with a special tool to pop lid out of place.


Step 4



- Once all corners are popped out of place lift the cover up slowly.


i Lifting the lid should not require much force.

Step 5 — Fan

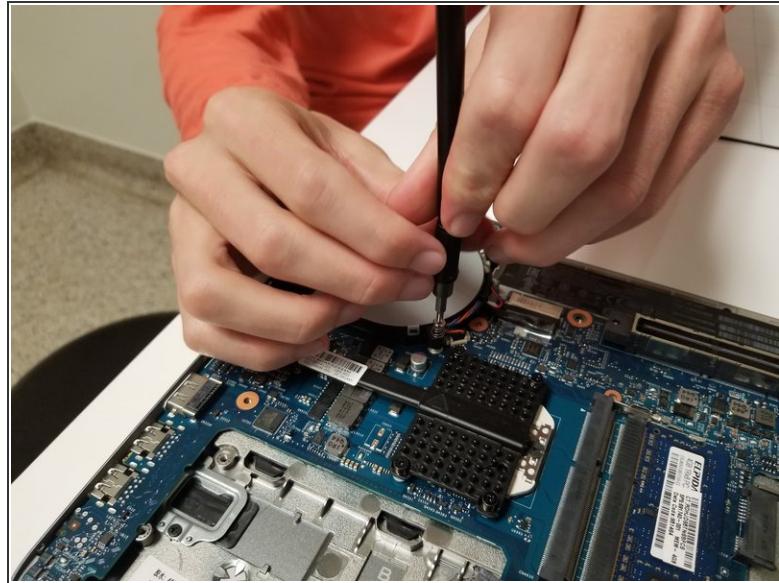


- Using a J1 head for your screwdriver, remove the 4 surrounding screws.

Step 6

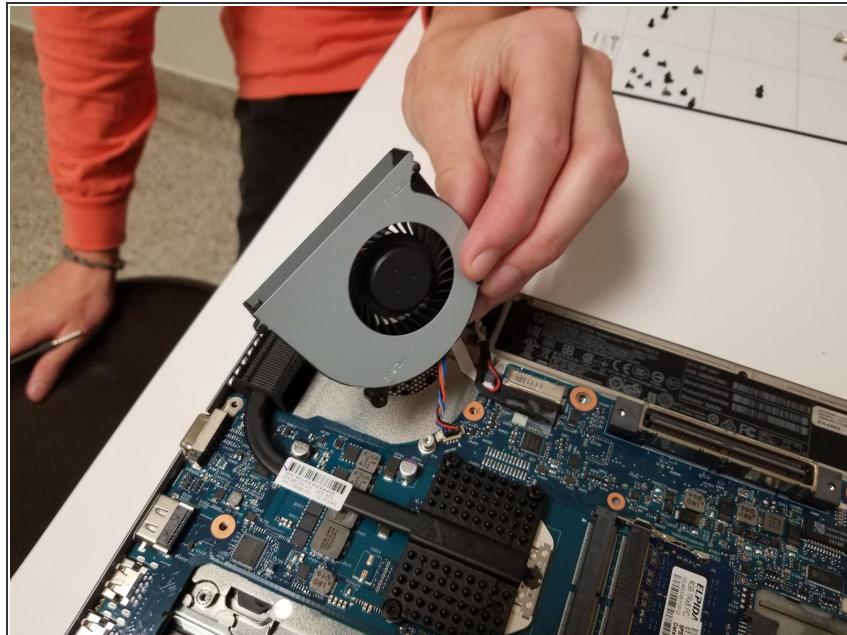

- Keep your screws close by, and slowly remove the CPU fan.

Step 7

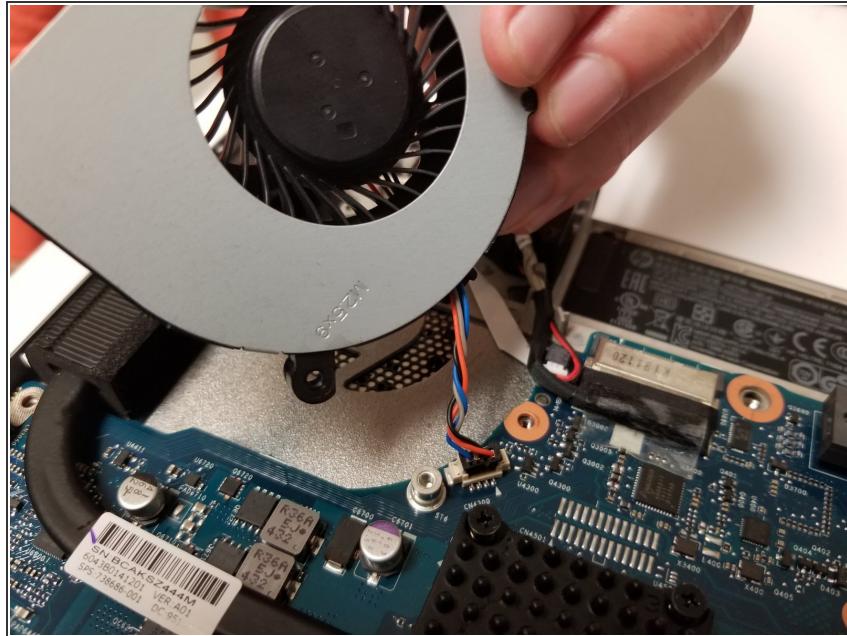

- Be mindful of wires, the final step is to unplug the fan from the motherboard, at the base of red and blue wires.

To reassemble your device, follow these instructions in reverse order.