


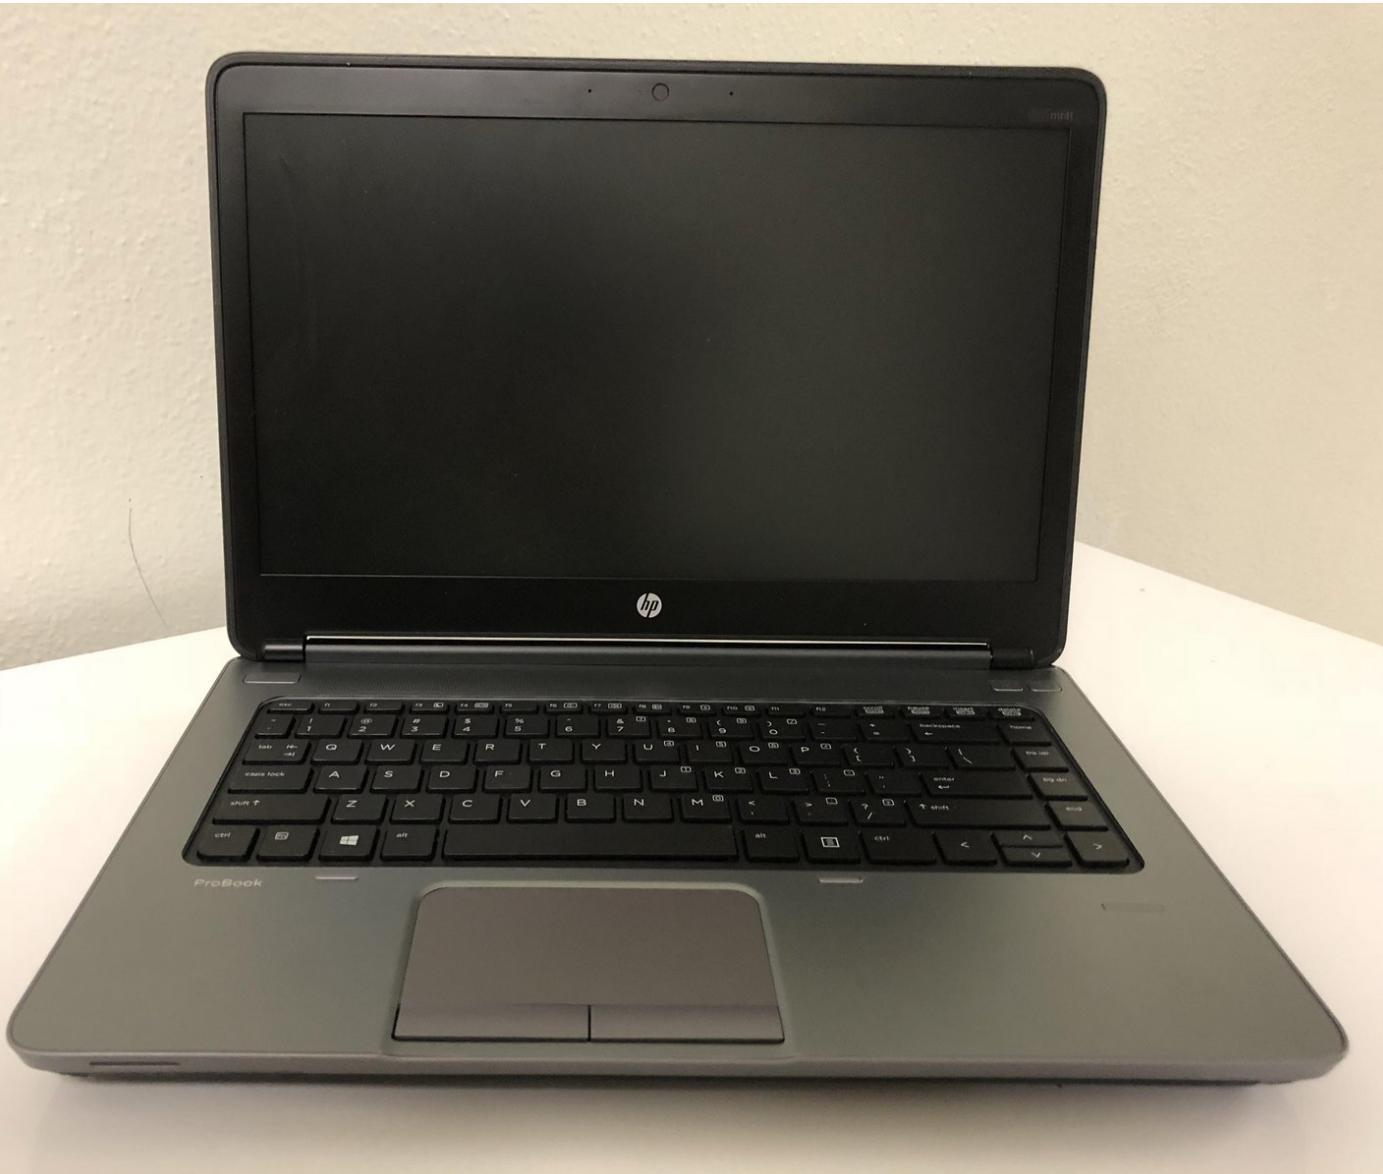

HP Mobile Thin Client mt41 Optical Disc Drive Replacement

When the optical disc drive is broken, it won't open or read the discs.

Written By: Hassan Almunasif



 **TOOLS:**

- Essential Electronics Toolkit (1)

Step 1 — Optical Disc Drive



⚠ Turn off and unplug your laptop. Also, make sure to disconnect all the external devices.

- After that, slide the two switches to the indicated directions in order to remove the battery and the back cover.

Step 2



(i) Now you're able to remove the battery and the service cover.

- Slide the battery upward to remove it.

Step 3



- Slide the service cover downward.
- After that, lift the back cover to remove it.

Step 4



- Unlock the indicated screw in order to remove the optical drive.
- Slide the optical drive to completely remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.