


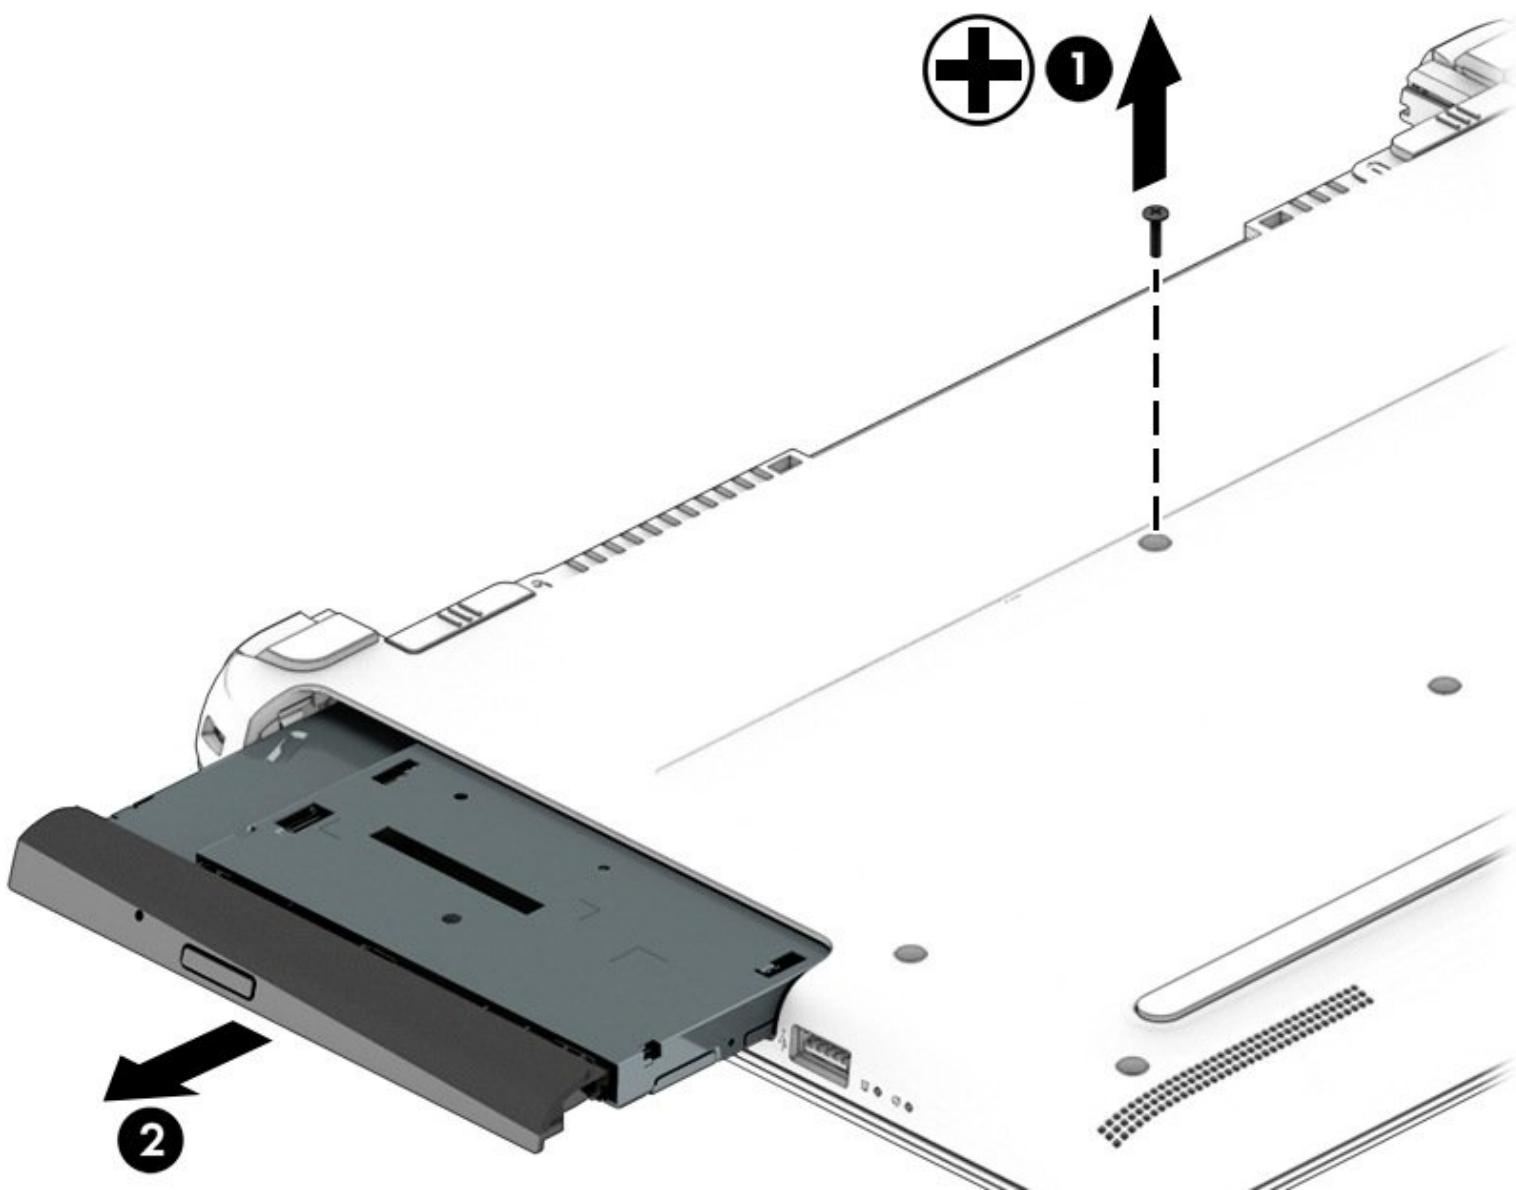

# HP Notebook 15-ay011nr Optical Drive Replacement

Replace Optical drive HP Notebook 15-ay011nr

Written By: Alec Ringberg



## INTRODUCTION

This guide will show you how to replace the optical drive in an HP Notebook 15-ay011nr.

### TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Before disassembly




- Before disassembling the computer, follow these steps:
  - Shut down the computer
  - If you are unsure whether the computer is in hibernation, turn the computer on, and then shut it down through the operating system.
  - Disconnect all external devices connected to the computer
  - Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer

## Step 2 — Removing the battery

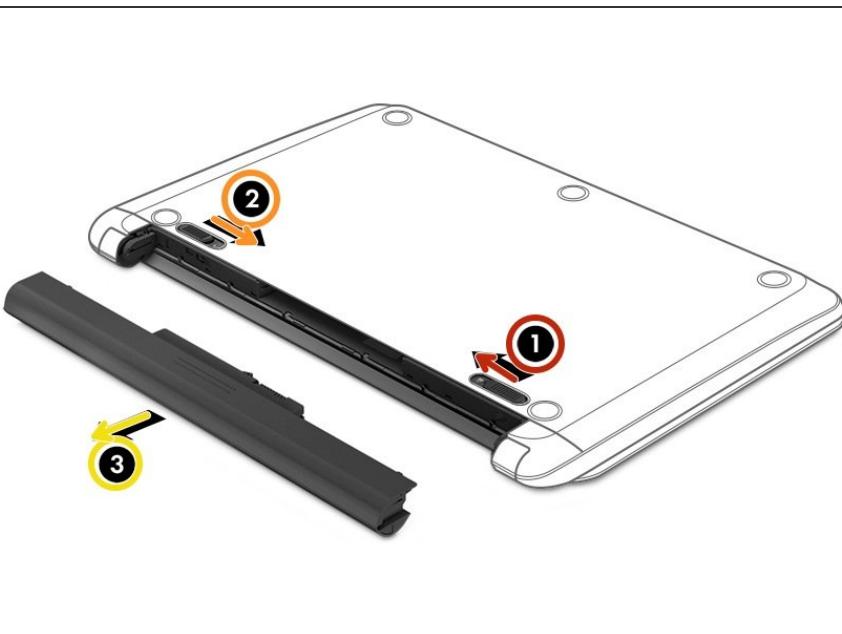

- To remove the battery:
  - Position the computer upside down on a flat surface
  - Slide the battery lock latch (1)
  - Slide the battery release latch (2)
  - Remove the battery (3) from the computer

## Step 3 — Optical Drive

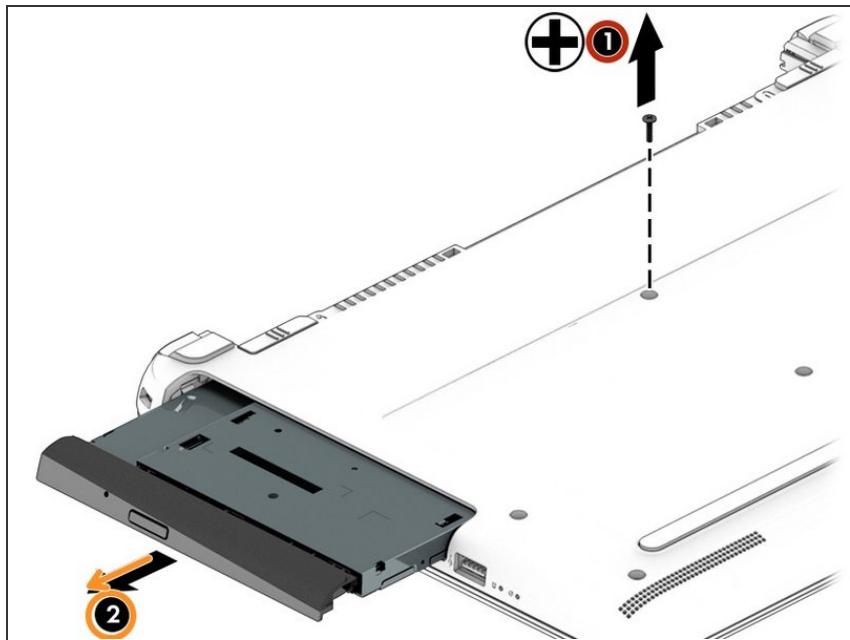

- To remove the optical drive:
  - Remove the Philips PM2.5x6.0 screw (1)
  - Remove the optical drive (2) by sliding it out of the optical drive bay

To reassemble your device, follow these instructions in reverse order.