



HP Notebook 15-ba018ds Battery Replacement

How to remove and replace a battery in an HP Notebook 15-ba018ds.

Written By: Gabryella Reynoso



INTRODUCTION

This guide will give a step by step instruction on how to remove and replace a battery in an HP Notebook 15-ba018ds. Use this guide if you're having problems with a faulty battery.

Step 1 — Battery



⚠ Before beginning, make sure the laptop is completely turned off by pressing the off button and waiting for the screen to turn black.

- Flip the laptop over so the battery is exposed which will be next to the hinges on the top left and right.

Step 2



- Place your thumbs on the slide locks that are next to the hinges and simultaneously push them toward each other to unlock the battery.
- While still holding onto the slide locks, push the battery away from the laptop with your index fingers.

To reassemble your device, follow these instructions in reverse order.