



HP Officejet 4630 Power Supply Replacement

A common cause of boot failure is a faulty power supply. Replacing the power supply can fix this problem.

Written By: Maya Willis



INTRODUCTION

This guide will show you how to replace the power supply in your HP Officejet 4630. The power supply is easy to replace and can be done with only a screwdriver.

TOOLS:

- T10 Torx Screwdriver (1)

Step 1 — Power Supply




- Lift the hood of the printer.

Step 2



- Remove the two T10 11mm screws.

Step 3

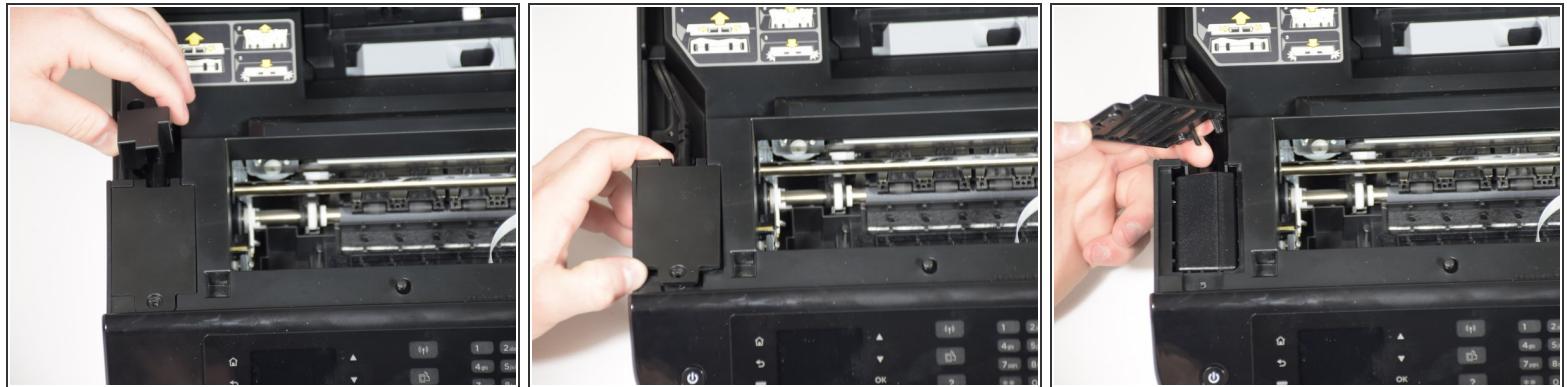

- Remove the panels covering the power brick and cord.

Step 4




- Remove the cord from the power supply.

Step 5



- Slide the power supply out from the chassis.
- ⓘ The power supply is still attached; don't pull too quickly.

Step 6

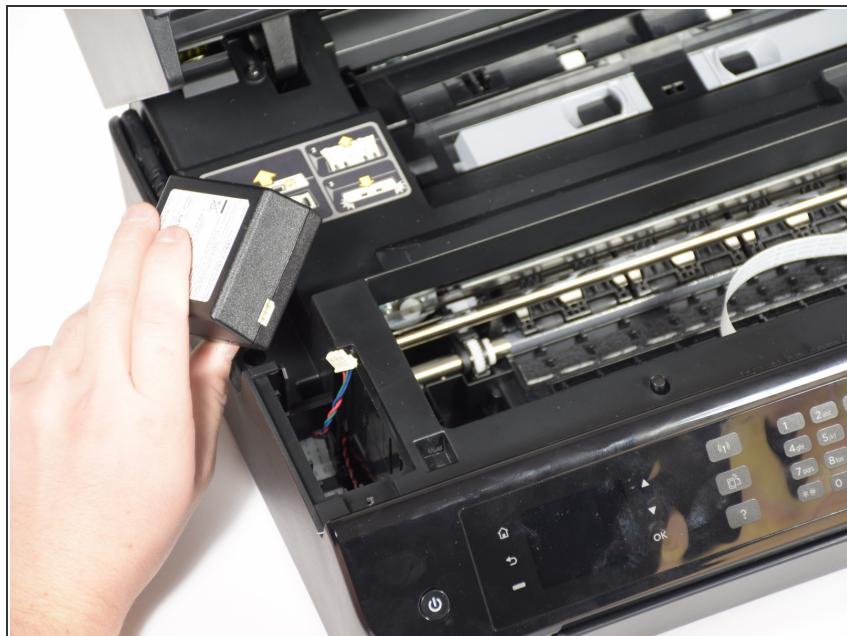

- Remove final cable from power supply.

To reassemble your device, follow these instructions in reverse order.