


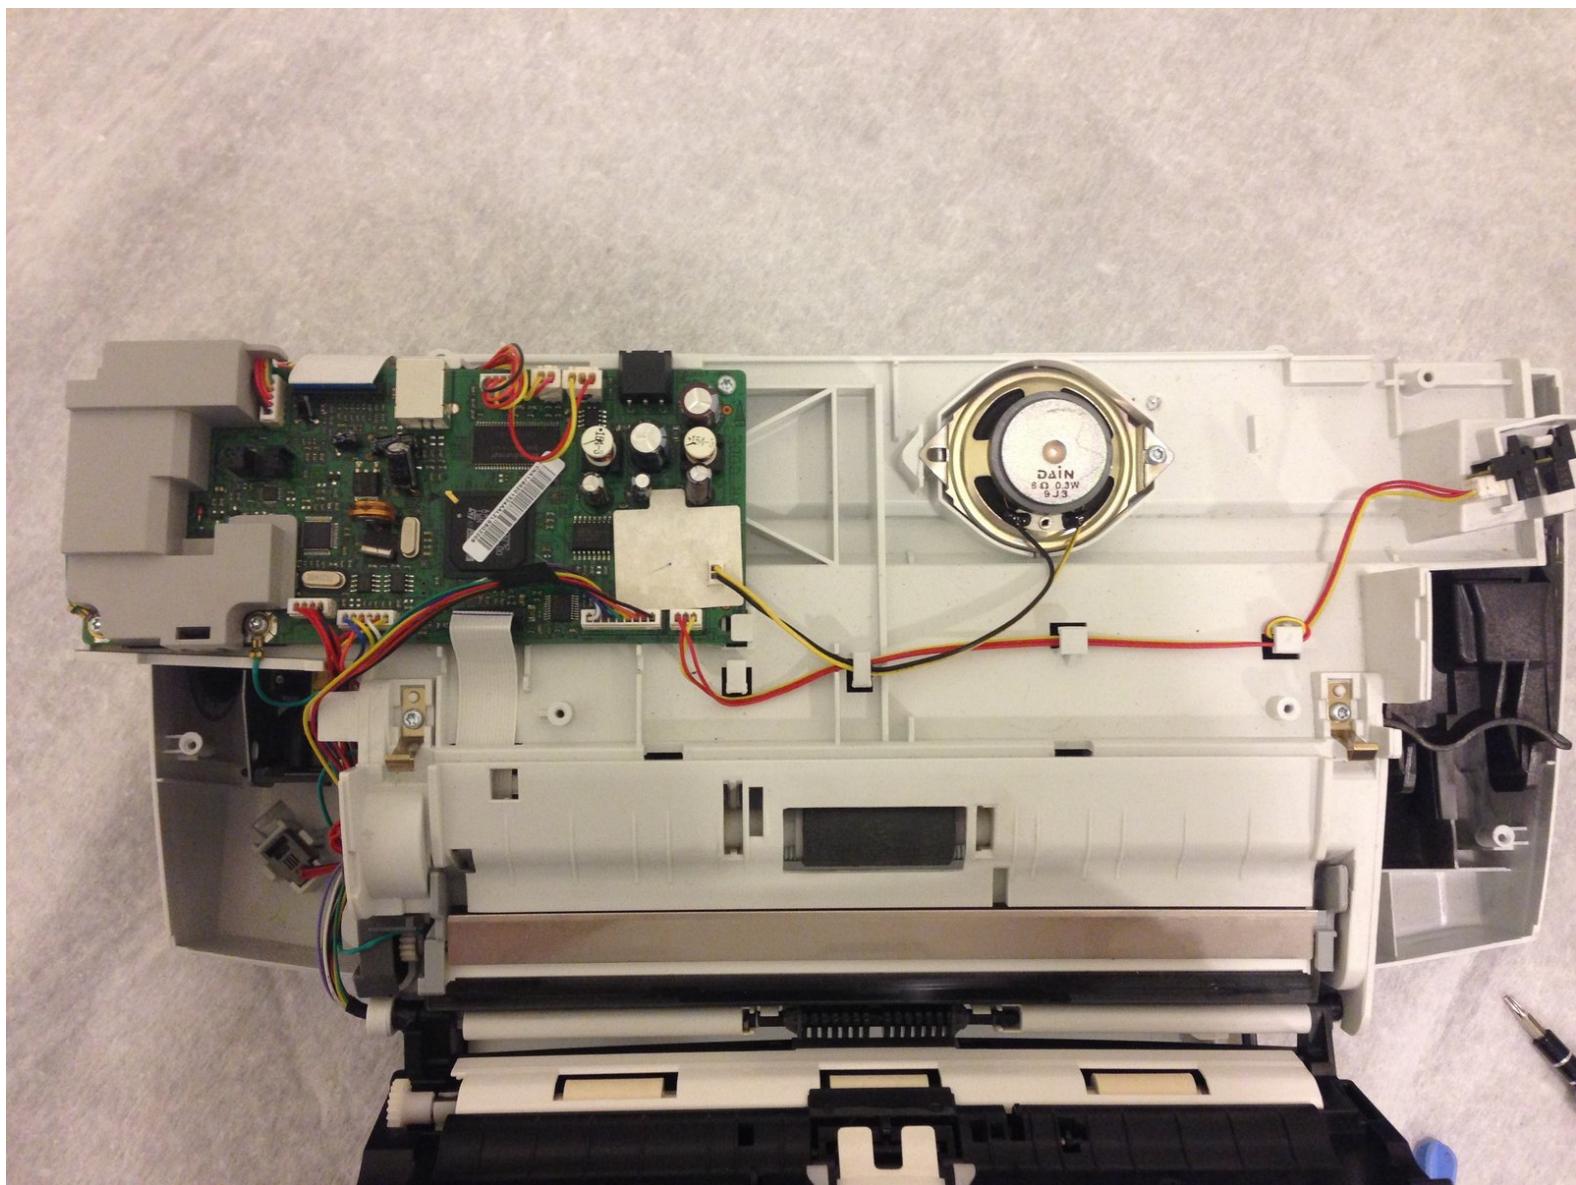

HP Officejet J3680 Speaker Replacement

This guide will help users of the HP Office J3680 replace their speaker.

Written By: Marisa



 **TOOLS:**

- T5 Torx Screwdriver (1)

Step 1 — Unplug the Device




- Remove the plug from the outlet and from the back of the device
- Remove the USB Cable from your computer and from the back of the device.

Step 2 — Remove Screws From Under the Control Panel



- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length.

Step 3 — Remove Screws Underneath the Ink Cartridge Cover

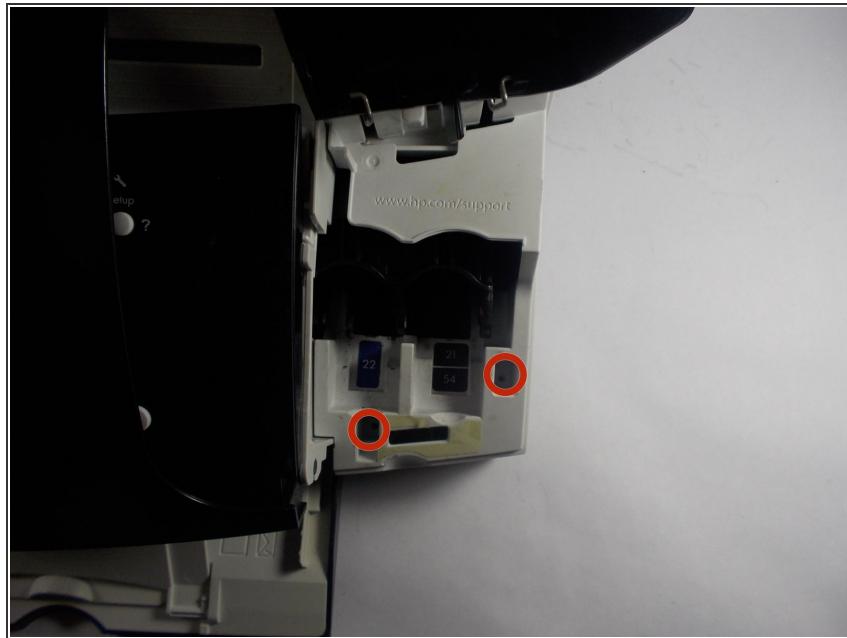

- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length

Step 4 — Remove Screws from Underneath the Phone Panel




- In step 2, you removed the screw from the blue indicated area.
- Gently pop off the black cover that the phone rests on. Underneath this cover, you will find two more screws.
- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length

Step 5 — Remove the Screws from the Rear of Device




- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length.

Step 6 — Remove Rear Plastic Panel

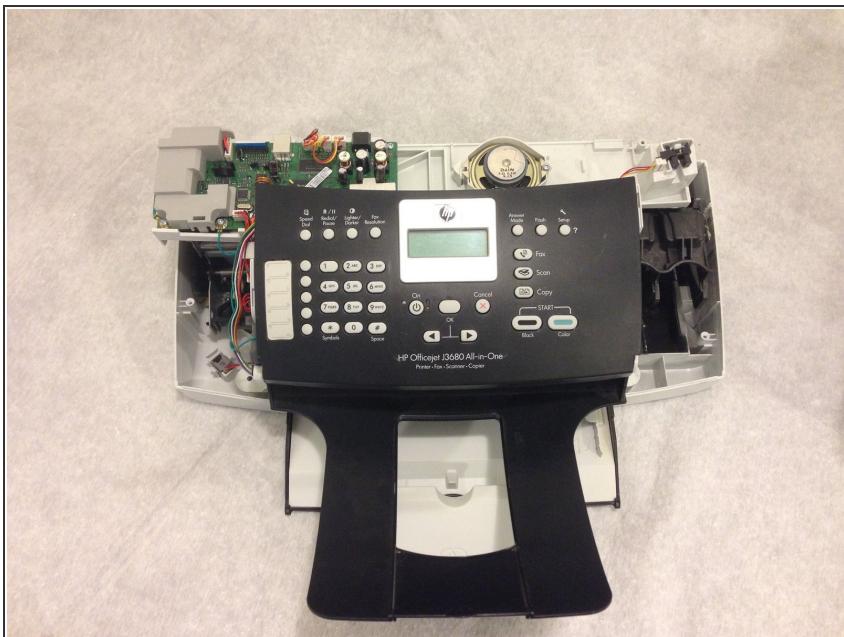


- Once the rear plastic panel has been removed, you are ready to replace and repair the necessary parts.

Step 7 — Unscrew the speaker

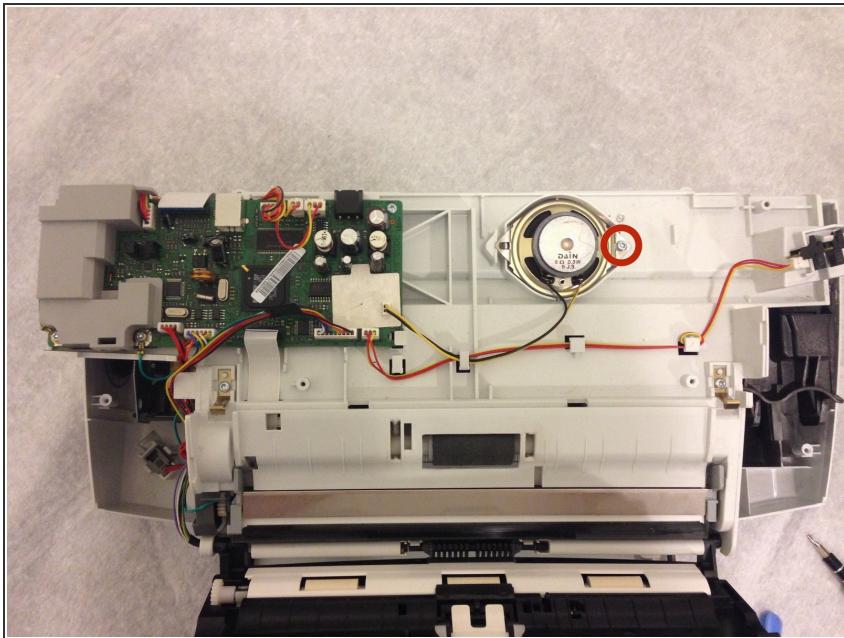

- Using your Torx t10 screwdriver, remove the screw located on the right side of the speaker as shown in the figure on the left. The screw is 13mm in length.

Step 8 — Detach the speaker

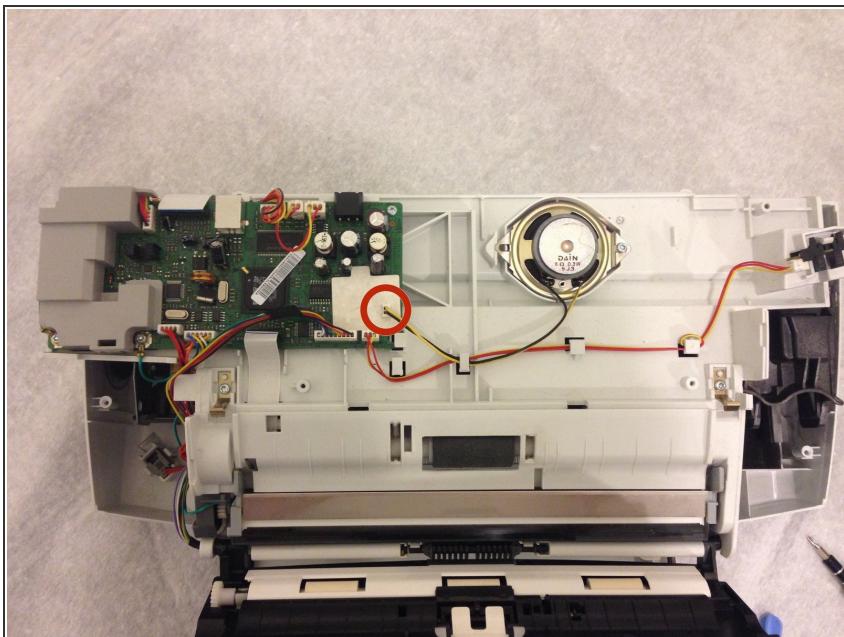

- Follow the wires, connected to the speaker, to the green mother board.
- Then detach the white plastic piece connected to the wires, shown on the left, by gently pulling it out from the motherboard.

To reassemble your device, follow these instructions in reverse order.