



# HP Officejet Pro 6230 Printer Power Adaptor Replacement

This guide will illustrate the replacement of an AC Power Adapter on an HP Officejet Pro 6230 Printer if it becomes unresponsive.

Written By: Natalie Carmona



This document was generated on 2019-10-06 08:53:08 AM (MST).

## INTRODUCTION

This guide provides instructions to replace the AC power adapter on an unresponsive HP Officejet Pro 6230 Printer. Even though this is an older model printer, it is wireless: this makes it a perfect candidate for iFixit because most people would throw away an old model printer when it's dead, but since it is wireless, it still has the potential to be used alongside new technology. Because of its age, there are not many online guides to help with repairs.

### TOOLS:

- [T6 Torx Screwdriver \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

## Step 1 — Power Adapter



- Turn the printer around and locate the back panel for power.

*(i)* Note: If you are unsure where the panel is located, look in the back right corner. The panel has "100-240V~50/60 Hz 700 mA" inscribed on it.

## Step 2



- Unscrew the 0.8 mm screw holding in the panel using a T6 Torx screwdriver.

*(i)* Note: Rotate the screw counterclockwise to loosen. Keep it in a safe place.

## Step 3



- Remove the HP AC Power Adapter from the slot.

## Step 4



- Locate the blue/green/red wire attached to the back of the adapter.

## Step 5



- Unplug the current adapter from the wire.

*(i)* Grasp the end of the connector, not the wires, to pull it out.

## Step 6



- Affix the new adapter to the same wire.

To reassemble your device, follow these instructions in reverse order.