



HP Officejet Pro 8600 Plus Front Panel Replacement

How to replace the HP Officejet Pro 8600 Plus front panel door or ink cartridge door.

Written By: Maegan Betz



INTRODUCTION

The front panel door may not close properly after repeated use. This guide will show how to remove the front panel door.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Front Panel



- Open the front panel door by pulling forward on the slot located on the front-left side of the printer.

Step 2



- Insert the plastic opening tool into the right socket connecting the front panel door to the hinge guide.
- Pry the socket open, lifting the door hinge guide out of place.

Step 3



- Pull the door-hinge guide to the right to detach its left socket.
- Lift the door-hinge guide upward and away from the front panel door.

Step 4



- Grab the front panel door close to its hinge on the right side.
- Pull the front panel door away from the printer toward you.

(i) Extra force may be required to pull the door from its hinge.

Step 5



- Grab the front panel door close to its two hinges on the left side.
- Pull the front panel door away from the printer toward you.

(i) Extra force may be required to pull the door from its hinges.

To reassemble your device, follow these instructions in reverse order.