


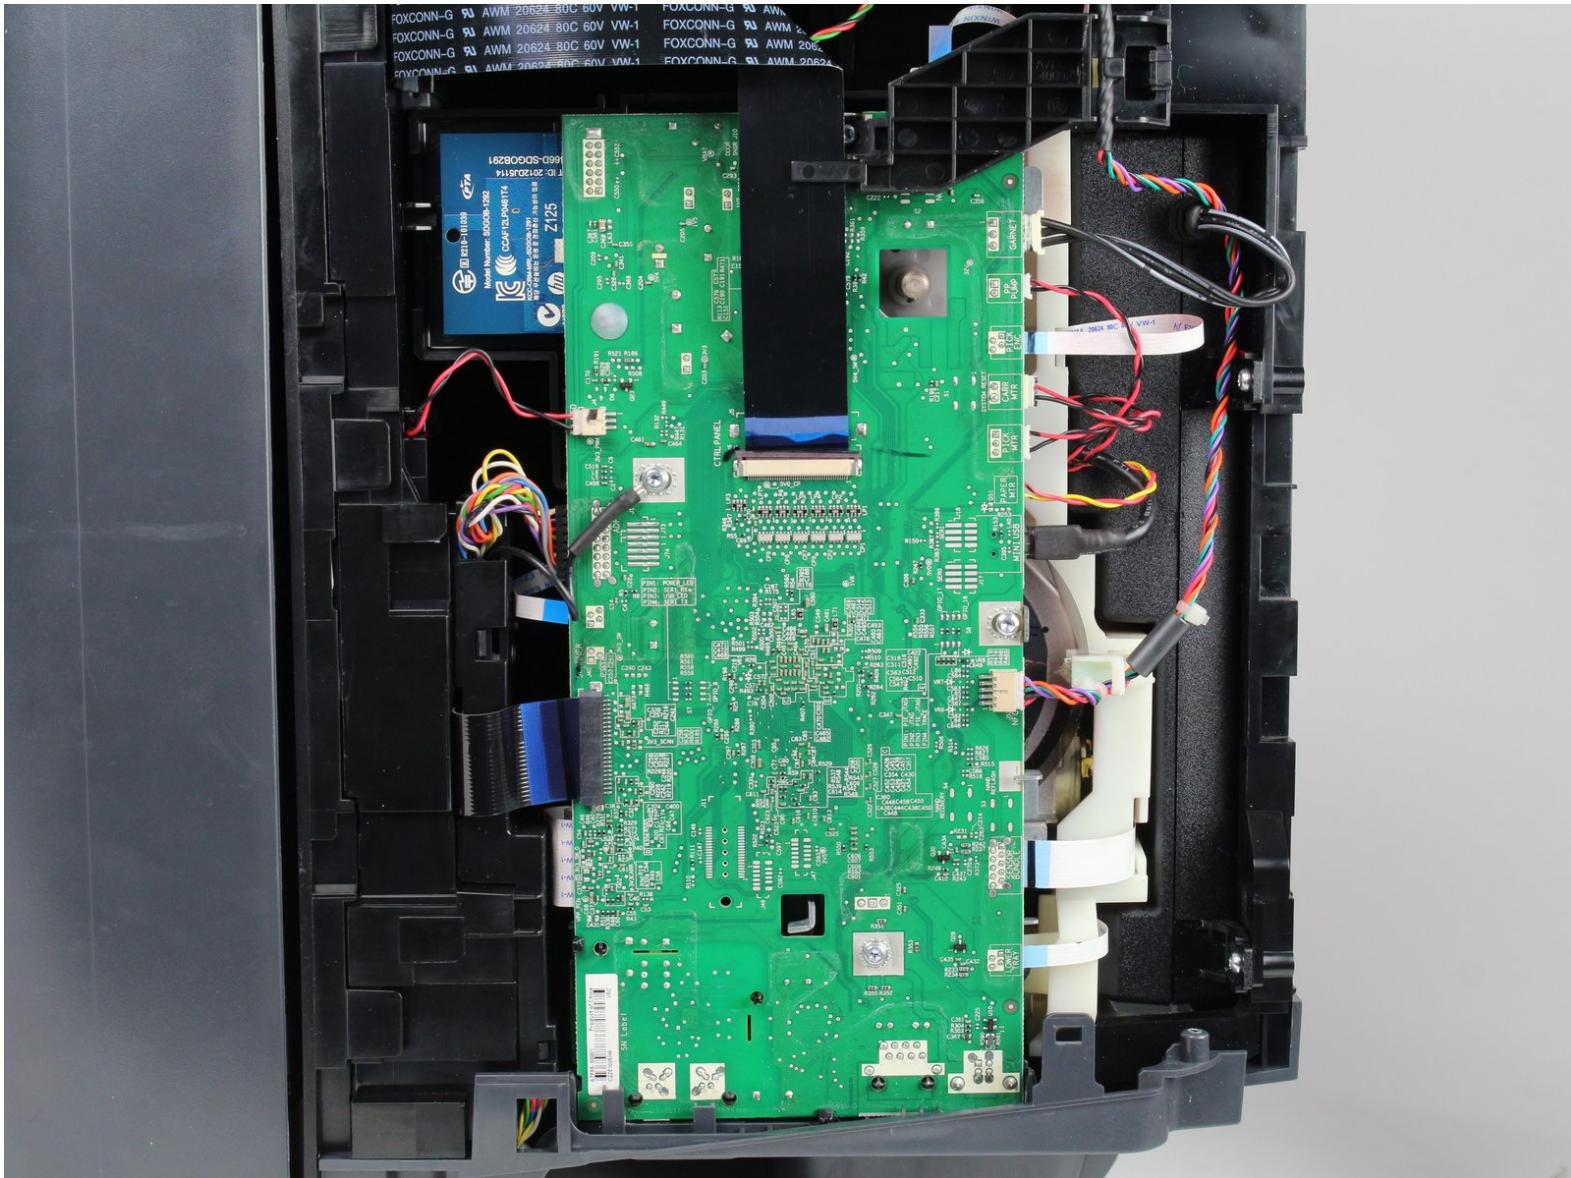

HP Officejet Pro 8620 Left Panel Replacement

This guide will assist you in removing the left panel of the HP Officejet Pro 8620.

Written By: Jeremy Taylor



This document was generated on 2019-11-07 04:03:11 PM (MST).

INTRODUCTION

The left panel gives access to a variety of parts, Including the Motherboard, CMOS Battery, Power Brick and several others.


You will need a T9-Torx Screwdriver for this project.

It is recommended that you organize the screws using a magnetic white board or your preferred method.

TOOLS:

- [T9 Torx Screwdriver \(1\)](#)

Step 1 — Left Panel

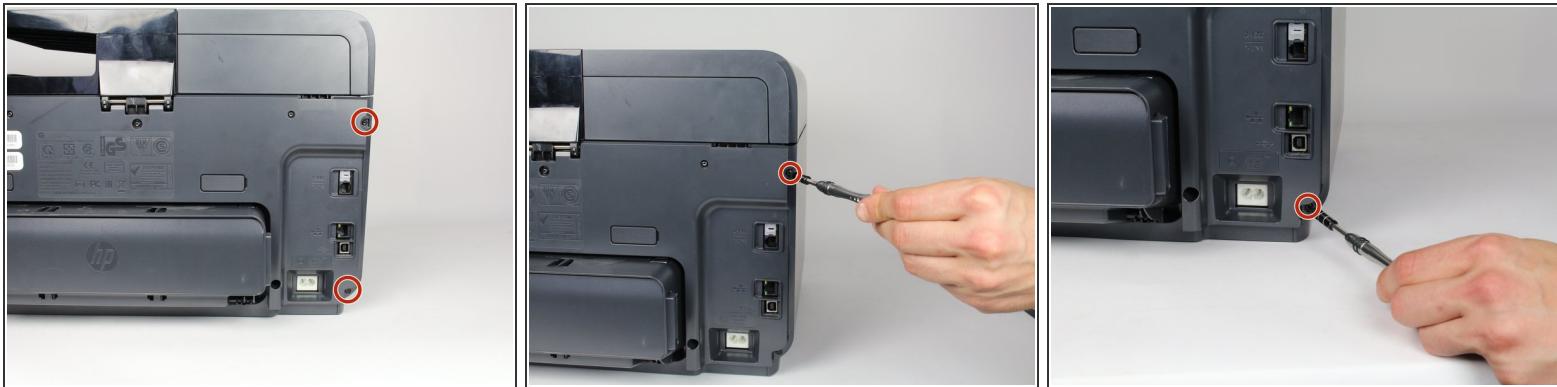


- Turn off the printer and remove the power cable.
- Remove two 13mm T9 screws using a T9-Torx screwdriver. Turn counterclockwise until the screws are released.

Step 2



- Open the front door by placing your finger on the indented groove on the left side of the printer and pulling down
- *(i)* This will give you access to the two T9-TORX 13mm screws that need to be removed to release the panel.

Step 3

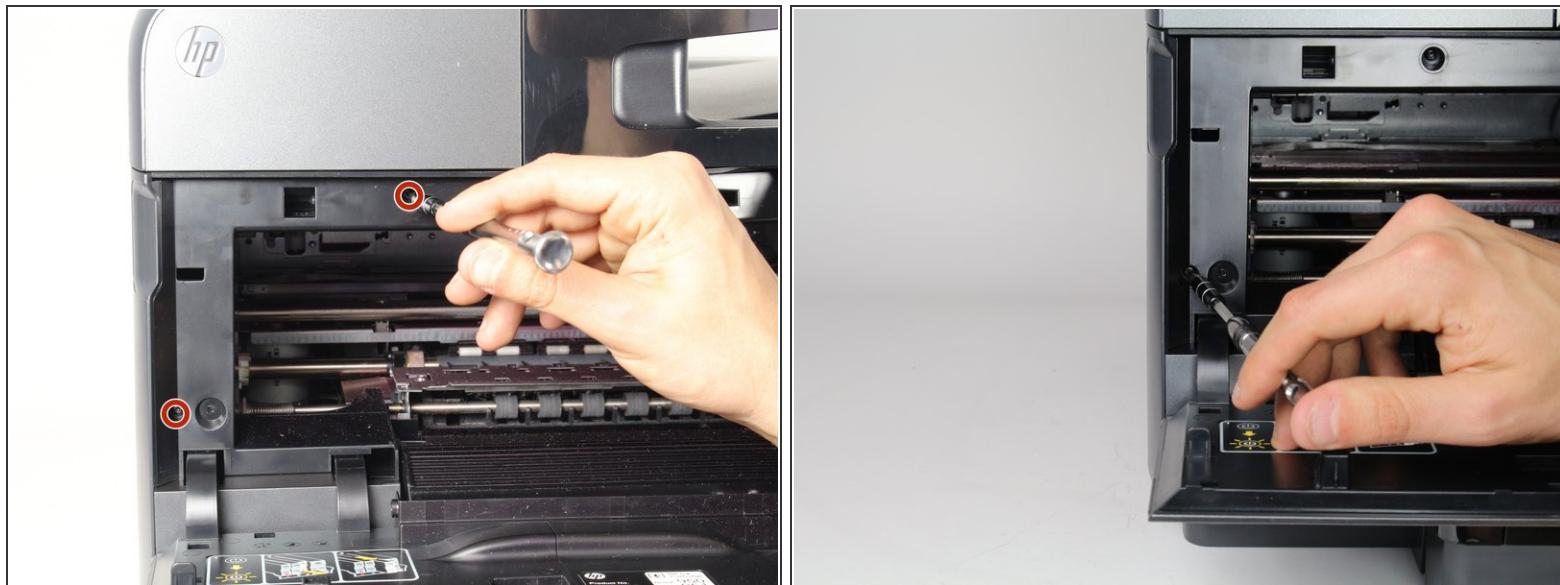

- Remove the two 13mm screws with a T9-TORX screwdriver by turning counter-clockwise (left).

Step 4



- Gently remove the left side panel by placing your palm flat against the surface and pulling down.

To reassemble your device, follow these instructions in reverse order.