



# HP Officejet Pro 8620 Printer Head Replacement

This guide will show how to replace the printer head for the HP Officejet Pro 8620.

Written By: Scott



## INTRODUCTION

This guide will show how to replace the printer head for the printer.

## Step 1 — Printer Head



- Open the printer head cover door by pulling the cover door.
- Power on the printer. This will move the print head to the left so you can access it.
- Unplug the power cable from the back of the printer.

**i** Do not power down the printer using the power button, as this will cause the printhead to move back to the right, making it inaccessible.

## Step 2




- Locate the printer head on the left side of the printer.

## Step 3



- Pull the white plastic tab on the right of the printhead toward you on an upward swing to unlock the printhead.

## Step 4

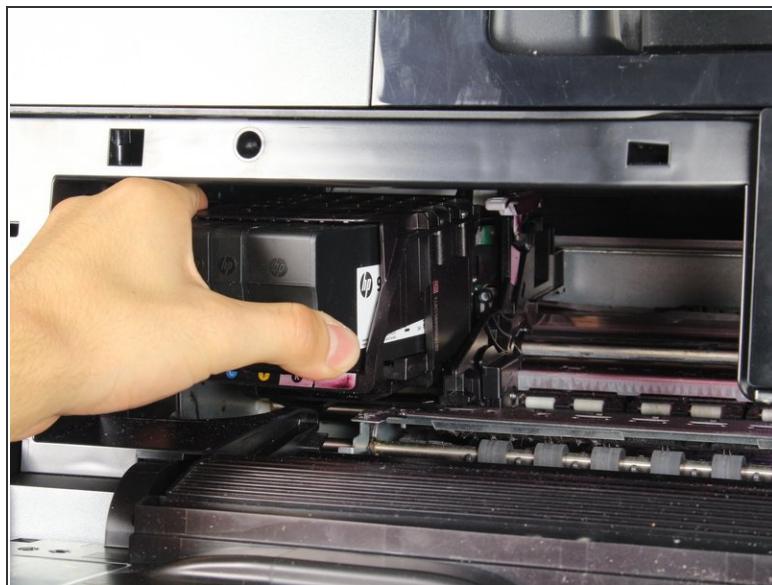

- Gently pull out the printer head.

To reassemble your device, follow these instructions in reverse order.