




HP Omni 10 Speaker Replacement

This guide will show how to remove and replace HP Omni 10 speakers.

Written By: Alex Miller

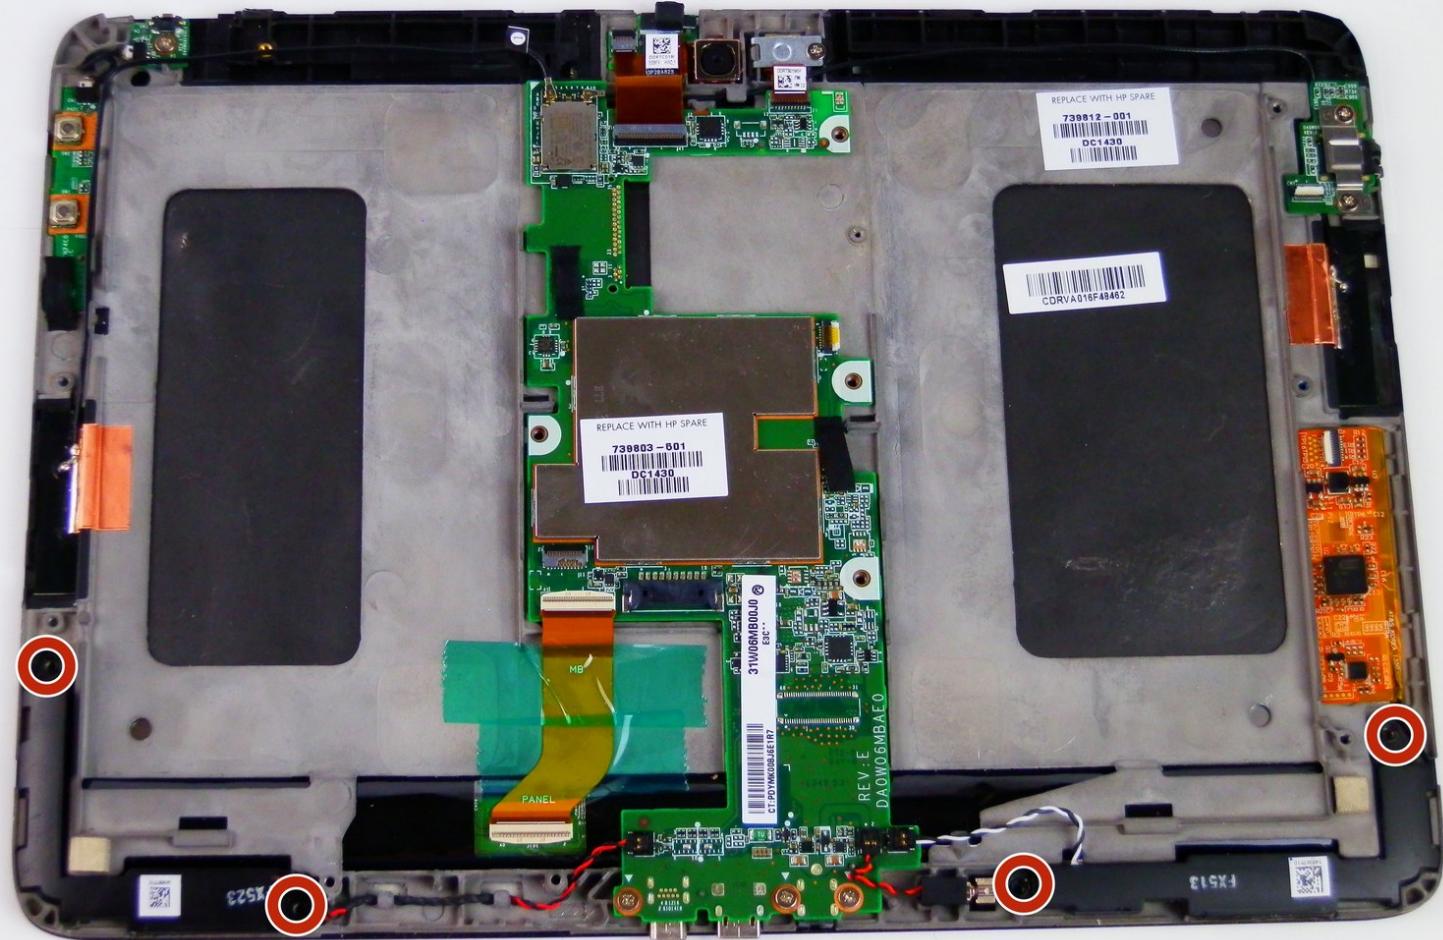

INTRODUCTION

Using a spudger and a 00 Phillips head screwdriver, this guide will show how to remove a pair of speakers from an HP Omni 10 tablet in roughly 5 to 7 minutes.

TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)


Step 1 — Battery



- Remove the back cover from the tablet.

(i) The cover is securely fastened to the device and may be difficult to remove.

Step 2

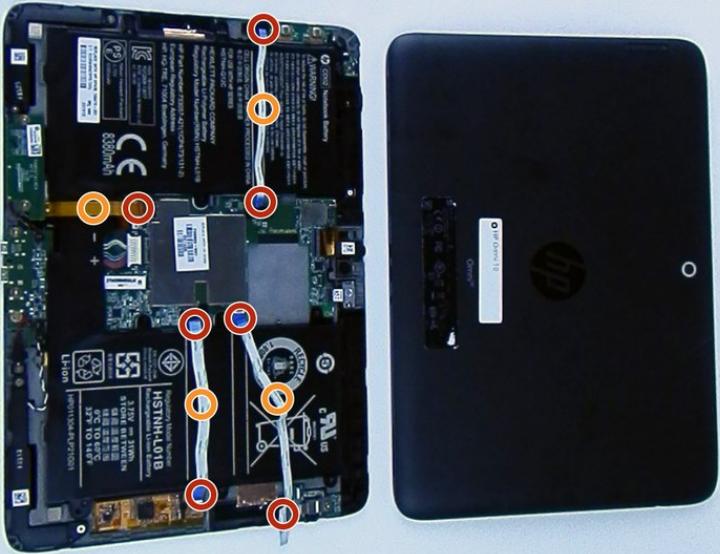

- Push the black plastic security flaps into an upward position.

- Lift the small tab on the security strips up and peel them across the battery. They will be attached via adhesive.

- Lift the tab on the strip up and pull it across the battery.

(i) The orange strip does not fully detach from the tablet like the other three. It will only detach from one side.

Step 3




- Unscrew the ten 3.3 mm screws securing the battery using a 00 Phillip's head screwdriver.

Step 4



- Unhook the cord from the edge of the battery.
- Pull the wire circuit out and down.

Step 5

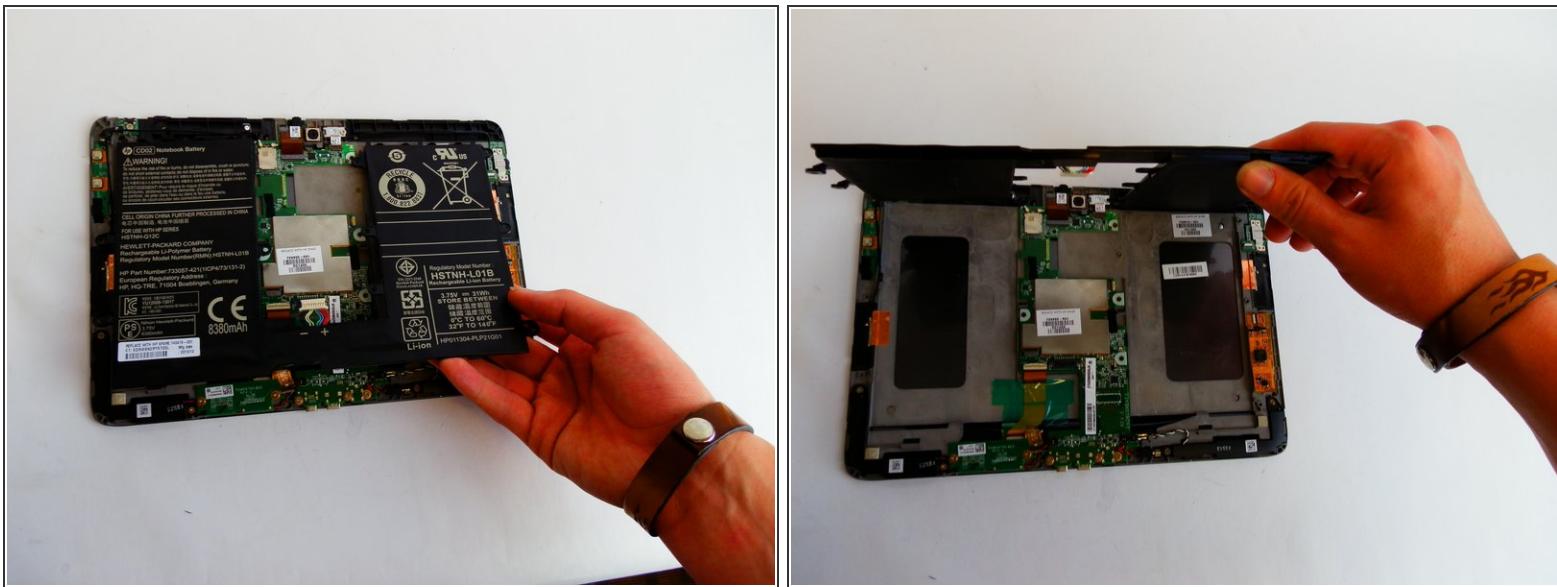


- Lift the battery up by its edges and remove it carefully. There will be adhesive holding the battery down.

Step 6 — Micro Card Reader




- Unscrew the two 3.3 mm screws using a 00 Phillip's head screwdriver.

Step 7

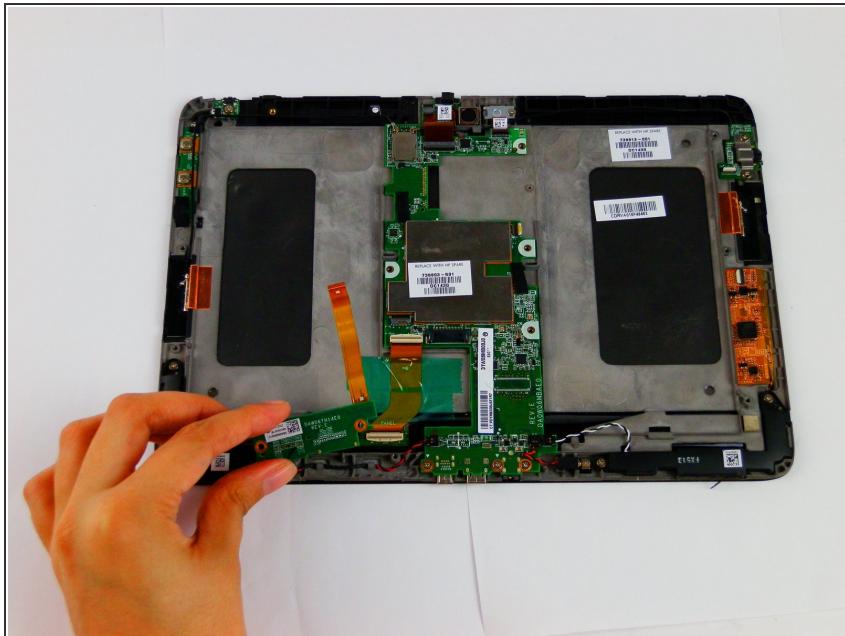


- Lift and remove micro card reader board.

Step 8 — Speaker

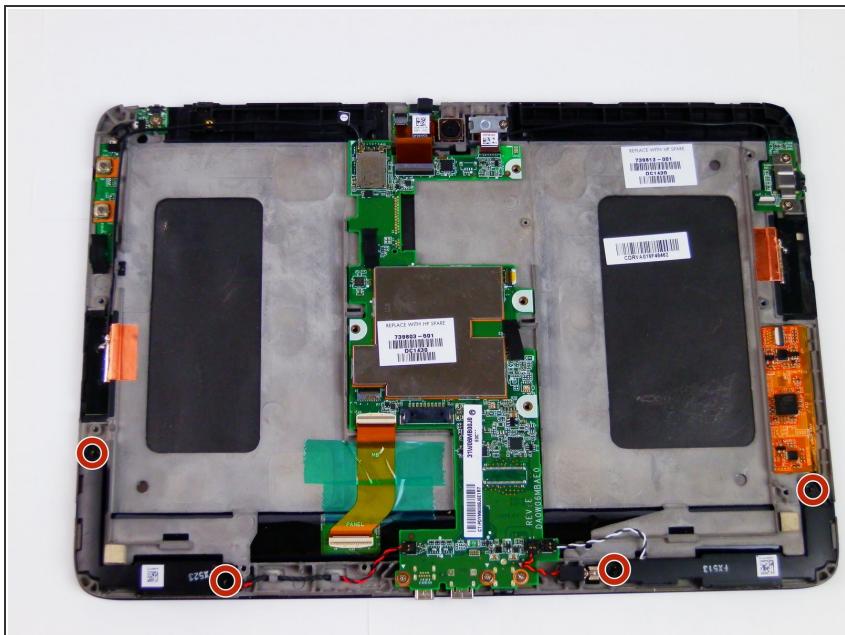


- Unscrew the four 3.3 mm screws using a 00 Phillip's head screwdriver.

Step 9

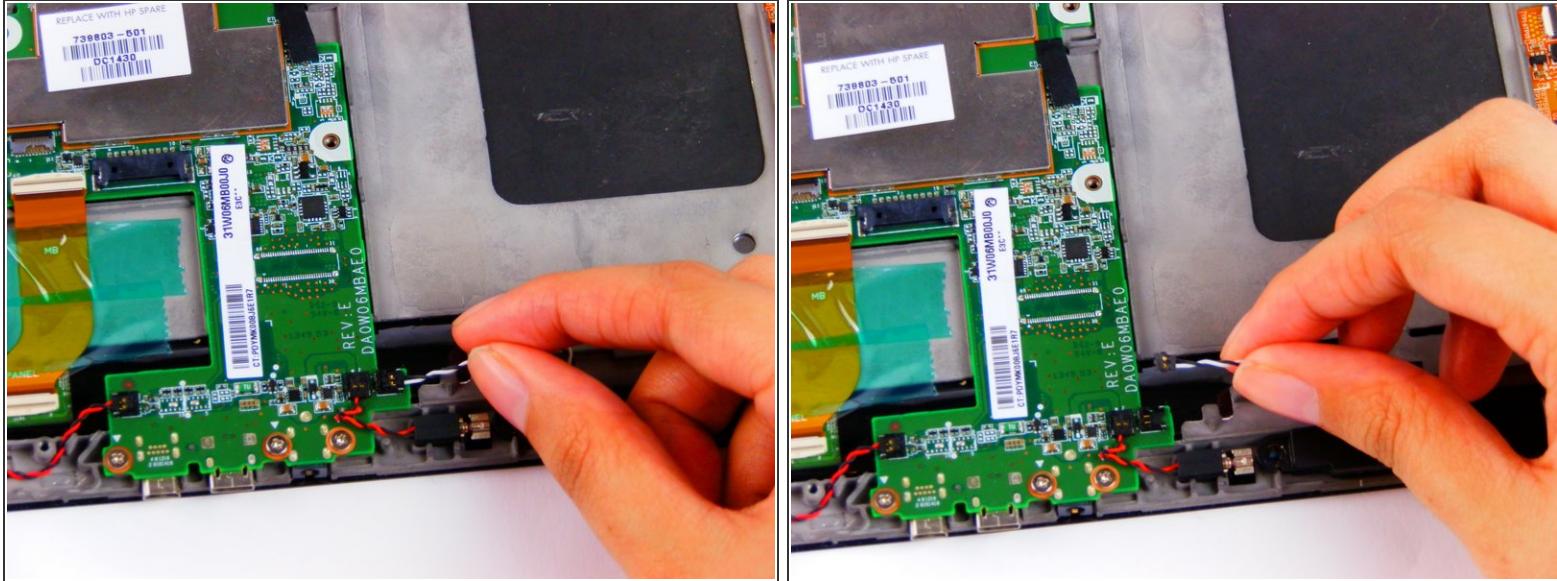


- Pull the black and white wire connector up to disconnect it.

Step 10

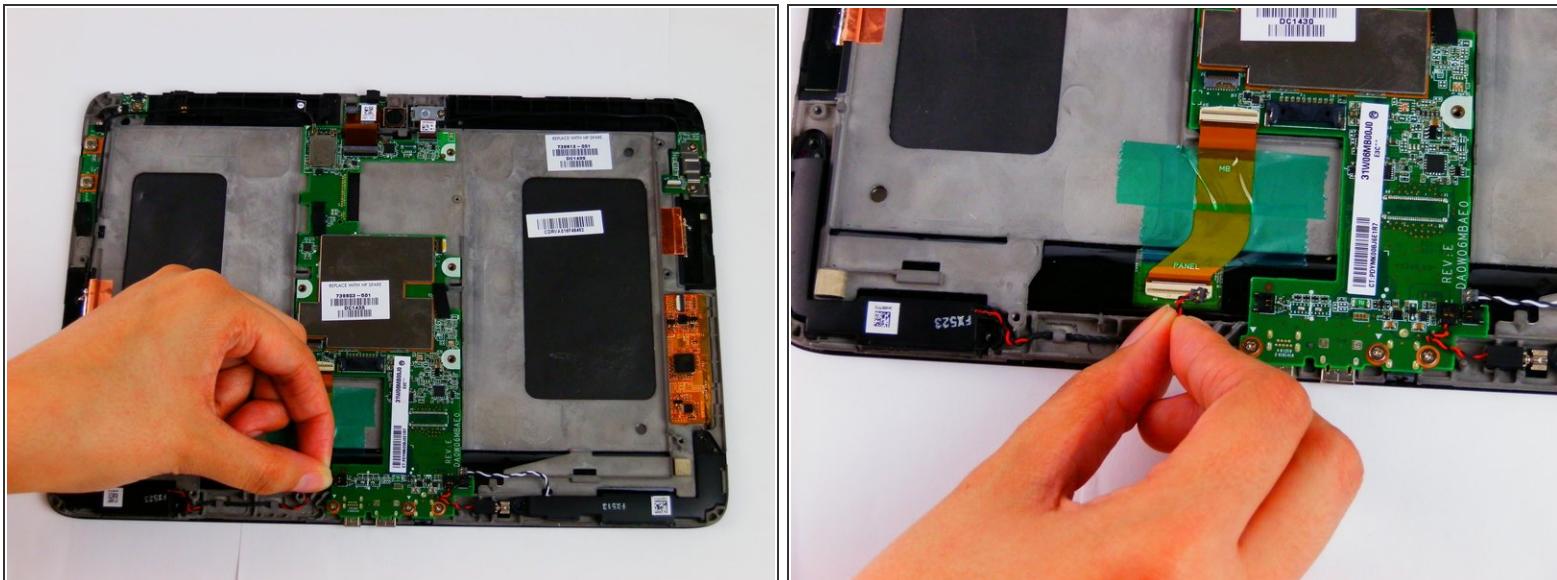

- Pull the red and black wire connector up to disconnect it.


Step 11

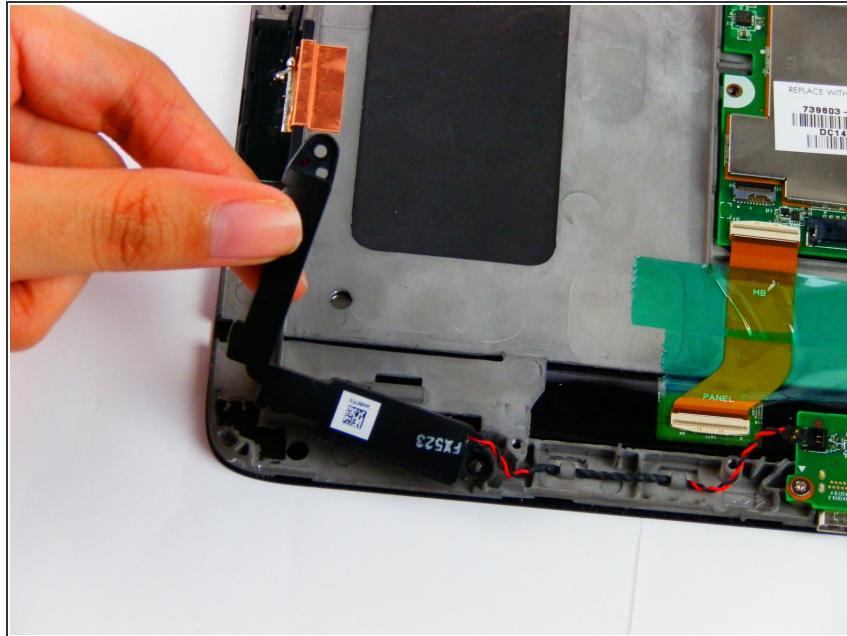

- Lift the speaker set out of their sockets.

(i) The speakers will also be attached via adhesive. They may be difficult to remove by hand.

Step 12

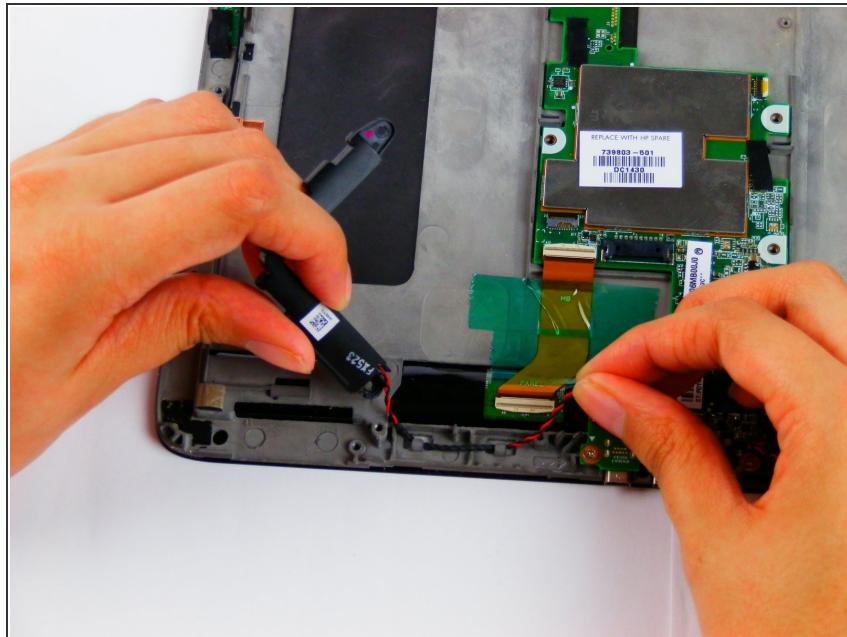

- Unhook the left speaker's connector wire to fully remove it from the device.

To reassemble your device, follow these instructions in reverse order.